


Electric Motor Running Test Lamp

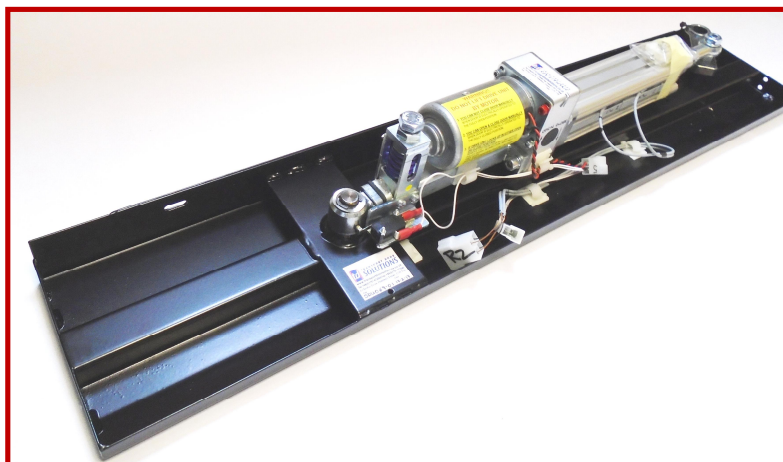

ELECTRIC MOTOR TEST LAMP

Lamp will only **illuminate** when motor is running in either direction.

Push bullet connectors into the back of motor No.5 Plug rec housing as shown to position motor STOP proximity switches.

ELECTRIC MOTOR TEST LAMP

Lamp will only **illuminate** when motor is running in either direction.

Push bullet connectors into the back of motor No.5 Plug rec housing as shown to position motor STOP proximity switches.

