

TDS PRODUCT IMAGE SHEET – CATEGORY >

FABRICATED/PLATES

Image	TDS Part Number & Description	OE & Alternative Part References (WHERE FITTED)
	<p>ATF1-###-## WIDTH – SEAL (mm) BOTTOM ACTIVE FLAP ASSYS EXAMPLE > ATF1-598-35</p>	<p>ATF1-###-## TDS (ALL TDS GLIDER DOORS, SIZE DOOR SPECIFIC)</p>
	<p>L500-14 LOWER TAPPED BLOCK (EPSILON BOTTOM PANEL)</p>	<p>L500-14 TDS</p>
	<p>L500-40 HANDRAIL LOCKING NUT</p>	<p>L500-40 TDS</p>
	<p>L500-43 TRIPLE OFFSET TAP BLOCK</p>	<p>L500-43 TDS</p>
	<p>L500-51-116 L500-51-192 L500-51-252 L500-52-270 L500-51-316 IG DOORSHAFT SLIDE PLATE</p>	<p>L500-51-116 TDS L500-51-192 TDS L500-51-252 TDS L500-52-270 TDS L500-51-316 TDS</p>

	<p>L500-57 ACTIVE FLAP HINGE</p>	<p>L500-57 TDS</p>
	<p>L500-58 HINGE PIN</p>	<p>L500-58 TDS</p>
	<p>PLT001A VALVE MOUNT PLATE</p>	<p>PLT001A TDS</p>

	<p>PLT002A IG DOUBLE TAPPED PLATE</p>	<p>201352 Peters</p>
	<p>PLT003A IG SPH BEARING PLATE</p>	<p>215554 Peters</p>
	<p>PLT006 SOLO BUTTON MOUNT PLATE</p>	<p>PLT006 TDS</p>

	<p>PLT007 LOCK GUARD PLATE</p>	<p>PLT007 TDS</p>
	<p>PLT008 MOTOR MOUNTING PLATE (EDRIVE)</p>	<p>PLT008 TDS</p>
	<p>PLT009 DRIVE INTERFACE PLATE (EDRIVE)</p>	<p>PLT009 TDS</p>
	<p>PLT017 IG ANTI RATTLE PLATE</p>	<p>PLT017 TDS 118438 Peters</p>
	<p>PLT028 MOUNT PLATE FOR CONTROL KITS</p>	<p>PLT028 TDS</p>
	<p>PLT029 MOUNT PLATE FOR PCB/CONTROLS</p>	<p>213624 Peters</p>
	<p>PLT035 RUBBER FLAP RETAINER</p>	<p>PLT035 TDS</p>

	PLT041 IG BEARING PLATE	217113 PDS
	PLT041+BRG023B BEARING PLATE + 25 SPH ASSY	217113+216751 PDS
	PLT041+ASY031 BEARING PLATE + BRG ASSY	217113 +205580/205590 PDS
	PLT043 IG CYLINDER MICROSWITCH PLATE	028048 Deans
	PLT053 PS GUIDE RAIL - DEANS	H102615 Deans
	PLT063 PS GUIDE CHANNEL COVER	H101668 Deans
	PLT100B IG SEAL RETAINING PLATE 2200x20 BLACK PLT100-1340 IG SEAL RETAINING PLATE 1340x20 BLACK	Retainer for Seals > 026414 Deans 215575 Peters + Other similar applications



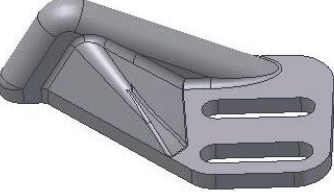

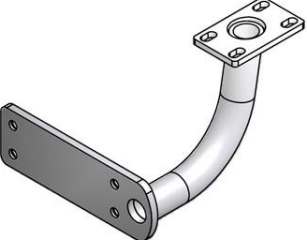
	<p>PP004-CH IGE CLUTCH PIN # SEE ASY200T-01</p>	<p>PP004-CH TDS</p>
	<p>PP005-CH IGE CLUTCH SLIDE ARM # SEE ASY200T-01</p>	<p>PP005-CH TDS</p>
	<p>ROD002-290-01 M12 x 360CTRS SPH LINK ROD ASSY KIT # OTHER SIZE/RODEND OPTIONS AVAILABLE</p>	<p>ROD002-290-01 TDS</p>
	<p>SPL015A M12x64x12.7dia DR-GUIDE SPINDLE See ASY032T for assy</p>	<p>022648 Overton SPL015A TDS</p>
	<p>SPL021A SPINDLE PLATE ASSY</p>	<p>SPL021A TDS</p>
	<p>SPL023 DOOR GUIDE SPINDLE LONG 16x97L</p>	<p>026426 Deans</p>
	<p>SPL024 DOOR GUIDE SPINDLE SHORT 16x71L</p>	<p>026425 Deans</p>
 <p>B306</p>	<p>B306 DOOR SEAT PLATE</p>	<p>B306 Ventura</p>





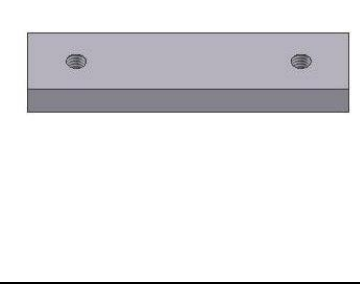


	<p>B390 PS MOUNT PLATE M3 #A368 MSWITCH</p>	<p>B390 <i>Ventura</i> WRIGHTBUS PS2</p>
	<p>B750-372 VERTICAL DOOR PROFILE PS ELC</p>	<p>B750-372 <i>Ventura</i></p>
	<p>C130 IG TAPPING STRIP 2xM8</p>	<p>C130 <i>Ventura</i></p>
	<p>C215 LEVER SHAFT LEFT</p>	<p>C215 <i>Ventura</i></p>
	<p>C592 CATERPILLAR CABLE SUPPORT</p>	<p>C592 <i>Ventura</i></p>
	<p>C924 PS CATCH PIN</p>	<p>C924 <i>Ventura</i> WRIGHTBUS GEMINI DD PS (OLDER)</p>
	<p>D102 PS CAM ROLLER BRACKET</p>	<p>D102 <i>Ventura</i></p>

	<p>D538 THREAD BLOCK 2xM12</p>	<p>D538 <i>Ventura</i></p>
	<p>D545 PS CATCH PIN PLATE LH # CATCH BLOCK = D803</p>	<p>D545 <i>Ventura</i> WRIGHTBUS GEMINI DD PS (OLDER)</p>
	<p>D546 PS CATCH PIN PLATE RH # CATCH BLOCK = D803</p>	<p>D546 <i>Ventura</i> WRIGHTBUS GEMINI DD PS (OLDER)</p>
	<p>D548 ENDPLATE LH</p>	<p>D548 <i>Ventura</i></p>
	<p>D549 ENDPLATE RH</p>	<p>D549 <i>Ventura</i></p>
	<p>E089 PLATE</p>	<p>E089 <i>Ventura</i></p>
	<p>E096 PS CATCH PIN PLATE RH # CATCH BLOCK = D803</p>	<p>E096 <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS + GEMINI DD PS (LATER) + STREETCAR PS, ADL E200 SD PS + E400 DD PS, EAST LANCS SD PS + OLYMPUS DD IG3/PS, MCV SD EVOLUTION PS, POLISH SCANIA OMNICITY DD IG3/PS, EAST LANCS</p>

	<p>E097 PS CATCH PIN PLATE LH # CATCH BLOCK = D803</p>	<p>Olympus DD IG3 E097 <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS + GEMINI DD PS (LATER) + STREETCAR PS, ADL E200 SD PS + E400 DD PS, EAST LANCS SD PS + OLYMPUS DD IG3/PS, MCV SD EVOLUTION PS, POLISH SCANIA OMNICITY DD IG3/PS, EAST LANCS Olympus DD IG3</p>
	<p>E508 END PLATE LEFT WELD ASSY</p>	<p>E508 <i>Ventura</i></p>
	<p>G955 IG SUSPENSION PLATE</p>	<p>G955 <i>Ventura</i></p>
	<p>G967 SUPPORT PLATE</p>	<p>G967 <i>Ventura</i></p>
	<p>H047 IG3 DOORSHAFT HEIGHT ADJUSTER</p>	<p>H047 <i>Ventura</i></p>
	<p>H132 POTENTIOMETER PLATE</p>	<p>H132 <i>Ventura</i></p>
	<p>H404 FLAP FRAME HIGH WELD ASSY 1290 LEFT</p>	<p>H404 <i>Ventura</i></p>

	<p align="center">H460 FLAP FRAME HIGH WELD ASSY 1290 RIGHT</p>	<p align="center">H460 <i>Ventura</i></p>
	<p align="center">H469 SHAFT IG3 CYLINDER Ø12</p>	<p align="center">H469 <i>Ventura</i></p>
	<p align="center">H502 IG3 GUIDING BRACKET LH</p>	<p align="center">H502 <i>Ventura</i></p>
	<p align="center">H508 IG3 GUIDING BRACKET RH</p>	<p align="center">H508 <i>Ventura</i></p>
	<p align="center">H549 DOOR ARM LEFT PS EASTLANCS SD</p>	<p align="center">H549 <i>Ventura</i></p>
	<p align="center">H550 DOOR ARM RIGHT PSP EASTLANCS SD</p>	<p align="center">H550 <i>Ventura</i></p>
	<p align="center">H685 HANDRAIL END PIECE</p>	<p align="center">H685 <i>Ventura</i></p>

	<p>H714 IG SLIDE PLATE LH</p>	<p>H714 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E300 SD IG3, EAST LANCS SD IG3 + OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3 , TEMSA SD IG4</p>
	<p>H793 IG SLIDE PLATE RH</p>	<p>H793 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E300 SD IG3, EAST LANCS SD IG3 + OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3 , TEMSA SD IG4</p>
	<p>I275 PS CATCH WEDGE LH # CATCH BLOCK = J405</p>	<p>I275 <i>Ventura</i> ADL E200 (MAY11-DEC12)</p>
	<p>I276 PS CATCH WEDGE RH # CATCH BLOCK = J405</p>	<p>I276 <i>Ventura</i> ADL E200 (MAY11-DEC12)</p>
	<p>I366 PS DOOR ARM LH (ADL)</p>	<p>I366 <i>Ventura</i></p>
	<p>I367 PS DOOR ARM RH (ADL)</p>	<p>I367 <i>Ventura</i></p>
	<p>I500 PS CONTROL PLATE</p>	<p>I500 <i>Ventura</i></p>

 <p>I825 - 1700mm</p>	<p>I825 PORTAL SIDE STRIP ADL 1700L</p>	<p>I825 <i>Ventura</i></p>
	<p>I995 IG SLIDE PLATE LEFT EXTENDED</p>	<p>I995 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + STREETLITE SD IG4 + NBFL IG4/IG4 PLAT, ADL E300 SD IG4 + E400 DD IG4, OPTARE SD TEMPO PS, MCV SD 112/124RLE IG4, MCV DD EVOSETI IG4</p>
	<p>I996 IG SLIDE PLATE RIGHT EXTENDED</p>	<p>I996 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + STREETLITE SD IG4 + NBFL IG4/IG4 PLAT, ADL E300 SD IG4 + E400 DD IG4, OPTARE SD TEMPO PS, MCV SD 112/124RLE IG4, MCV DD EVOSETI IG4</p>
 <p>J593</p>	<p>J593 LEVER BLOCK</p>	<p>J593 <i>Ventura</i> MID PS / REAR RS</p>
	<p>J597 PS MOUNT PLATE M3 (L312 MSWITCH)</p>	<p>J597 <i>Ventura</i></p>
	<p>K522 IG SLIDE PLATE LEFT</p>	<p>K522 <i>Ventura</i> MCV SD 112/124RLE IG4</p>
	<p>K523 IG SLIDE PLATE RIGHT</p>	<p>K523 <i>Ventura</i> MCV SD 112/124RLE IG4</p>

	<p>L737 IG4 FLAP FRAME SIDE PLATE</p>	<p>L737 <i>Ventura</i></p>
	<p>L778 FLAP BRACKET IG4</p>	<p>L778 <i>Ventura</i></p>
	<p>L846-001 (530mm) L846-002 (560mm) L846-003 (509mm) L846-004 (484mm) L846-005 (410mm) IG4 FLAP ASSEMBLY LH view from inside</p> <p># BEARING BUSH = L745</p>	<p>L846-001 <i>Ventura</i> L846-002 <i>Ventura</i> L846-003 <i>Ventura</i> L846-004 <i>Ventura</i> L846-005 <i>Ventura</i> IG4 DOORS</p> <p># = LENGTH CODE, SPECIFIC TO EACH VEHICLE > ADL, MCV, WRIGHTBUS</p>
	<p>L865-001 (530mm) L865-002 (560mm) L865-003 (509mm) L865-004 (484mm) L865-005 (765mm) IG4 FLAP ASSEMBLY RH Viewed from inside</p> <p># BEARING BUSH = L745</p>	<p>L865-001 <i>Ventura</i> L865-002 <i>Ventura</i> L865-003 <i>Ventura</i> L865-004 <i>Ventura</i> L865-005 <i>Ventura</i> IG4 DOORS</p> <p># = LENGTH CODE, SPECIFIC TO EACH VEHICLE > ADL, MCV, WRIGHTBUS</p>
	<p>M478 PORTAL STRIP RS 1100 BLUEBIRD</p>	<p>M478 <i>Ventura</i></p>

	<p>M756 CONNECTOR BRACKET 22 POLE</p>	<p>M756 <i>Ventura</i> WRIGHTBUS PS2</p>
	<p>M918 IG SLIDE PLATE LH SMALL</p>	<p>M918 <i>Ventura</i> ADL E200 SD IG4</p>
	<p>M919 IG SLIDE PLATE RH SMALL</p>	<p>M919 <i>Ventura</i> ADL E200 SD IG4</p>
	<p>N427 PIVOT PINT PLATE</p>	<p>N427 <i>Ventura</i> WBUS NBFL</p>
	<p>O281 PS2 CATCH WEDGE LH # CATCH BLOCK = P261</p>	<p>O281 <i>Ventura</i> ADL E200 (JAN13 >) WRIGHTBUS STREETLITE & NBFL, MCV DD EVOSETI DD</p>

	<p>O282 PS2 CATCH WEDGE RH # CATCH BLOCK = P261</p>	<p>O282 <i>Ventura</i> ADL E200 (JAN13>) WRIGHTBUS STREETLITE & NBFL, MCV DD EVOSETI DD</p>
	<p>O664 IG4 ADAPTER SLIDE PLATE (NBFL)</p>	<p>O664 <i>Ventura</i></p>
	<p>P840 TAPPING PLATE M5</p>	<p>P840 <i>Ventura</i> WRIGHTBUS IG4</p>
	<p>Q913 POM BLOCK BENDED DOOR</p>	<p>G419 <i>Ventura</i> WRIGHTBUS NBFL</p>
	<p>S851 PS DOOR ARM LH</p>	<p>S851 <i>Ventura</i> WRIGHTBUS PS2</p>
	<p>S852 PS DOOR ARM RH</p>	<p>S852 <i>Ventura</i> WRIGHTBUS PS2</p>

	<p>S930 CYLINDER BRACKET</p>	<p>S930 <i>Ventura</i></p>
	<p>S933 SIDE PLATE L</p>	<p>S933 <i>Ventura</i> WRIGHTBUS PS2</p>
	<p>S986 PS CYLINDER EXTENSION</p>	<p>S986 <i>Ventura</i></p>
	<p>U537 BOTTOM SUPPORT L100 TOGGLENUTS</p>	<p>U537 <i>Ventura</i></p>
	<p>U538 BOTTOM SUPPORT R100 TOGGLENUTS</p>	<p>U538 <i>Ventura</i></p>
	<p>VA0203 LH END PIECE</p>	<p>VA0203 <i>Ventura</i></p>

	<p>VA0204 RH END PIECE</p>	<p>VA0204 <i>Ventura</i></p>
	<p>VA0912 PSE ROLLER BRACKET</p>	<p>VA0912 <i>Ventura</i></p>
	<p>VA1109 PSE SPINDLE NUT MOUNT PLATE</p>	<p>VA1109 <i>Ventura</i></p>
	<p>VA2343 IG4 PORTAL PROFILE LH (P072) VA2344 IG4 PORTAL PROFILE LH (P072)</p>	<p>VA2343,VA2344 <i>Ventura</i></p>
	<p>VA3038 SWITCH PLATE ASSY</p>	<p>VA3038 <i>Ventura</i></p>
	<p>V4286 PORTAL SEAL 1290 STRIP MOUNT</p>	<p>VA4286 <i>Ventura</i></p>

	<p>VA7473 COVER CENTRE WB</p>	<p>VA7473 <i>Ventura</i></p>
	<p>VA8529 PSE PLATE SPINDLE NUT</p>	<p>VA8529 <i>Ventura</i></p>
	<p>VA9729 RS BEARING HOUSING ASSY</p>	<p>VA9729 <i>Ventura</i></p>
	<p>VB2533 LH END PIECE</p>	<p>VB2533 <i>Ventura</i></p>
	<p>VB2568 RH END PIECE</p>	<p>VB2568 <i>Ventura</i></p>