

TDS PRODUCT IMAGE SHEET – CATEGORY > FABRICATED/PLATES

Image	TDS Part Number & Description	OE & Alternative Part References (WHERE FITTED)
	<p>L500-14 LOWER TAPPED BLOCK (EPSILON BOTTOM PANEL)</p>	<p>L500-14 TDS</p>
	<p>L500-40 HANDRAIL LOCKING NUT</p>	<p>L500-40 TDS</p>
	<p>L500-43 TRIPLE OFFSET TAP BLOCK</p>	<p>L500-43 TDS</p>
	<p>L500-57 ACTIVE FLAP HINGE</p>	<p>L500-57 TDS</p>
	<p>L500-58 HINGE PIN</p>	<p>L500-58 TDS</p>
	<p>PLT001A VALVE MOUNT PLATE</p>	<p>PLT001A TDS</p>

	<p>PLT002A DOUBLE TAPPED PLATE</p>	<p>201352 <i>Peters</i></p>
	<p>PLT003A SPH BEARING PLATE</p>	<p>215554 <i>Peters</i></p>
	<p>PLT006 SOLO BUTTON MOUNT PLATE</p>	<p>PLT006 <i>TDS</i></p>
	<p>PLT007 LOCK GUARD PLATE</p>	<p>PLT007 <i>TDS</i></p>
	<p>PLT008 MOTOR MOUNTING PLATE (EDRIVE)</p>	<p>PLT008 <i>TDS</i></p>
	<p>PLT009 DRIVE INTERFACE PLATE (EDRIVE)</p>	<p>PLT009 <i>TDS</i></p>

	<p>PLT017 ANTI RATTLE PLATE</p>	<p>PLT017 TDS 118438 Peters</p>
	<p>PLT028 MOUNT PLATE FOR CONTROL KITS</p>	<p>PLT028 TDS</p>
	<p>PLT029 MOUNT PLATE FOR PCB/CONTROLS</p>	<p>213624 Peters</p>
	<p>PLT035 RUBBER FLAP RETAINER</p>	<p>PLT035 TDS</p>
	<p>PLT041 BEARING PLATE</p>	<p>217113 PDS</p>
	<p>PLT041+BRG023B BEARING PLATE + 25 SPH ASSY</p>	<p>217113+216751 PDS</p>
	<p>PLT041+ASY031 BEARING PLATE + BRG ASSY</p>	<p>217113 +205580/205590 PDS</p>

	<p align="center">PLT043 CYLINDER MICROSWITCH PLATE</p>	<p align="center">028048 <i>Deans</i></p>
	<p align="center">PLT053 PS GUIDE RAIL - DEANS</p>	<p align="center">H102615 <i>Deans</i></p>
	<p align="center">PLT063 PS GUIDE CHANNEL COVER</p>	<p align="center">H101668 <i>Deans</i></p>
	<p align="center">PLT100B SEAL RETAINING PLATE 2200x20 BLACK</p> <p># ALSO AVAILABLE 1340L</p>	<p align="center">PLT100B <i>TDS</i> PLT100-1340 <i>TDS</i></p>
	<p align="center">PP004-CH CLUTCH PIN (PART OF ASY201T)</p>	<p align="center">PP004-CH <i>TDS</i></p>
	<p align="center">PP005-CH CLUTCH SLIDE ARM (PART OF ASY201T)</p> <p># SEE ASY200T-01</p>	<p align="center">PP005-CH <i>TDS</i></p>
	<p align="center">ROD002-290-01 M12 x 360CTRS SPH LINK ROD ASSY KIT</p> <p># OTHER SIZE/RODEND OPTIONS AVAILABLE</p>	<p align="center">ROD002-290-01 <i>TDS</i></p>

	<p>SPA027 ALUM M8 SPACER</p>	<p>H101626 <i>Deans</i></p>
	<p>SPA029 REAR MOUNTING SPACER COLLAR</p>	<p>214666 <i>Peters</i></p>
	<p>SPA030-45 M8x45 M-F SPACER</p>	<p>215705 <i>Peters</i></p>
	<p>SPL015A M12x64x12.7dia DR-GUIDE SPINDLE <i>See ASY032T for assy</i></p>	<p>(022648) <i>Overton</i> SPL015A <i>TDS</i></p>
	<p>SPL021A SPINDLE PLATE ASSY</p>	<p>SPL021A <i>TDS</i></p>
	<p>SPL023 DEANS 16DIA DR/GUIDE SPINDLE LONG</p>	<p>026426 <i>Deans</i></p>
	<p>SPL024 DEANS 16DIA DR/GUIDE SPINDLE SHORT</p>	<p>026425 <i>Deans</i></p>

	<p>B306 DOOR SEAT PLATE</p>	<p>B306 <i>Ventura</i></p>
	<p>B390 TAPPING PLATE M3 HARTMAN</p>	<p>B390 <i>Ventura</i> WRIGHTBUS PS2</p>
	<p>B470 SWITCH CAM SHAFT 15</p>	<p>B470 <i>Ventura</i></p>
	<p>B750-372 VERTICAL DOOR PROFILE PS ELC</p>	<p>B750-372 <i>Ventura</i></p>
	<p>C130 TAPPING STRIP 2xM8</p>	<p>C130 <i>Ventura</i></p>
	<p>C215 LEVER SHAFT LEFT</p>	<p>C215 <i>Ventura</i></p>
	<p>C592 CATERPILLAR CABLE SUPPORT</p>	<p>C592 <i>Ventura</i></p>


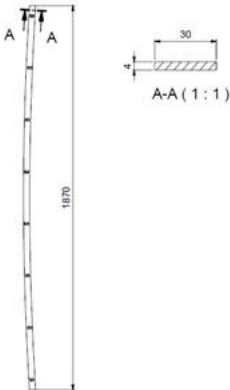



	<p>C924 CATCH PIN</p>	<p>C924 <i>Ventura</i> WRIGHTBUS GEMINI DD PS (OLDER)</p>
	<p>D545 CATCH PIN ON PLATE LEFT (CATCH BLOCK = D803)</p>	<p>D545 <i>Ventura</i> WRIGHTBUS GEMINI DD PS (OLDER)</p>
	<p>D546 CATCH PIN ON PLATE RIGHT (CATCH BLOCK = D803)</p>	<p>D546 <i>Ventura</i> WRIGHTBUS GEMINI DD PS (OLDER)</p>
	<p>D548 ENDPLATE LH</p>	<p>D548 <i>Ventura</i></p>
	<p>D549 ENDPLATE RH</p>	<p>D549 <i>Ventura</i></p>
	<p>E089 PLATE</p>	<p>E089 <i>Ventura</i></p>
	<p>E096 CATCH PIN RIGHT (PS) (CATCH BLOCK = D803)</p>	<p>E096 <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS + GEMINI DD PS (LATER) + STREETCAR PS, ADL E200 SD PS + E400 DD PS, EAST LANCS SD PS + OLYMPUS DD IG3/PS, MCV SD EVOLUTION PS, POLISH SCANIA OMNICITY DD IG3/PS, EAST LANCS Olympus DD IG3</p>

	<p>E097 CATCH PIN LEFT (PS) (CATCH BLOCK = D803)</p>	<p>E097 <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS + GEMINI DD PS (LATER) + STREETCAR PS, ADL E200 SD PS + E400 DD PS, EAST LANCS SD PS + OLYMPUS DD IG3/PS, MCV SD EVOLUTION PS, POLISH SCANIA OMNICITY DD IG3/PS, EAST LANCS Olympus DD IG3</p>
	<p>E508 END PLATE LEFT WELD ASSY</p>	<p>E508 <i>Ventura</i></p>
	<p>G955 PIVOT PLATE (IGP)</p>	<p>G955 <i>Ventura</i></p>
	<p>G967 SUPPORT PLATE</p>	<p>G967 <i>Ventura</i></p>
	<p>H047 SHAFT FOR IGP HEIGHT ADJUST</p>	<p>H047 <i>Ventura</i></p>
	<p>H132 POTENTIOMETER PLATE</p>	<p>H132 <i>Ventura</i></p>
	<p>H404 FLAP FRAME HIGH WELD ASSY 1290 LEFT</p>	<p>H404 <i>Ventura</i></p>

	<p align="center">H460 FLAP FRAME HIGH WELD ASSY 1290 RIGHT</p>	<p align="center">H460 <i>Ventura</i></p>
	<p align="center">H469 SHAFT IG3 CYLINDER Ø12</p>	<p align="center">H469 <i>Ventura</i></p>
	<p align="center">H549 DOOR ARM LEFT PS EASTLANCS SD</p>	<p align="center">H549 <i>Ventura</i></p>
	<p align="center">H550 DOOR ARM RIGHT PSP EASTLANCS SD</p>	<p align="center">H550 <i>Ventura</i></p>
	<p align="center">H714 SLIDE PLATE POM LEFT</p>	<p align="center">H714 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E300 SD IG3, EAST LANCS SD IG3 + OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3 , TEMSA SD IG4</p>
	<p align="center">H793 SLIDE PLATE POM RIGHT</p>	<p align="center">H793 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E300 SD IG3, EAST LANCS SD IG3 + OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3 , TEMSA SD IG4</p>
	<p align="center">I275 CATCH WEDGE PS LH (CATCH BLOCK =J405)</p>	<p align="center">I275 <i>Ventura</i> ADL E200 (MAY11-DEC12)</p>

	<p>I276 CATCH WEDGE PS RH (CATCH BLOCK =J405)</p>	<p>I276 <i>Ventura</i> ADL E200 (MAY11-DEC12)</p>
	<p>I366 DOOR ARM LEFT PSP ADL DD</p>	<p>I366 <i>Ventura</i></p>
	<p>I367 DOOR ARM RIGHT ADL DD</p>	<p>I367 <i>Ventura</i></p>
	<p>I500 CONTROL PLATE (REV 8)</p>	<p>I500 <i>Ventura</i></p>
	<p>I825 PORTAL SIDE STRIP ADL 1700L</p>	<p>I825 <i>Ventura</i></p>
	<p>I995 SLIDE PLATE LEFT EXTENDED</p>	<p>I995 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + STREETLITE SD IG4 + NBFL IG4/IG4 PLAT, ADL E300 SD IG4 + E400 DD IG4, OPTARE SD TEMPO PS, MCV SD 112/124RLE IG4, MCV DD EVOSETI IG4</p>

	<p>I996 SLIDE PLATE RIGHT EXTENDED</p>	<p>I996 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + STREETLITE SD IG4 + NBFL IG4/IG4 PLAT, ADL E300 SD IG4 + E400 DD IG4, OPTARE SD TEMPO PS, MCV SD 112/124RLE IG4, MCV DD EVOSETI IG4</p>
	<p>K522 SLIDE PLATE LEFT</p>	<p>K522 <i>Ventura</i> MCV SD 112/124RLE IG4</p>
	<p>K523 SLIDE PLATE RIGHT</p>	<p>K523 <i>Ventura</i> MCV SD 112/124RLE IG4</p>
	<p>L737 IG4 FLAP FRAME SIDE PLATE</p>	<p>L737 <i>Ventura</i></p>
	<p>L778 FLAP BRACKET IG4</p>	<p>L778 <i>Ventura</i></p>
	<p>L846-001 (530mm) L846-002 (560mm) L846-003 (509mm) L846-004 (484mm) L846-005 (410mm) IG4 FLAP ASSEMBLY LH</p> <p># BEARING BUSH = L745</p>	<p>L846-001 <i>Ventura</i> L846-002 <i>Ventura</i> L846-003 <i>Ventura</i> L846-004 <i>Ventura</i> L846-005 <i>Ventura</i> IG4 DOORS</p> <p># = LENGTH CODE, SPECIFIC TO EACH VEHICLE > ADL, MCV, WRIGHTBUS</p>

	<p>L865-001 (530mm) L865-002 (560mm) L865-003 (509mm) L865-004 (484mm) L865-005 (765mm) IG4 FLAP ASSEMBLY RH</p> <p># BEARING BUSH = L745</p>	<p>L865-001 <i>Ventura</i> L865-002 <i>Ventura</i> L865-003 <i>Ventura</i> L865-004 <i>Ventura</i> L865-005 <i>Ventura</i> IG4 DOORS</p> <p># = LENGTH CODE, SPECIFIC TO EACH VEHICLE > ADL,MCV,WRIGHTBUS</p>
	<p>M478 PORTAL STRIP RS 1100 BLUEBIRD</p>	<p>M478 <i>Ventura</i></p>
	<p>M756 CONNECTOR BRACKET 22 POLE</p>	<p>M756 <i>Ventura</i> WRIGHTBUS PS2</p>
	<p>M918 SLIDE PLATE POM LEFT SMALL</p>	<p>M918 <i>Ventura</i> ADL E200 SD IG4</p>
	<p>M919 SLIDE PLATE POM RIGHT SMALL</p>	<p>M919 <i>Ventura</i> ADL E200 SD IG4</p>

	<p>O281 CATCH WEDGE PS LH (CATCH BLOCK = P261)</p>	<p>O281 <i>Ventura</i> ADL E200 (JAN13 >) WRIGHTBUS STREETLITE & NBFL, MCV DD EVOSETI DD</p>
	<p>O282 CATCH WEDGE PS RH (CATCH BLOCK = P261)</p>	<p>O282 <i>Ventura</i> ADL E200 (JAN13 >) WRIGHTBUS STREETLITE & NBFL, MCV DD EVOSETI DD</p>
	<p>P840 TAPPING STRIP 2Xm5</p>	<p>P840 <i>Ventura</i> WRIGHTBUS IG4</p>
	<p>Q913 POM BLOCK BENDED DOOR</p>	<p>G419 <i>Ventura</i> WRIGHTBUS NBFL</p>
	<p>S851 DOORARM LEFT PS</p>	<p>S851 <i>Ventura</i> WRIGHTBUS PS2</p>
	<p>S852 DOORARM RIGHT PS</p>	<p>S852 <i>Ventura</i> WRIGHTBUS PS2</p>

	<p>S933 SIDE PLATE L</p>	<p>S933 <i>Ventura</i> WRIGHTBUS PS2</p>
	<p>VA0203 LH END PIECE</p>	<p>VA0203 <i>Ventura</i></p>
	<p>VA0204 RH END PIECE</p>	<p>VA0204 <i>Ventura</i></p>
	<p>VA3038 SWITCH PLATE ASSY</p>	<p>VA3038 <i>Ventura</i></p>
	<p>V4286 PORTAL SEAL 1290 STRIP MOUNT</p>	<p>VA4286 <i>Ventura</i></p>
	<p>VA7473 COVER CENTRE WB</p>	<p>VA7473 <i>Ventura</i></p>

	<p>VA8529 PLATE SPINDLE NUT</p>	<p>VA8529 <i>Ventura</i></p>
	<p>VA9729 RS BEARING HOUSING ASSY</p>	<p>VA9729 <i>Ventura</i></p>
	<p>VB2533 LH END PIECE</p>	<p>VB2533 <i>Ventura</i></p>
	<p>VB2568 RH END PIECE</p>	<p>VB2568 <i>Ventura</i></p>