

TDS PRODUCT IMAGE SHEET > TDS – DOOR LEAVES & SHAFTS

Image	TDS Part Number & Description	OE Part Number / Where Fitted <i>*Visually check type on your vehicle</i>
	<p>L500-05-ASSY-01 M14 UPPER BEARING BRACKET ASSY</p> <p>SPH BEARING = BRG021B CIRCLIP = CIR001A COVER = CAP001A</p>	<p>L500-05-ASSY-01 (OPTARE + TREKA BUS VEHICLES)</p>
	<p>L500-06-LH DOOR GUIDE BRACKET LEFT</p> <p>GUIDE SPINDLE = ASY004B</p>	<p>L500-06-LH TDS (ALL OPTARE VEHICLES EXCEPT SE)</p>
	<p>L500-06-RH DOOR GUIDE BRACKET RIGHT</p> <p>GUIDE SPINDLE = ASY004B</p>	<p>L500-06-RH TDS (ALL OPTARE VEHICLES EXCEPT SE)</p>
	<p>L500-09-ASSY-01 M14 LOWER BEARING BRACKET ASSY</p> <p>SPH BEARING = BRG021B CIRCLIP = CIR001A COVER = CAP001A</p>	<p>L500-09-ASSY-01 (OPTARE + TREKA BUS VEHICLES)</p>
	<p>BRG021B Ø 14 SPH BEARING RACE O/D=34x13.5</p>	<p>BRG021B TDS (ALL BEARING BRACKET ASSY)</p>

	<p>CIR001A CIRCLIP INTERNAL 1300-34</p>	<p>CIR001A TDS (ALL BEARING BRACKET ASSY)</p>
 <p>CAP001A</p>	<p>CAP001A BEARING COVER CAP</p>	<p>CAP001A TDS (ALL TOP BEARING BRACKET ASSY)</p>
	<p>L500-012 DOOR STOP COLLAR (PAINTED BLACK)</p>	<p>L500-12 TDS</p>
	<p>L500-43 TRIPLE OFFSET TAP BLOCK (UPPER BRG & DOOR GUIDE BRKTS)</p>	<p>L500-43 TDS</p>
 <p>BRK001A</p>	<p>BRK001A BOTTOM STEADY BRACKET</p>	<p>BRK001A TDS (TREKA BUS ENTRANCE DOORS)</p>
 <p>BRK002A</p>	<p>BRK002A DOOR GUIDE BRACKET CRANKED INLINE (GLD)</p>	<p>BRK002A TDS (OPTARE SOLO SE + TREKA DOORS)</p>
	<p>BRK005A DOOR GUIDE BRACKET FLAT OFFSET (FLD)</p>	<p>BRK005A TDS (PPM PEOPLE MOVER)</p>

	<p>BRK007A MICROSWITCH MOUNT BRACKET (V3) (SDU CLUTCH ASSY)</p>	<p>BRK007A TDS (TREKABUS 16)</p>
	<p>BRK008 CABLE END BRACKET</p>	<p>BRK008 TDS (TREKA BUS ENTRANCE DOORS)</p>
	<p>BRK020A DOOR GUIDE BRACKET BLACK FLAT OFFSET FLD</p>	<p>BRK020A TDS (FLD001)</p>
	<p>BRK024 CRANK @ 25 RH HG=25 SLOT CTR=85x55</p>	<p>BRK024 TDS</p>
	<p>BRK025 CRANK @ 25 LH HG=25 SLOT CTR=85x55</p>	<p>BRK025 TDS</p>
	<p>PVT017-ASY M14x2.0 UPPER BEARING PIVOT ASSY SPH RODEND = BRG015B</p>	<p>PVT017-ASY TDS (OPTARE SOLO SE DOORS)</p>

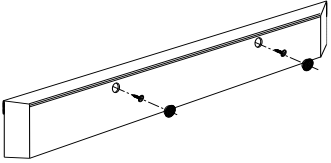
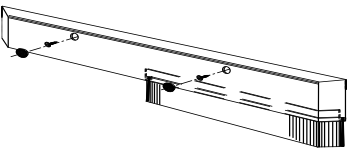
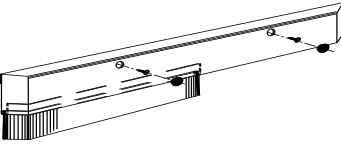




	<p>PVT018-ASY M14x2.0 LOWER BEARING PIVOT ASSY SPH RODEND = BRG015B</p>	<p>PVT018-ASY TDS (OPTARE SOLO SE DOORS)</p>
	<p>BRG015B M14x2.0 RH MALE SPH RODEND (SEE PVT017 & 018-ASY)</p>	<p>BRG015B TDS (OPTARE SOLO SE DOORS)</p>
	<p>ASY006B 25mm INLINE BOTTOM BEARING</p>	<p>ASY006B TDS (OPTARE VERSA + TEMPO, TREKA BUS DOORS)</p>
	<p>ASY009B 25mm INLINE LONG BOTTOM BEARING</p>	<p>ASY009B TDS (OPTARE SOLO SF/SR/FF DOORS)</p>
	<p>ASY003B UNIV GUIDE SPINDLE LONG (FITTED TO BRK002 & 023 DGB)</p>	<p>ASY003B TDS (DENNIS EAGLE DUSTCARTS + TREKA BUS DOORS)</p>
	<p>ASY004B UNIV GUIDE SPINDLE SHORT (FITTED TO L500-06-RH & LH DGB)</p>	<p>ASY004B TDS (ALL OPTARE VEHICLES)</p>
	<p>ROD001-C-50 LOCK ROD CRANKED 50RAD R1</p>	<p>ROD001-C-50 TDS</p>

	<p>RUB004A TRAILING EDGE CAPPING SEAL 2.3MTR</p>	<p>RUB004A TDS (ALL GLIDER DOOR LEAVES)</p>
	<p>RUB005A INNER GLAZING SEAL</p>	<p>RUB005A TDS (ALL GLAZED DOOR LEAVES)</p>
	<p>RUB006A LEADING EDGE LIPPED NOSING 2.3MTR</p>	<p>RUB006A TDS (ALL GLIDER DOORS, EXCEPT SOLO LH LEAF – SEE RUB025A)</p>
	<p>RUB009A UPPER GLASS EDGING RUBBER</p>	<p>RUB009A TDS (ALL GLAZED DOOR LEAVES)</p>
	<p>RUB011A VEHICLE APERTURE LIPPED SEAL 50x50 (2200L APR20 >)</p>	<p>RUB011A TDS (TREKA 16 - TDS GLIDERS)</p>
	<p>RUB012 LOWER GLASS EDGING RUBBER</p>	<p>RUB012 TDS (ALL GLAZED DOOR LEAVES)</p>
	<p>RUB018B 150x1.5 INSERTION RUBBER STRIP</p>	<p>RUB018B TDS (OPTARE SOLO SE + DENNIS EAGLE DUSTCARTS)</p>

	<p>RUB023A MALE HINGE SEAL 2.3MTR</p>	<p>RUB023A TDS (ALL FOLDER DOORS INCL DENNIS EAGLE DUSTCARTS)</p>
	<p>RUB025A TRAILING EDGE SHORT LIPPED 2.3MTR</p>	<p>RUB025A TDS (ALL LH LEAVES ON OPTARE VEHICLES)</p>
 <p>RUB027</p>	<p>RUB027 NOSING RUBBER BUNG FOR SENSITIVE EDGE SEALING</p>	<p>RUB027 TDS (ALL SENS EDGE NOSING RUBBERS)</p>
 <p>56-58mm</p>	<p>RUB044A VEHICLE APERTURE "T" SEAL 56-58mm x 2.5MTR # REPLACES EARLIER RUB002A</p>	<p>RUB044A TDS (OPTARE SOLO SF & FF)</p>
	<p>RUB053-1976-L2 (E40 SENS LONG LIP RUB ASSY)</p>	<p>RUB053 TDS</p>
	<p>RUB054-1976-R2 (E40 SENS SHORT LIP RUB ASSY)</p>	<p>RUB054 TDS</p>
	<p>RUB058 STEP INSERT TIGER STRIPE</p>	<p>RUB058 TDS</p>

	<p>SAB023ASSY-BLK 610 ABS SABOT ASSY ABS=BLACK 610x101x62 FIXING HOLES 2 @ 270 CTRS</p>	<p>SAB023ASSY-BLK TDS (OPTARE SOLO SF, OPTARE VERSA/SOLO FASTFLOW/METROCITY/TEMPO - RH LEAF)</p>
	<p>SAB024ASSY-BLK 510 ABS SABOT ASSY ABS=BLACK 510x101x62 FIXING HOLES 2 @ 270 CTRS</p>	<p>SAB024ASSY-BLK TDS (OPTARE VERSA/SOLO FASTFLOW/METROCITY - LH LEAF)</p>
	<p>SAB027ASSY-BLK 350 ABS SABOT ASSY ABS=BLACK 350x101x62 FIXING HOLES 2 @ 180 CTRS</p>	<p>SAB027ASSY-BLK TDS (OPTARE SOLO SF - LH LEAF)</p>
	<p>SAB028ASSY-BLK 470 ABS SABOT ASSY ABS=BLACK 470x101x62 FIXING HOLES 2 @ 270 CTRS</p>	<p>SAB028ASSY-BLK TDS (OPTARE TEMPO - LH LEAF)</p>
	<p>SAB029ASSY-BLK 640 ABS SABOT ASSY ABS=BLACK 640x101x62 FIXING HOLES 3 @ 195 CTRS</p>	<p>SAB029ASSY-BLK TDS (OPTARE SOLO SR FASTFLOW - RH & LH LEAVES)</p>
	<p>SAB030ASSY-BLK 560 ABS SABOT ASSY ABS=BLACK 560x101x62 FIXING HOLES 2 @ 270 CTRS VISIBLE BRUSH SIZE BRS=54</p>	<p>SAB030ASSY-BLK TDS (TREKA BUS 16)</p>
	<p>SAB034ASSY-BLK 434 ABS SABOT ASSY ABS=BLACK 434x101x62 FIXING HOLES 2 @ 180 CTRS</p>	<p>SAB034ASSY-BLK TDS (OPTARE SOLO LHD EXIT FASTFLOW - RH & LH LEAVES)</p>

	<p>SAB038ASSY-BLK 560 ABS SABOT ASSY ABS=BLACK 560x101x62 FIXING HOLES 2 @ 310 CTRS</p>	<p>SAB038ASSY-BLK TDS (OPTARE SOLO EXIT FASTFLOW – RH & LH LEAVES)</p>
	<p>SAB039ASSY-BLK ABS SABOT ASSY 685x98 BLK+76BRS</p>	<p>SAB039ASSY-BLK TDS</p>
	<p>SAB040-45BLK (Black) SAB040-45GRY (Grey) PANTOGRAPH DOOR BRACKET COVER Made from cover blank Inside Dims 45x68x42 (To suit Universal pivot mounting bracket BRK070-28)</p>	<p>SAB040-45BLK TDS SAB040-45GRY TDS (PLD PLUG DOOR KITS)</p>
	<p>SAB031ASSY-BLK 525 RH STEEL SABOT ASSY STEEL=BLACK 525x100x26 FIXING HOLES 2 @ 285 CTRS VISIBLE BRUSH SIZE BRS=54</p>	<p>SAB031ASSY-BLK TDS (PARRY PEOPLE MOVER)</p>
	<p>SAB032ASSY-BLK 525 LH STEEL SABOT ASSY STEEL=BLACK 525x100x26 FIXING HOLES 2 @ 285 CTRS VISIBLE BRUSH SIZE BRS=54</p>	<p>SAB032ASSY-BLK TDS (PARRY PEOPLE MOVER)</p>
	<p>SAB035ASSY-BLK 870 RH STEEL SABOT ASSY STEEL=BLACK 870x100x26 FIXING HOLES 3 @ 340 CTRS VISIBLE RUBBER SIZE RUB=74</p>	<p>SAB035ASSY-BLK TDS (OPTARE SOLO SE)</p>

	<p>SAB036KIT-BLK 520 RH or LH STEEL SABOT KIT STEEL=BLACK 520x100x26 FIXING HOLES 2 @ 270 CTRS</p>	<p>SAB036KIT-BLK TDS (OPTARE SCANIA OMNIDEKER)</p>
	<p>SAB037LH-ASY 590 LH STEEL SABOT KIT STEEL=BLACK 590x100x26 FIXING HOLES 2 @ 270 CTRS VISIBLE BRUSH SIZE BRS=54x280</p>	<p>SAB037LH-ASY TDS (WRIGHTBUS DAF)</p>
	<p>SAB037RH-ASY 590 LH STEEL SABOT KIT STEEL=BLACK 590x100x26 FIXING HOLES 2 @ 270 CTRS VISIBLE BRUSH SIZE BRS=54x280</p>	<p>SAB037RH-ASY TDS (WRIGHTBUS DAF)</p>
	<p>FIT054C 3.2 BARBED ELBOW FITTING</p>	<p>FIT054C TDS (ALL SENS EDGE NOSING RUBBERS)</p>
	<p>FAS015 LOCK FASIA PLATE</p>	<p>FAS015 TDS (ALL LOCKABLE GLIDER DOORS INCL OPTARE SOLO EXPORT VEHICLES)</p>
	<p>FAS018 LOCK COVER FASCIA PLATE</p>	<p>FAS018 TDS (ALL LOCKABLE GLIDER DOORS INCL OPTARE SOLO EXPORT VEHICLES)</p>
	<p>HDL001A GRAB HANDLE BLACK POLYAMIDE</p>	<p>HDL001A TDS (ALL GLIDER DOOR LEAVES)</p>


	<p>HDL003T-003 INTERNAL EMERGENCY RELEASE HANDLE & CABLE x 2.0mtrs ASSY TREKA</p>	<p>HDL003T-001 TDS (TREKA ENTRANCE DOORS GLD2 PRE DDA) HDL003T-002 TDS (TREKA ENTRANCE DOORS GLD42 POST DDA NOV11)</p>
	<p>HDL007T-J2 (Modified HDL004A-J2) EXTERNAL ROTARY LOCKABLE HANDLE TYPE JOK.2 WITH 2-KEYS</p>	<p>HDL007-J2 TDS TREKA VEHICLES WITH TDS DOORS.(PANEL MOUNTED LOCK)</p>
	<p>HDL027T-ASY-01 EXTERNAL LOCKABLE HANDLE ASSY WITH 2-KEYS STEEL BODY WITH MICROSWITCH+ INTERNAL OVERRIDE CAP ANTI- CLOCKWISE ONLY+MOUNTING KIT</p>	<p>HDL027E TDS BOTT VEHICLES WITH TDS DOORS. (MID PANEL MOUNTED LOCK)</p>
	<p>HDL039T-J2 (Modified HDL004A-J2) EXTERNAL ROTARY LOCKABLE HANDLE TYPE JOK.2 WITH 2-KEYS +INTERNAL OVERRIDE CAP ANTI-CLOCKWISE ONLY</p>	<p>HDL039T TDS MELLOR MAXIMA/ STRATA HF TDS DOORS. (GLASS MOUNTED LOCK)</p>
	<p>LCK004B LOCKING PIN KEEP</p>	<p>LCK004B TDS (ALL LOCKABLE GLIDER DOORS INCL OPTARE SOLO EXPORT VEHICLES)</p>
	<p>LCK005-01 INTERNAL DOOR PANEL WING LOCK ASSY</p>	<p>LCK005-01 TDS (ALL LOCKABLE GLIDER DOORS INCL OPTARE SOLO EXPORT VEHICLES)</p>
	<p>LCK006-02 EXTERNAL DOOR PANEL SQUARE KEY LOCK KIT # 8MM SQUARE KEY = LCK201</p>	<p>LCK006-02 TDS (ALL LOCKABLE GLIDER DOORS INCL OPTARE SOLO EXPORT VEHICLES)</p>

	<p>LCK109-01 INT LOCK LINK CAM ASSY # SLIDE LOCK PIN = LCK103A</p>	<p>LCK109-01 TDS (ALL LOCKABLE GLIDER DOORS INCL OPTARE SOLO EXPORT VEHICLES)</p>
	<p>LCK100A SPARE KEY (FOR TDS HDL004A)</p>	<p>LCK100A TDS (ALL LOCKABLE GLIDER DOORS INCL OPTARE SOLO EXPORT VEHICLES)</p>
	<p>LCK101A LONG STEEL CLAMPING LUG</p>	<p>LCK101A TDS (ALL LOCKABLE GLIDER DOORS INCL OPTARE SOLO EXPORT VEHICLES)</p>
	<p>LCK102A CABLE REGISTER SCREW</p>	<p>LCK102A TDS (ALL LOCKABLE GLIDER DOORS INCL OPTARE SOLO EXPORT VEHICLES)</p>
	<p>LCK103A SLIDING SUPPORT & LOCK PIN</p>	<p>LCK103A TDS (ALL LOCKABLE GLIDER DOORS INCL OPTARE SOLO EXPORT VEHICLES)</p>
	<p>LCK104A ROD END CONNECTOR</p>	<p>LCK104A TDS (ALL LOCKABLE GLIDER DOORS INCL OPTARE SOLO EXPORT VEHICLES)</p>
	<p>LCK105 CABLE GUIDE NUT-BOLT</p>	<p>LCK105 TDS (ALL LOCKABLE GLIDER DOORS INCL OPTARE SOLO EXPORT VEHICLES)</p>




	<p>LCK110KIT-01 LH BUDGET LOCK KIT RH = LCK111KIT-01</p> <p># LCK110 & 111 s BUDGET LOCK only</p>	<p>LCK110KIT-01 TDS</p> <p>118338 (LH) Peters 118337 (RH) Peters</p>
	<p>LCK201 KEY 8mm SQUARE MALE (FOR LCK006)</p>	<p>LCK201 TDS (ALL LOCKABLE GLIDER DOORS INCL OPTARE SOLO EXPORT VEHICLES)</p>
	<p>LCK302-3000 EMERGENCY RELEASE CABLE 1.5x3000</p>	<p>LCK302-3000 TDS</p>
	<p>LCK302-2000 EMERGENCY RELEASE CABLE 1.5x2000</p>	<p>LCK302-2000 TDS (TREKA ENTRANCE DOORS POST DDA NOV11)</p>
	<p>LCK303-**** 5mm OUTER CABLE SLEEVE WITH END CAPS Cut to suit</p>	<p>LCK303 TDS (TREKA ENTRANCE DOORS)</p>
	<p>ROD002-311 M12x1.75 RH/LH THREAD LINK ROD</p>	<p>ROD002-311 TDS</p>
	<p>SPG002 TORSION SPRING 17mm leg</p>	<p>SPG002A TDS</p>



	<p>SPG004 CLOSE COILED TENSION SPRING (TDS SENS EDGE)</p>	<p>SPG004 TDS (ALL DOORS WITH SENSITIVE EDGE)</p>
	<p>L500-58 FLAP HINGE PIN</p>	<p>L500-58 TDS (ALL GLIDER ACTIVE FLAP ASSY)</p>
 <p>BRG027B</p>	<p>BRG027B 6DIAx10 FLAP FLANGED BUSH</p>	<p>BRG027B TDS (ALL GLIDER ACTIVE FLAP ASSY)</p>
	<p>L500-57 ACTIVE FLAP HINGE</p>	<p>L500-57 TDS (ALL GLIDER ACTIVE FLAP ASSY)</p>
	<p>SPG002A ATF TORSION SPRING</p>	<p>SPG002A TDS</p>
	<p>SPG020 SPRING RETAINER CLIP</p>	<p>SPG020 TDS (DENNIS EAGLE DUSTCARTS)</p>
	<p>SPA005-04 4mm PIVOT SPACER</p>	<p>SPA005-04 TDS (ALL GLIDER DOORSHAFTS)</p>



	<p>SCR100610MA8 M6x10 SLOT-MUSHROOM HD BLACK NYLON SCREW</p>	<p>SCR100610MA8 TDS</p>
 <p>SCR31460-A4</p>	<p>SCR31460-A4 M14x60 SOC HD SCREW</p>	<p>SCR31460-A4 TDS (ALL DOORSHAFT ASSEMBLIES)</p>
 <p>SCR90606-C2</p>	<p>SCR90606-C2 M6x6 GRUB SCREW</p>	<p>SCR90606-C2 TDS (ALL DOORSHAFT ASSEMBLIES)</p>
	<p>L500-14 LOWER TAPPED BLOCK (BOTTOM PANELS)</p>	<p>L500-14 TDS (ALL GLIDER DOOR LEAVES)</p>
	<p>L500-40 HANDRAIL LOCKING NUT</p>	<p>L500-40 TDS (ALL GLIDER DOOR LEAVES)</p>
	<p>PLT007 LOCK GUARD PLATE</p>	<p>PLT007 TDS (TREKA ENTRANCE DOORS)</p>
	<p>PLT100B SEAL RETAINING PLATE 2200x20 BLACK</p>	<p>PLT100B TDS (ALL OPTARE VEHICLES)</p>

	<p>L500-012 DOOR TOP STOP COLLAR</p>	<p>L500-012 TDS (ALL OPTARE VEHICLES EXCEPT SOLO SF)</p>
	<p>GDE001A GUIDE SHOE</p>	<p>GDE001A TDS (ALL TREKA BUS VEHICLES)</p>
	<p>STP010-KIT ATF STRIKER STOP ASSY</p>	<p>STP010-KIT TDS (ALL OPTARE VEHICLES)</p>
	<p>L500-52-116 L500-51-192 L500-51-252 L500-52-270 L500-51-316 DOORSHAFT ARM NYLON SLIDE RAILS</p>	<p>L500-52-116 TDS L500-51-192 TDS L500-51-252 TDS L500-52-270 TDS L500-51-316 TDS (ALL OPTARE & TREKA VEHICLES)</p>
	<p>GLS001A BORDER PRINTED TOUGHENED GLASS 603x 1765</p>	<p>GLS001A TDS (OPTARE VERSA & SOLO SF PLUS)</p>
	<p>GLS002A BORDER PRINTED TOUGHENED GLASS VERSA 503x 1765</p>	<p>GLS002A TDS (OPTARE VERSA & SOLO SR FF)</p>
	<p>GLS005A BORDER PRINTED TOUGHENED GLASS 354 x 1765</p>	<p>GLS005A TDS (OPTARE SOLO SF + PLUS)</p>

	<p>GLS006A BORDER PRINTED TOUGHENED GLASS 604 x 1829</p>	<p>GLS006A TDS (OPTARE TEMPO RH)</p>
	<p>GLS007A BORDER PRINTED TOUGHENED GLASS 464 x 1829</p>	<p>GLS007A TDS (OPTARE TEMPO LH)</p>
	<p>GLS008A SOLO FF RH&LH</p>	<p>GLS008A TDS</p>
	<p>GLS009A BORDER PRINTED TOUGHENED GLASS 635 x 1792</p>	<p>GLS009A TDS (ALL TREKABUS VEHICLES)</p>
	<p>GLS017A SOLO LHD EXIT RH&LH</p>	<p>GLS017A TDS</p>
	<p>GLS022A BORDER PRINTED TOUGHENED GLASS 853x 1765</p>	<p>GLS022A TDS (OPTARE SOLO SE)</p>
	<p>GLS024A BORDER PRINTED TOUGHENED GLASS ANGLED 308x 1715</p>	<p>GLS024A TDS (DENNIS EAGLE DUSTCART LHD)</p>
	<p>GLS025A BORDER PRINTED TOUGHENED GLASS ANGLED 308x 1715</p>	<p>GLS025A TDS (DENNIS EAGLE DUSTCART RHD)</p>
	<p>ATF1-348-35 ATF1-458-35 ATF1-498-35 ATF1-548-35</p>	<p>AFTI-348-35 TDS AFTI-458-35 TDS AFTI-498-35 TDS AFTI-548-35 TDS</p>

	<p>ATF1-598-35 ATF2-135-35 ATF2-244-35 BOTTOM ACTIVE FLAP SEAL ASSEMBLY</p>	<p>AFTI-598-35 TDS AFT2-135-35 TDS AFT2-244-35 TDS (OPTARE VEHICLES)</p>
	<p>HRL001 HRL002 HRL008 SINGLE CRANKED HANDRAILS POWDER COATED TO ORDER</p>	<p>HRL001 TDS HRL002 TDS HRL008 TDS (OPTARE VERSA & TEMPO)</p>
	<p>HRL006 HRL007 HRL009 HRL010 HRL012 HRL014 HRL018 DOUBLE CRANKED HANDRAILS POWDER COATED TO ORDER</p>	<p>HRL006 TDS HRL007 TDS HRL009 TDS HRL010 TDS HRL012 TDS HRL014 TDS HRL018 TDS (OPTARE SOLO VARIANTS)</p>
	<p>HRL003A HRL020A HRL021A STRAIGHT HANDRAILS POWDER COATED TO ORDER</p>	<p>HRL003A TDS (OPTARE SOLO SE) HRL020A TDS (OPTARE SOLO SE) HRL021A TDS (DENNIS EAGLE DUSTCART)</p>
	<p>HRL025A DDA DOUBLE CRANK HANDRAIL POWDER COATED TO ORDER - STD YELLOW # RED & ORANGE ALSO AVAILABLE</p>	<p>HRL025A TDS (ALL TREKA DDA VEHICLES)</p>

	<p>SHFT007-01 RH DOORSHAFT ASSY (L500-65)</p> <p>SHFT008-01 LH DOORSHAFT ASSY (L500-66)</p> <p>SHFT020-01 RH DOORSHAFT ASSY (L500-93)</p> <p>SHFT053-01 RH DOORSHAFT ASSY (SHW-142)</p>	<p>SHFT007-01 TDS (OPTARE SOLO SF)</p> <p>SHFT008-01 TDS (OPTARE SOLO SF + PLUS)</p> <p>SHFT020-01 TDS (OPTARE SOLO SF)</p> <p>SHFT053-01 TDS (OPTARE SOLO SF PLUS)</p>
	<p>SHFT009-01 RH DOORSHAFT ASSY (L500-70)</p> <p>SHFT010-01 LH DOORSHAFT ASSY (L500-71)</p>	<p>SHFT009-01 TDS</p> <p>SHFT010-01 TDS (OPTARE TEMPO)</p>
	<p>SHFT045-01 RH DOORSHAFT SENS ASSY (SHW-134) # REPLACES SHFT001 & 018</p> <p>SHFT046-01 LH DOORSHAFT SENS ASSY (SHW-135) # REPLACES SHFT002 & 019</p>	<p>SHFT018-01 TDS</p> <p>SHFT019-01 TDS (OPTARE FASTFLOW DOORS > VERSA, SOLO FF, METROCITY)</p>
	<p>SHFT003-04 RH DOORSHAFT ASSY (L500-60) POWDER COATED RAL9147 WHITE</p>	<p>SHFT003-04 TDS (ALL TREKABUS VEHICLES)</p>
	<p>SHFT032-01 LH DOORSHAFT ASSY (L500-120)</p> <p>SHFT033-01 LH DOORSHAFT ASSY (L500-122)</p>	<p>SHFT032-01 TDS (DENNIS EAGLE DUSTCART LHD)</p> <p>SHFT033-01 TDS (DENNIS EAGLE DUSTCART RHD)</p>
	<p>PLG001A SABOT DOME PLUG</p>	<p>PLG001A TDS</p>

	<p>CIR007A HINGE PIN CIRCLIP</p>	<p>CIR007A TDS (ALL GLIDER ACTIVE FLAP ASSY)</p>
	<p>PLG011B M6x27 FIRTREE BUTTON BLACK</p>	<p>215144 Peters</p>