


TDS PRODUCT IMAGE SHEET >



VENTURA – NBFL/NRM (ROUTEMASTER) – DOOR LEAF SET

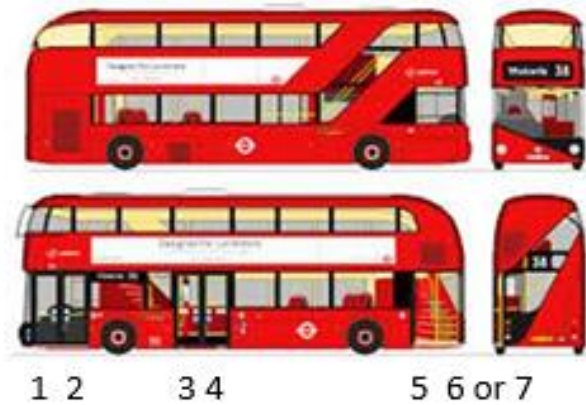

Leaves 1 & 2 = Front IG4 Inward Glider

Leaves 3 & 4 = Mid PS Plug Slider

Leaves 5 & 6 = Rear IG4 Platform Inward Glider

Leaf 7 = Rear RS Platform Rapid Slider (instead of 5 & 6)

Image	TDS Part Number & Description	OE Part Numbers (SUPPLIED FOR DOOR SYSTEM)
 <p>A white plastic bearing bush with a central hole, resting on a yellow sticky note with the handwritten number 'B253'.</p>	<p>B253 DOORSHAFT BEARING BUSH IG</p>	<p>B253 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
 <p>A black plastic bearing bush with a flange on one end, resting on a plain surface.</p>	<p>B689 DOORSHAFT BEARING BUSH</p>	<p>B689 <i>Ventura</i> MID PS / REAR RS</p>
 <p>A black plastic handgrip with a rectangular opening, resting on a yellow sticky note with the handwritten number 'C199'.</p>	<p>C199 HANDGRIP PLASTIC</p>	<p>C199 <i>Ventura</i> MID PS</p>
 <p>A black plastic vibration damper with a cylindrical shape and a hole, resting on a yellow sticky note with the handwritten number 'C492'.</p>	<p>C492 VIBRATION DAMPER 20x15</p>	<p>C492 <i>Ventura</i> MID PS</p>

	<p>D331-001 SENSITIVE EDGE 1905</p>	<p>D331-001 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT / MID PS / REAR RS</p>
	<p>D672 BRUSH ASSY 523L</p>	<p>D672 <i>Ventura</i> MID PS</p>
	<p>E464 BEARING BUSH IG4 PLAT</p>	<p>E464 <i>Ventura</i> REAR IG4 PLAT</p>
 <p>F681</p>	<p>F681 DOORSHAFT TOP ARM BEARING</p>	<p>F681 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
 <p>G202</p>	<p>G202 RUBBER END STOP</p>	<p>G202 <i>Ventura</i> MID PS / REAR RS</p>
 <p>H470</p>	<p>H470 PRECISION BOLT LOW</p>	<p>H470 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p>H750 26MM PSP ROLLER ASSY (D755+8)</p> <p>ASSOCIATED PARTS > D760 SPACER, B706 BOLT</p>	<p>H750 <i>Ventura</i> MID PS / REAR RS</p>

 <p style="text-align: center;">H901</p>	<p style="text-align: center;">H901 HANDRAIL PLASTIC SPACER</p>	<p style="text-align: center;">H901 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p style="text-align: center;">I162 DOORSHAFT BEARING BUSH IG4</p>	<p style="text-align: center;">I162 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
 <p style="text-align: center;">I883</p>	<p style="text-align: center;">I883 WABCO CONTROL VALVE ASSY</p>	<p style="text-align: center;">I883 <i>Ventura</i> MID PS / REAR RS</p>
 <p style="text-align: center;">I989</p>	<p style="text-align: center;">I989 GUIDING SHAFT ASSY (78) CABLE ENT</p>	<p style="text-align: center;">I989 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
 <p style="text-align: center;">I995</p>	<p style="text-align: center;">I995 SLIDE PLATE LEFT EXTENDED</p>	<p style="text-align: center;">I995 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
 <p style="text-align: center;">I996</p>	<p style="text-align: center;">I996 SLIDE PLATE RIGHT EXTENDED</p>	<p style="text-align: center;">I996 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>

	<p>J593 LEVER BLOCK</p>	<p>J593 <i>Ventura</i> MID PS / REAR RS</p>
	<p>K095 PORTAL RUBBER U FRAME 1250</p>	<p>K095 <i>Ventura</i> FRONT IG4</p>
	<p>L744 BEARING POINT FLAP IG4</p>	<p>L744 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p>L745 BEARING BUSH FLAP IG4</p>	<p>L745 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p>L778 FLAP BRACKET IG4</p>	<p>L778 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p>L782 DOORSHAFT BEARING BUSH</p>	<p>L782 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>

 <p>L805</p>	<p>L805 DOORSHAFT BEARING BLOCK IG4</p>	<p>L805 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p>L812 DOORSHAFT TOP BOLT M16x100</p>	<p>L812 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p>L846-003 FLAP ASSY IG4 LH (509)</p>	<p>L846-003 <i>Ventura</i> FRONT IG4</p>
	<p>L865-003 FLAP ASSY IG4 RH (509)</p>	<p>L865-003 <i>Ventura</i> FRONT IG4</p>
	<p>L865-005 FLAP ASSY IG4 RH (765)</p>	<p>L865-005 <i>Ventura</i> REAR IG4 PLAT</p>
 <p>L886</p>	<p>L886 PIVOT POINT BOLT FLAP IG4</p>	<p>L886 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>

	<p>M717 GUIDING BRACKET</p>	<p>M717 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p>N058 BOTTOM SUPPORT L90</p>	<p>N058 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p>N059 BOTTOM SUPPORT R90</p>	<p>N059 <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p>O272 BOTTOM SUPPORT ASSY LH PS</p>	<p>O272 <i>Ventura</i> MID PS</p>
	<p>O273 BOTTOM SUPPORT ASSY RH PS</p>	<p>O273 <i>Ventura</i> MID PS</p>
	<p>O281 CATCH WEDGE LH</p>	<p>O281 <i>Ventura</i> MID PS</p>

	<p>O282 CATCH WEDGE RH</p>	<p>O282 <i>Ventura</i> MID PS</p>
	<p>O400 DOORSHAFT SUPPORT ASSY R77</p>	<p>O400 <i>Ventura</i> REAR IG4 PLAT</p>
	<p>O412 PIVOT POINT BOTTOM NBFL</p>	<p>O412 <i>Ventura</i> REAR IG4 PLAT</p>
	<p>O413 PIVOT POINT TOP WRIGHT NBFL</p>	<p>O413 <i>Ventura</i> REAR IG4 PLAT</p>
	<p>O430 BRUSH ASSY 543L</p>	<p>O430 <i>Ventura</i> REAR IG4 PLAT</p>
	<p>O670 BENDED DOOR SUPPORT BOTTOM</p>	<p>O670 <i>Ventura</i> REAR IG4 PLAT</p>

	<p>O689 BOLT DIN 912 M16x1.5x60 ZP</p>	<p>O689 <i>Ventura</i> REAR IG4 PLAT</p>
	<p>Q916 CATCH BLOCK BENDED DOOR</p>	<p>Q916 <i>Ventura</i> REAR IG4 PLAT</p>
	<p>S255 END STOP ASSY - M8x35</p>	<p>S255 <i>Ventura</i> REAR RS</p>
	<p>VA0290 HANDGRIP FLAT</p>	<p>VA0290 <i>Ventura</i> REAR RS</p>
	<p>VA3302 SIDE SENS EDGE - NBFL</p>	<p>VA3302 <i>Ventura</i> REAR IG4 PLAT</p>
	<p>VA3616 CONNECTING ROD M8</p>	<p>VA3616 <i>Ventura</i> REAR RS</p>
	<p>VA3699 BOTTOM SENS EDGE - NBFL</p>	<p>VA3699 <i>Ventura</i> REAR IG4 PLAT</p>

	<p>VA3700 BOTTOM SUPPORT RH</p>	<p>VA3700 <i>Ventura</i> REAR IG4 PLAT / REAR RS</p>
	<p>VA3702 COVER CENTRE - NBFL FOOT SENS</p>	<p>VA3702 <i>Ventura</i> REAR IG4 PLAT</p>
	<p>VA3703 COVER LEFT - NBFL FOOT SENS</p>	<p>VA3703 <i>Ventura</i> REAR IG4 PLAT</p>
	<p>VA3704 CABLE LOOM DOORLEAF 2/2 POLE</p>	<p>VA3703 <i>Ventura</i> REAR IG4 PLAT</p>
	<p>VA4802-002 DOOR SEAL LH 2200 CUTOUT - GEN3</p>	<p>VA4802-002 <i>Ventura</i> MID PS / REAR RS</p>
	<p>VA4802-003 DOOR SEAL RH 2200 CUTOUT - GEN3</p>	<p>VA4802-003 <i>Ventura</i> MID PS / REAR RS</p>