

TDS PRODUCT IMAGE SHEET > **VENTURA**
systems

VENTURA – PLUG SLIDER – DOOR LEAVES & SHAFTS

Image	TDS Part Number & Description	OE Part Numbers (WHERE FITTED)
	<p>A441</p>	<p>A441 <i>Ventura</i></p>
	<p>A764 NUT DIN 934 M6 ZP</p>	<p>A764 <i>Ventura</i></p>
	<p>A889</p>	<p>A889 <i>Ventura</i></p>
	<p>B688 PIVOT BOLT 16xM10 (PS)</p>	<p>B688 <i>Ventura</i></p>
	<p>B689 SHAFT BEARING BUSH IB=16.5. OD=21-23 LG=24. F= Ø 30x3.0</p>	<p>B689 <i>Ventura</i> (PS DOORSHAFT)</p>

	<p>B706 BOLT M10x40 ZP</p>	<p>B706 <i>Ventura</i></p>
	<p>B750-372 VERTICAL DOOR PROFILE PS ELC</p>	<p>B750-372 <i>Ventura</i></p>
	<p>C199 PLASTIC HANDLE</p>	<p>C199 <i>Ventura</i></p>
	<p>C363 <i>Ventura</i> FIT015B 6mm EQUAL TEE</p>	<p>203731 <i>Peters</i> 060010 <i>Deans</i> C363 <i>Ventura</i></p>
	<p>C492 VIBRATION DAMPER 20x15</p>	<p>C492 <i>Ventura</i></p>
	<p>C670 GLASS SEALING TAPE 3x9 BLACK</p>	<p>C670 <i>Ventura</i></p>
	<p>C924 PS CATCH PIN</p>	<p>C924 <i>Ventura</i> WRIGHTBUS GEMINI DD (OLDER)</p>

<p>C965</p>	<p>C965 CATCH BLOCK (OLD PS)</p>	<p>C965 <i>Ventura</i></p>
	<p>D251-002 PS U-FRAME RUBBER PROFILE TOP & SIDE</p>	<p>D251-002 <i>Ventura</i></p>
	<p>D273-001 DOOR SEAL MIDDLE (PS) 2200L NO CUTOUT</p>	<p>D273-001 <i>Ventura</i></p>
	<p>D273-002 DOOR SEAL MIDDLE (PS) 2200L LEFT CUTOUT</p>	<p>D273-002 <i>Ventura</i></p>
	<p>D273-003 DOOR SEAL MIDDLE (PS) 2200L RIGHT CUTOUT</p>	<p>D273-003 <i>Ventura</i></p>
	<p>D331-??? SENSITIVE EDGE STRIPS</p> <p># SEE CATEGORY ELECTRICAL SHEET FOR VEHICLE SPECIFIC SIZES & P/Ns</p>	<p>D331-??? <i>Ventura</i></p>
	<p>D373 BRUSH HOLDER ASSY 544x50 PREDRILLED</p>	<p>D373 <i>Ventura</i> WRIGHTBUS GEMINI DD</p>

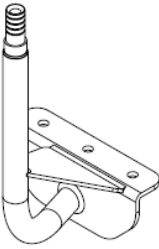
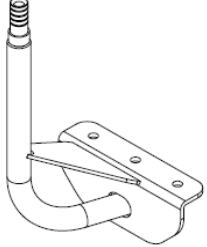


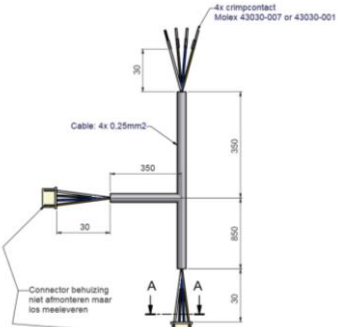

	<p>D452 BOLT DIN 933 M8x12 ZP</p>	<p>D452 <i>Ventura</i></p>
	<p>D525 BOTTOM SUPPORT LEFT</p>	<p>D525 <i>Ventura</i></p>
	<p>D526 BOTTOM SUPPORT RIGHT</p>	<p>D526 <i>Ventura</i></p>
	<p>D528 DOORSAFT ADJUST BRACKET LEFT 28mm</p>	<p>D528 <i>Ventura</i></p>
	<p>D539 SCREW TORX T50 M12x30 BLK</p>	<p>D539 <i>Ventura</i></p>
	<p>D545 CATCH PIN ON PLATE LEFT (CATCH BLOCK = D803)</p>	<p>D545 <i>Ventura</i> WRIGHTBUS GEMINI DD (OLDER)</p>
	<p>D546 CATCH PIN ON PLATE RIGHT (CATCH BLOCK = D803)</p>	<p>D546 <i>Ventura</i> WRIGHTBUS GEMINI DD (OLDER)</p>

 <p>D551</p>	<p>D551 ROLLER SPACER</p>	<p>D551 <i>Ventura</i></p>
 <p>D552</p>	<p>D552 DOORSHAFT ROLLER ASSY (LOWER ARM)</p>	<p>D552 <i>Ventura</i></p>
 <p>D704</p>	<p>D704 DOORSHAFT ADJUSTING BRACKET</p>	<p>D704 <i>Ventura</i></p>
 <p>D760</p>	<p>D760 SPACER 16/10 PS</p>	<p>D760 <i>Ventura</i></p>
 <p>D802</p>	<p>D802 BOTTOM SUPPORT BRACKET RH</p>	<p>D802 <i>Ventura</i></p>
 <p>D803</p>	<p>D803 LOCATING BUSH (FOR CATCH PIN E096/7)</p>	<p>D803 <i>Ventura</i></p>
 <p>D870</p>	<p>D870 SK LOCKING DISK SPRING M8</p>	<p>D870 <i>Ventura</i></p>




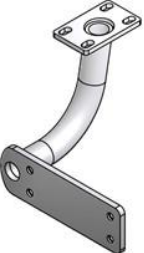
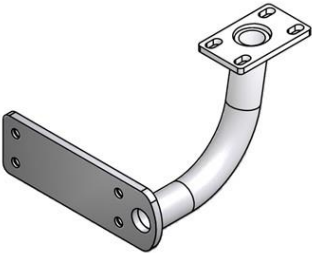


	<p>D978 SPACER SHAFT</p>	<p>D978 <i>Ventura</i></p>
	<p>E089 PLATE</p>	<p>E089 <i>Ventura</i></p>
	<p>E096 CATCH PIN PLATE RH (CATCHER BLOCK = D803)</p>	<p>E096 <i>Ventura</i> WRIGHTBUS ECLIPSE SD + GEMINI DD (LATER) + STREETCAR, ADL E200 SD + E400 DD, EAST LANCS SD + OLYMPUS DD, MCV SD EVOLUTION, POLISH SCANIA OMNICITY DD</p>
	<p>E097 CATCH PIN PLATE RH (CATCHER BLOCK = D803)</p>	<p>E097 <i>Ventura</i> WRIGHTBUS ECLIPSE SD + GEMINI DD (LATER) + STREETCAR, ADL E200 SD + E400 DD, EAST LANCS SD + OLYMPUS DD, MCV SD EVOLUTION, POLISH SCANIA OMNICITY DD</p>
	<p>E121 BOTTOM SUPPORT ASSY LEFT</p>	<p>E121 <i>Ventura</i> ADL E200 SD + E400 DD, MCV SD EVOLUTION</p>
	<p>E122 BOTTOM SUPPORT ASSY RIGHT (PS)</p>	<p>E122 <i>Ventura</i> ADL E200 SD + E400 DD, MCV SD EVOLUTION</p>
	<p>E126 CONNECTOR MOLEX RECEPTACLE (USED WITH SENS EDGES)</p>	<p>E126 <i>Ventura</i></p>

 <p>E127</p>	<p>E127 CONNECTOR MOLEX (SENS EDGE LOOM)</p>	<p>E127 <i>Ventura</i></p>
	<p>E135 CONTACT MOLEX FEMALE</p>	<p>E135 <i>Ventura</i></p>
 <p>E136</p>	<p>E136 CONTACT MOLEX MALE</p>	<p>E136 <i>Ventura</i></p>
 <p>E240</p>	<p>E240 NUT 3xD M5</p>	<p>E240 <i>Ventura</i></p>
 <p>E241</p>	<p>E241 SCREW DIN 963 M5x25 BLACK</p>	<p>E241 <i>Ventura</i></p>
	<p>E456 Ø25 GUIDE ROLLER OD=25x6.75. ID=18</p>	<p>E456 <i>Ventura</i></p>
	<p>E464 Ø16 HYLON BEARING ID=16x9. OD=18 F=23.75x1</p>	<p>E464 <i>Ventura</i> NBFL IG4 PLAT, NFBL PS</p>

	<p>E529 Ø10 GUIDE ROLLER LR 200 2RSR PS OD=30x9</p>	<p>E529 <i>Ventura</i> WRIGHTBUS NBFL DD PS</p>
	<p>E747</p>	<p>E747 <i>Ventura</i></p>
	<p>E818 BOTTOM SUPPORT ASSY LEFT (PS)</p>	<p>E818 <i>Ventura</i> WRIGHTBUS STREETCAR , EAST LANCS SD + OLYMPUS DD, POLISH SCANIA OMNICITY DD</p>
	<p>F302 BOTTOM SUPPORT ASSY RIGHT (PS)</p>	<p>F302 <i>Ventura</i> WRIGHTBUS STREETCAR , EAST LANCS SD + OLYMPUS DD, POLISH SCANIA OMNICITY DD</p>
	<p>F416 BRUSH FBL3002RH-K23 1MTR</p>	<p>F416 <i>Ventura</i></p>
	<p>F425 BRUSH HOLDER ASSY 564x73 PREDRILLED</p>	<p>F425 <i>Ventura</i> WRIGHTBUS ECLIPSE SD</p>

	<p align="center">F864 GUIDING BRACKET IG3 LH OMNI</p>	<p align="center">F864 <i>Ventura</i> POLISH SCANIA OMNICITY DD</p>
	<p align="center">F865 GUIDING BRACKET IG3 RH OMNI</p>	<p align="center">F865 <i>Ventura</i> POLISH SCANIA OMNICITY DD</p>
	<p align="center">F904 BRUSH WITH HOLES L=499mm</p>	<p align="center">F904 <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS. POLISH SCANIA OMNI CITY PS. LH & RH DOORS</p>
	<p align="center">G397 D251-U FRAME H1815W564 (LH DOOR LEAF J475)</p> <p align="center">NOTE OPPOSITE HAND AND ALL OTHER DOOR VARIANTS AVAILABLE ON ENQUIRY</p>	<p align="center">G397 <i>Ventura</i> WRIGHTBUS GEMINI SD</p> <p align="center">NOTE ALL OTHER VEHICLE MODELS AVAILABLE ON ENQUIRY</p>
	<p align="center">G584 CABLE FOR CAPTRON PREMOUTED</p>	<p align="center">G584 <i>Ventura</i></p>
	<p align="center">G952-012 PORTAL SEAL RS</p>	<p align="center">G952-012 <i>Ventura</i> BLUEBIRD SD RS</p>

	<p>G968 BUSH DIA 16-10 L=14</p>	<p>G968 <i>Ventura</i> WRIGHTBUS IG4</p>
	<p>H550 DOOR ARM RIGHT PS ELANCS SD</p>	<p>H550 <i>Ventura</i></p>
	<p>H750 Ø 26mm PSP ROLLER ASSY OD=26x10. ID=21x8 (D755+D758) ASSOCIATED PARTS > D760 SPACER, B706 BOLT</p>	<p>H750 <i>Ventura</i> PS DOORSHAFT LOWER ARM</p>
	<p>H916 SCREW DIN 7981 ST4.2x13 C-H DP</p>	<p>H916 <i>Ventura</i></p>
	<p>I261 BEARING BUSH Ø16x16.88.18xF24x1thk</p>	<p>I261 <i>Ventura</i> WRIGHTBUS PS</p>
	<p>I269 BOTTOM SUPPORT ASSY LEFT PS 2GEN</p>	<p>I269 <i>Ventura</i> OPTARE SD VERSA + TEMPO</p>
	<p>I270 BOTTOM SUPPORT ASSY RIGHT PS 2GEN</p>	<p>I270 <i>Ventura</i> OPTARE SD VERSA + TEMPO</p>




	<p>I274 BUSH DIA 12-9 L=9.5</p>	<p>I274 <i>Ventura</i> WRIGHTBUS PS2</p>
	<p>I275 CATCH WEDGE PS LEFT (CATCHER BLOCK = J405)</p>	<p>I275 <i>Ventura</i> ADL E200 (MAY11-DEC12)</p>
	<p>I276 CATCH WEDGE PS RIGHT (CATCHER BLOCK = J405)</p>	<p>I276 <i>Ventura</i> ADL E200 (MAY11-DEC12)</p>
	<p>I366 DOOR ARM LEFT PS</p>	<p>I366 <i>Ventura</i> ADL E400</p>
	<p>I367 DOOR ARM RIGHT PS</p>	<p>I367 <i>Ventura</i> ADL E400</p>
	<p>I513 MS BOLT</p>	<p>I513 <i>Ventura</i></p>
	<p>I653 bore $\varnothing 8.0 \times 5.5 \times \varnothing 10$ Flange $\varnothing 15.0 \times 0.87$ thk</p>	<p>I714 <i>Ventura</i></p>

	<p>I995 SLIDE PLATE LEFT EXTENDED</p>	<p>I995 <i>Ventura</i> OPTARE SD TEMPO</p>
	<p>I996 SLIDE PLATE LEFT EXTENDED</p>	<p>I996 <i>Ventura</i> OPTARE SD TEMPO</p>
	<p>J405 CATCH BLOCK BOTTOM SUPPORT PS (FOR CATCH PIN I275/6)</p>	<p>J405 <i>Ventura</i> ADL E200 (MAY11-DEC12)</p>
	<p>J597 MS MOUNTING PLATE (L312)</p>	<p>J597 <i>Ventura</i></p>
	<p>K962-001 DOOR SEAL MIDDLE GEN 3 L=2200mm K962-002 = LEFT CUTOUT K963-003 = RIGHT CUTOUT # APR17 > REPLACING WITH VA4802</p>	<p>K962-001 <i>Ventura</i> K962-002 <i>Ventura</i> K962-003 <i>Ventura</i> ALL PS2</p>
	<p>K963-001 (U255) DOOR SEAL GEN3 L=2200mm (UFRAME SIDE/TOP)</p>	<p>K963-001 <i>Ventura</i> ALL PS2</p>
	<p>L746 Flap Spring Plate</p>	<p>L746 <i>Ventura</i></p>

	<p align="center">M106 BOTTOM SUPPORT RS SUB ASSY</p>	<p align="center">M106 <i>Ventura</i> BLUEBIRD SD RS</p>
	<p align="center">O272 BOTTOM SUPPORT L PS 3GEN</p>	<p align="center">O272 <i>Ventura</i> WRIGHTBUS NBFL DD</p>
	<p align="center">O273 BOTTOM SUPPORT R PS 3GEN</p>	<p align="center">O273 <i>Ventura</i> WRIGHTBUS NBFL DD</p>
	<p align="center">O281 CATCH WEDGE PS LH (CATCH BLOCK = P261)</p>	<p align="center">O281 <i>Ventura</i> ADL E200 (JAN13 >) WRIGHTBUS STREETLITE & NBFL</p>
	<p align="center">O282 CATCH WEDGE PS RH (CATCH BLOCK = P261)</p>	<p align="center">O282 <i>Ventura</i> ADL E200 (JAN13>) WRIGHTBUS STREETLITE & NBFL</p>
	<p align="center">P238 CATCH BLOCK BOTTOM SUPPORT</p>	<p align="center">P238 <i>Ventura</i> WRIGHTBUS PS2</p>

 <p>P261</p>	<p>P261 CATCH BLOCK BOTTOM SUPPORT (CATCH WEDGE = O281/O282)</p>	<p>P261 <i>Ventura</i></p>
	<p>Q330 5/2 VALVE 24V DC ASSY (2x4mm & 2x 6mm elbow)</p>	<p>Q330 <i>Ventura</i> CAETANO IG4 ADLE200EV</p>
	<p>S851 DOORARM LEFT PS</p>	<p>S851 <i>Ventura</i> WRIGHTBUS PS2</p>
	<p>S852 DOORARM RIGHT PS</p>	<p>S852 <i>Ventura</i> WRIGHTBUS PS2</p>
	<p>T336</p>	<p>T336 <i>Ventura</i></p>
	<p>T986 BOTTOM SUPPORT LH ASSY</p>	<p>T986 <i>Ventura</i> WRIGHTBUS PS2</p>

	<p>VA0290 GRIP HANDLE</p>	<p>VA0290 <i>Ventura</i></p>
	<p>VA0439</p>	<p>VA0439 <i>Ventura</i></p>
	<p>VA3447 HANDGRIP - MANUAL RAMP</p>	<p>VA3447 <i>Ventura</i></p>
	<p>VA3700 BOTTOM SUPPORT RH ASSY T-SLOT</p>	<p>VA3700 <i>Ventura</i> WRIGHTBUS NBFL IG4 PLAT, NGFL PS, NGFL RS</p>
	<p>VA4644 HAND GRIP</p>	<p>VA4644 <i>Ventura</i> ADL E200 EV</p>
	<p>VA4802-001 DOOR SEAL MIDDLE GEN 4 L=2200mm VA4802-002 = LEFT CUTOUT VA04802-003 = RIGHT CUTOUT # APR17 > REPLACING K962</p>	<p>VA4802-001 <i>Ventura</i> VA4802-002 <i>Ventura</i> VA4802-003 <i>Ventura</i> ALL PS2</p>
	<p>VA6793 Guide Bracket LH</p>	<p>VA6793 <i>Ventura</i></p>

	<p>VA6794 Guide Bracket RH</p>	<p>VA6794 <i>Ventura</i></p>
	<p>VA9744</p>	<p>VA9744 <i>Ventura</i></p>
	<p>VC0950 OBSTRUCT TEST TOOL</p>	<p>VC0950 <i>Ventura</i></p>