

TDS PRODUCT IMAGE SHEET >

**VENTURA – PLUG SLIDER – DOOR MECHANISM & CONTROLS**


Image	TDS Part Number & Description	OE Part Numbers (WHERE FITTED)
	<p><b>A155</b> MICROSWITCH K5 (FITTED TO A159/A160)</p>	<p><b>A155</b> <i>Ventura</i> PART OF A159/A160</p>
	<p><b>A159</b> OBSTRUCTION DETECTION VALVE</p>	<p><b>A159</b> <i>Ventura</i> WRIGHTBUS GEMINI DD</p>
	<p><b>A160</b> OBSTRUCTION DETECTION VALVE</p>	<p><b>A160</b> <i>Ventura</i> WRIGHTBUS ECLIPSE SD + STREETCAR + STREETLITE SD + NBFL DD, ADL E200 SD + E400 DD, PLAXTON PRESIDENT DD, EAST LANCS SD, OPTARE SD VERSA + TEMPO, MCV SD EVOLUTION, BLUEBIRD SD RS</p>
	<p><b>A358</b> PRESSURE SWITCH</p>	<p><b>A358</b> <i>Ventura</i> WRIGHTBUS GEMINI DD, POLISH SCANIA OMNICITY DD</p>
	<p><b>A368</b> MICROSWITCH HARTMANN # SECURING SCREW - B396</p>	<p><b>A368</b> <i>Ventura</i> WRIGHTBUS ECLIPSE SD + GEMINI DD + STREETCAR + STREETLITE SD + NBFL DD, ADL E200 SD + E400 DD, PLAXTON PRESIDENT DD, EAST LANCS SD + OLYMPUS DD, OPTARE SD TEMPO + VERSA, MCV SD EVOLUTION, BLUEBIRD SD RS</p>

 <p>A517</p>	<p><b>A517</b> 5/2 VDMA 24VDC G1/8</p>	<p><b>A517</b> Ventura WRIGHTBUS GEMINI DD</p>
	<p><b>A751</b> T CONNECTOR DIA 4mm</p>	<p><b>A751</b> Ventura WRIGHTBUS PS2</p>
 <p>A757</p>	<p><b>A757</b> RETAINING RING (BEARING HOUSING CARRIAGE)</p>	<p><b>A757</b> Ventura</p>
 <p>A760</p>	<p><b>A760</b> BOLT M6x16 ZP</p>	<p><b>A760</b> Ventura</p>
 <p>A775</p>	<p><b>A775</b> BOLT M10x20 ZP</p>	<p><b>A775</b> Ventura</p>
	<p><b>A925</b> GUIDE ROLLER LR202 2RSR</p>	<p><b>A925</b> Ventura</p>
 <p>A976</p>	<p><b>A976</b> CONNECTOR DIN B WITH VARISTOR24 (WABCO SOLENOID)</p>	<p><b>A976</b> Ventura</p>

 <p><b>FIT052B</b></p>	<p><b>B158</b> <b>FIT052B</b> ELBOW 6mm PUSHFIT x M5</p>	<p><b>FIT052B</b> TDS <b>B158</b> Ventura</p>
	<p><b>B309</b> 4/2 EMERGENCY VALVE M10x1</p>	<p><b>B309</b> Ventura PART OF F184</p>
	<p><b>B310</b> ROTARY GRIP FOR 4/2 EMERG. VALVE</p>	<p><b>B310</b> Ventura PART OF F184</p>
 <p>B 4 7 0 SWITCH CAM</p>	<p><b>B470</b> SWITCH CAM SHAFT</p>	<p><b>B470</b> Ventura ALL PLUG SLIDERS</p>
 <p>B680</p>	<p><b>B680</b> END PLATE RH</p>	<p><b>B680</b> Ventura</p>
 <p><b>B711</b></p>	<p><b>B711</b> M8 x 1.25 RH RODEND</p>	<p><b>B711</b> Ventura PART OF CONNECTOR ROD ASSYS</p>
 <p><b>B712</b></p>	<p><b>B712</b> M8 x 1.25 LH RODEND</p>	<p><b>B712</b> Ventura PART OF CONNECTOR ROD ASSYS</p>

 <p><b>B969</b></p>	<p><b>B969</b> BOLT M10x25 ZP</p>	<p><b>B969</b> <i>Ventura</i></p>
 <p><b>C215</b></p>	<p><b>C215</b> LEVER SHAFT LEFT</p>	<p><b>C215</b> <i>Ventura</i></p>
 <p><b>C247</b></p>	<p><b>C247</b> PNEUMATIC <b>BASE</b> CONTROL UNIT WABCO MTS</p>	<p><b>C247</b> <i>Ventura</i> BASE UNIT FOR &gt; F060, F070, F689, G926, I883</p>
 <p><b>C248</b></p>	<p><b>C248</b> ELECTRIC CONTROL UNIT MTS PX</p>	<p><b>C248</b> <i>Ventura</i> POLISH SCANIA OMNICITY DD (OLDER)</p>
 <p><b>C250</b></p>	<p><b>C250</b> ELECTRIC PUSH BUTTON N/O</p>	<p><b>C250</b> <i>Ventura</i> POLISH SCANIA OMNICITY DD</p>
 <p><b>C251</b></p>	<p><b>C251</b> BRASS PLUG M12x1.5 (WABCO BLOCK)</p>	<p><b>C251</b> <i>Ventura</i></p>
 <p><b>C258</b></p>	<p><b>C258</b> CLASP LEVER</p>	<p><b>C258</b> <i>Ventura</i></p>






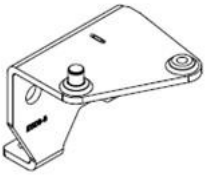


	<p><b>C290</b> FORK JOINT</p>	<p><b>C290</b> <i>Ventura</i></p>
 <p>C334</p>	<p><b>C334</b> PRESSURE SWITCH NC 4BAR</p>	<p><b>C334</b> <i>Ventura</i> BLUEBIRD SD RS</p>
	<p><b>C434</b> BASE PS RODLESS CYLINDER 32x730 (used for D622/F168)</p>	<p><b>C434</b> <i>Ventura</i></p>
	<p><b>C519</b> CONNECTING ROD M8x50</p>	<p><b>C519</b> <i>Ventura</i> PLAXTON PRESIDENT DD</p>
 <p>C592</p>	<p><b>C592</b> CATERPILLAR CABLE SUPPORT BRACKET</p>	<p><b>C592</b> <i>Ventura</i></p>
 <p>C714</p>	<p><b>C714</b> TOOTHED BELT PULLEY HTD36- 3M-15</p>	<p><b>C714</b> <i>Ventura</i></p>
 <p>C715</p>	<p><b>C715</b> TOOTHED BELT HTD 225-3M (75)</p>	<p><b>C715</b> <i>Ventura</i></p>

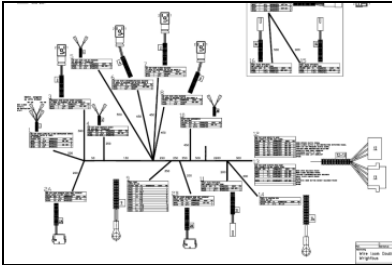







	<p><b>C731</b> KEY DIN 6885 A 3x3x16</p>	<p><b>C731</b> <i>Ventura</i></p>
	<p><b>C943</b> CABLE LOOM SENSITIVE EDGES</p>	<p><b>C943</b> <i>Ventura</i> <b>POLISH SCANIA OMNICITY DD</b></p>
	<p><b>D102</b> CAM ROLLER BRACKET</p>	<p><b>D102</b> <i>Ventura</i></p>
	<p><b>D105</b> GUIDE ROLLER Ø12 ROLLER BEARING OD=30x8</p>	<p><b>D105</b> <i>Ventura</i></p>
	<p><b>D107</b> Ø12 BEARING BUSH ID=12x7. OD=14 F=19.75x1.0</p>	<p><b>D107</b> <i>Ventura</i></p>
	<p><b>D172</b> CABLE 1314mm</p>	<p><b>D172</b> <i>Ventura</i> <b>WRIGHTBUS STREETCAR</b></p>
	<p><b>D325</b> CUSHIONING RUBBER RING 6MM</p>	<p><b>D325</b> <i>Ventura</i></p>

	<p><b>D326</b> SPACER RING D=21 POM</p>	<p><b>D326</b> <i>Ventura</i> <b>WRIGHTBUS PS2</b></p>
 <p>D 333</p>	<p><b>D333</b> DISABLED BLUE ILLUMINATED BUTTON (SINGLE GLAZE)</p>	<p><b>D333</b> <i>Ventura</i> <b>EAST LANCS SD + OLYMPUS DD</b></p>
 <p>D340</p>	<p><b>D340</b> POTENTIOMETER 180 DEG.</p>	<p><b>D340</b> <i>Ventura</i> <b>POLISH SCANIA OMNICITY DD</b></p>
 <p>D527</p>	<p><b>D527</b> DOOR HEIGHT ADJ BRACKET RH <b>D528</b> (SHOWN) DOOR HEIGHT ADJ BRACKET LH</p>	<p><b>D527</b> <i>Ventura</i> <b>D528</b> <i>Ventura</i></p>
 <p>D535</p>	<p><b>D535</b> CABLE 1214mm</p>	<p><b>D535</b> <i>Ventura</i> <b>ADL E200 SD + E400 DD, PLAXTON PRESIDENT DD, EAST LANCS SD + OLYMPUS DD, MCV SD EVOLUTION, POLISH SCANIA OMNICITY DD</b></p>
	<p><b>D548</b> ENDPLATE LH</p>	<p><b>D548</b> <i>Ventura</i></p>
	<p><b>D549</b> ENDPLATE RH</p>	<p><b>D549</b> <i>Ventura</i></p>

	<p><b>D622</b> RODLESS CYLINDER (PS) 1170 ASSY</p>	<p><b>D622</b> <i>Ventura</i> PLAXTON PRESIDENT DD</p>
 <p>ELE096</p>	<p><b>ELE096A</b> SOLENOID COIL 24V DC WABCO BASE BLOCK</p>	<p><b>ELE096A</b> <i>Ventura</i> ALL PLUG SLIDERS</p>
 <p>E114</p>	<p><b>E114</b> OR VALVE G1/8/6 ASSY</p>	<p><b>E114</b> <i>Ventura</i> EAST LANCS SD</p>
	<p><b>E234</b> LUBRICATOR NIPPLE M6-180</p>	<p><b>E234</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>E286</b> PS1 SPIRAL CABLE ASSY</p>	<p><b>E286</b> <i>Ventura</i> WRIGHTBUS GEMINI DD, ADL E200 SD + E400 DD, PLAXTON PRESIDENT DD, EAST LANCS OLYMPUS DD, MCV SD EVOLUTION, POLISH SCANIA OMNICITY DD</p>
	<p><b>E321</b> CYLINDER ISO-VDMA 32x100</p>	<p><b>E321</b> <i>Ventura</i> ADL E200 EV PSE2</p>
 <p>E369</p>	<p><b>E369</b> 5/2 DUMP VALVE FOR WABCO  <b>(REPLACED BY U174)</b></p>	<p><b>E369</b> <i>Ventura</i> WRIGHTBUS STREETCAR</p>




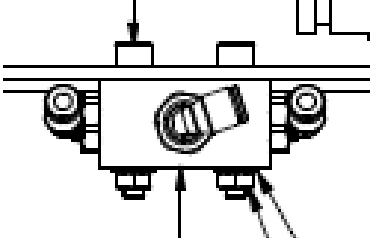




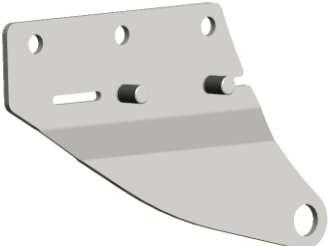
 <p style="text-align: center;"><b>E398</b></p>	<p style="text-align: center;"><b>E398</b> DOOR BUZZER</p>	<p style="text-align: center;"><b>E398</b> <i>Ventura</i></p>
 <p style="text-align: center;"><b>E420</b></p>	<p style="text-align: center;"><b>E420</b> SPACER ARM MOUNTED</p>	<p style="text-align: center;"><b>E420</b> <i>Ventura</i></p>
 <p style="text-align: center;"><b>E469</b></p>	<p style="text-align: center;"><b>E469</b> 5/2 VALVE 24VDC G1/8 <b>(REPLACED BY P985-KIT)</b></p>	<p style="text-align: center;"><b>E469</b> <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS + GEMINI DD PS + STREETCAR PS, ADL E300 SD IG3 + E400 DD IG3/PS, EAST LANCS SD IG3/PS, MCV SD EVOLUTION PS</p>
	<p style="text-align: center;"><b>E470</b> 5/2 INTERLOCK VALVE <b>(REPLACED BY Q003-KIT)</b></p>	<p style="text-align: center;"><b>E470</b> <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS + GEMINI DD PS + STREETLITE SD PS, ADL E200 SD PS + E300 SD IG3 + E400 DD IG3/PS, PLAXTON PRESIDENT DD PS, EAST LANCS SD IG3/PS + OLYMPUS DD IG3/PS, OPTARE SD VERSA PS + TEMPO PS, MCV SD EVOLUTION PS</p>
	<p style="text-align: center;"><b>E508</b> END PLATE LEFT WELD ASSY</p>	<p style="text-align: center;"><b>E508</b> <i>Ventura</i></p>
 <p style="text-align: center;"><b>E515</b></p>	<p style="text-align: center;"><b>E515</b> CONNECTING ROD M8x50 ASSY</p>	<p style="text-align: center;"><b>E515</b> <i>Ventura</i> WRIGHTBUS ECLIPSE SD + STREETCAR, ADL E200 SD, PLAXTON PRESIDENT DD, OPTARE SD TEMPO, POLISH SCANIA OMNICITY DD</p>
	<p style="text-align: center;"><b>E820</b> RODLESS CYLINDER (PS) 32x895 ASSY <b>TDS REFURB SERVICE = E820-RK</b> <b># SEAL REPAIR KIT = K586</b></p>	<p style="text-align: center;"><b>E820</b> <i>Ventura</i> WRIGHTBUS ECLIPSE SD + GEMINI DD (LATER) + STREETLITE SD + STREETCAR, OPTARE TEMPO SD</p>

	<p><b>E875</b> CABLE LOOM DD WRIGHT</p>	<p><b>E875</b> <i>Ventura</i> WRIGHTBUS GEMINI DD</p>
	<p><b>E971</b> TUBE RESTRICTOR 6&gt;4 (1.5mm)</p>	<p><b>E971</b> <i>Ventura</i> ADL E400 DD, PLAXTON PRESIDENT DD, POLISH SCANIA OMNICITY DD</p>
	<p><b>F017</b> CABLE CHT46 (FOR CAPTRON BUTTONS)  SUPPLIED WITH Q149-KIT</p>	<p><b>F017</b> <i>Ventura</i></p>
	<p><b>F070</b> WABCO PNEUMATIC CONTROL ASSY MTS</p>	<p><b>F070</b> <i>Ventura</i> WRIGHTBUS ECLIPSE SD + GEMINI DD + STREETCAR, OPTARE SD VERSA + TEMPO</p>
	<p><b>F168</b> RODLESS CYLINDER (PS) 32x730 ASSY  TDS REFURB SERVICE = F168-RK # SEAL REPAIR KIT = K587</p>	<p><b>F168</b> <i>Ventura</i> WRIGHTBUS GEMINI DD</p>
	<p><b>F169</b> CONNECTING ROD M8x75 ASSY</p>	<p><b>F169</b> <i>Ventura</i> WRIGHTBUS GEMINI DD</p>
	<p><b>F170</b> CONNECTING ROD M8x120 ASSY</p>	<p><b>F170</b> <i>Ventura</i> WRIGHTBUS GEMINI DD</p>
	<p><b>F230</b> CONNECTING ROD M8x90 ASSY</p>	<p><b>F230</b> <i>Ventura</i> WRIGHTBUS GEMINI DD</p>
	<p><b>F184</b> EMERGENCY VALVE ASSY 6mm Push in Con's</p>	<p><b>F184</b> <i>Ventura</i> WRIGHTBUS ECLIPSE SD + GEMINI DD, ADL E400 DD, PLAXTON PRESIDENT DD, EAST LANCS SD + OLYMPUS DD, MCV SD EVOLUTION, POLISH SCANIA OMNICITY DD</p>

	<p><b>F316</b> TUBE RESTRICTOR 8&gt;6 (1.3mm)</p>	<p><b>F316</b> <i>Ventura</i> WRIGHTBUS GEMINI DD</p>
	<p><b>F406</b> 6PIN CONNECTOR MALE</p>	<p><b>F406</b> <i>Ventura</i></p>
	<p><b>F407</b> 6PIN CONNECTOR FEMALE</p>	<p><b>F407</b> <i>Ventura</i></p>
	<p><b>F424</b> CABLE LOOM PS WABCO</p>	<p><b>F424</b> <i>Ventura</i> WRIGHTBUS ECLIPSE SD + STREETCAR + NBFL DD, OPTARE SD VERSA + TEMPO</p>
	<p><b>F586</b> TUBE RESTRICTOR 6&gt;4 (1.3mm)</p>	<p><b>F586</b> <i>Ventura</i> WRIGHTBUS ECLIPSE SD + NBFL DD, ADL E200 SD + E400 DD, EAST LANCS OLYMPUS DD, OPTARE SD VERSA, MCV SD EVOLUTION, NFBL PS</p>
	<p><b>F689</b> WABCO PNEUMATIC CONTROL ASSY MTS ASSY</p>	<p><b>F689</b> <i>Ventura</i> POLISH SCANIA OMNICITY DD</p>
	<p><b>F913</b> DOORSHAFT ADJ BRKT LH</p>	<p><b>F913</b> <i>Ventura</i></p>

	<p><b>F914</b> DOORSHAFT ADJ BRKT RH</p>	<p><b>F914</b> <i>Ventura</i></p>
	<p><b>F922</b> RODLESS CYLINDER (PS) 32x795 ASSY  TDS REFURB SERVICE = F922-RK # SEAL REPAIR KIT = K585</p>	<p><b>F922</b> <i>Ventura</i> POLISH SCANIA OMNICITY DD</p>
 <p style="text-align: center;">F975</p>	<p><b>F975</b> DISABLED BLUE ILLUMINATED BUTTON (DOUBLE GLAZE)</p>	<p><b>F975</b> <i>Ventura</i> WRIGHTBUS STREETCAR</p>
 <p style="text-align: center;">F995</p>	<p><b>F995</b> MICROSWITCH N31075</p>	<p><b>F995</b> <i>Ventura</i> WRIGHTBUS STREETCAR</p>
 <p style="text-align: center;">G020</p>	<p><b>G020</b> OPEN GREEN ILLUMINATED BUTTON (SINGLE GLAZE)</p>	<p><b>G020</b> <i>Ventura</i> WRIGHTBUS STREETCAR</p>
	<p><b>G208</b> CABLE LOOM PS WABCO MTS</p>	<p><b>G208</b> <i>Ventura</i> POLISH SCANIA OMNICITY DD</p>
	<p><b>G525</b> WABCO VALVE ASSY</p>	<p><b>G525</b> <i>Ventura</i> PLAXTON PRESIDENT DD</p>
	<p><b>G528</b> CABLE LOOM PS WABCO DD</p>	<p><b>G528</b> <i>Ventura</i> EAST LANCS OLYMPUS DD</p>



	<p><b>G714</b> Y CONNECTOR 6mm</p>	<p><b>G714</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>G811</b> OR-VALVE</p>	<p><b>G811</b> <i>Ventura</i> WRIGHTBUS STREETLITE SD, BLUEBIRD SD RS</p>
	<p><b>G907</b> EMERGENCY OPEN RAISED BUTTON PNEUMATIC</p>	<p><b>G907</b> <i>Ventura</i> OPTARE SD VERSA + TEMPO</p>
	<p><b>G914</b> OR VALVE G1/8/4 ASSY</p>	<p><b>G914</b> <i>Ventura</i> ADL E400 DD, OPTARE SD VERSA + TEMPO</p>
	<p><b>G920</b> RODLESS CYLINDER ASSY</p>	<p><b>G920</b> <i>Ventura</i></p>
	<p><b>G926 (F060)</b> WABCO PNEUMATIC CONTROL ASSY MTS ASSY STEEL FITTINGS</p>	<p><b>G926 (F060)</b> <i>Ventura</i> WRIGHTBUS GEMINI DD PS, POLISH SCANIA OMNICITY DD IG3</p>
	<p><b>H036</b> DRIVE BRACKET ASSY  # BEARING BUSH = D107</p>	<p><b>H036</b> <i>Ventura</i></p>

	<p><b>H080</b> CONNECTING ROD END M8</p>	<p><b>H080</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>H110</b> PIN</p>	<p><b>H110</b> <i>Ventura</i></p>
	<p><b>H132</b> POTENTIOMETER PLATE</p>	<p><b>H132</b> <i>Ventura</i></p>
	<p><b>H227</b> DOORSHAFT ADJ BRACKET RH</p>	<p><b>H227</b> <i>Ventura</i></p>
	<p><b>H228</b> DOORSHAFT ADJ BRACKET LH</p>	<p><b>H228</b> <i>Ventura</i></p>
	<p><b>H549</b> DOOR ARM LEFT PS</p>	<p><b>H549</b> <i>Ventura</i> EASTLANCS SD</p>

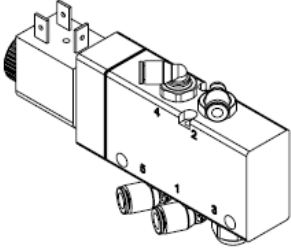
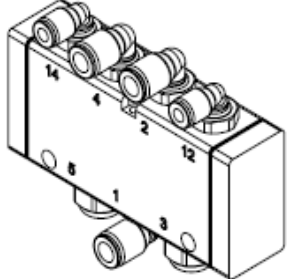

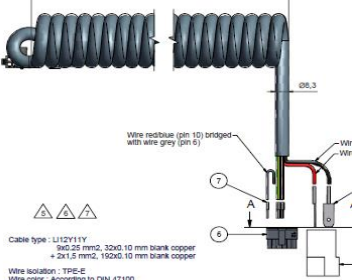
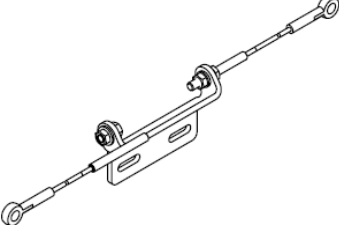


	<p><b>H618</b> WIRING LOOM IG3 WRIGHT</p>	<p><b>H618</b> <i>Ventura</i> POLISH SCANIA OMNICITY DD, NBFL IG4</p>
	<p><b>H694</b> DRIVERS DOUBLE FLUSH BUTTON PNEUMATIC</p>	<p><b>H694</b> <i>Ventura</i> WRIGHTBUS NBFL DD, OPTARE SD VERSA, NBFL DD IG4, NBFL IG4 PLAT, NBFL IG4 PS</p>
	<p><b>H877</b> 5/2 BI-STABLE VALVE JMFH-5-1/8-B ASSY</p>	<p><b>H877</b> <i>Ventura</i> WRIGHTBUS DD KMB</p>
	<p><b>H895</b> MINI CYLINDER ESN-25-25-P</p>	<p><b>H895</b> <i>Ventura</i></p>
	<p><b>H902</b> CABLE LOOM SHELF PLATE SPOTLIGHT</p>	<p><b>H902</b> <i>Ventura</i> WRIGHTBUS NBFL DD</p>
	<p><b>I026</b> TUBE RESTRICTOR 6&gt;4 (1.7mm)</p>	<p><b>I026</b> <i>Ventura</i> BLUEBIRD SD RS</p>
	<p><b>I226</b> ELECTRIC PUSHBUTTON NO</p>	<p><b>I226</b> <i>Ventura</i> WRIGHTBUS STREETLITE IGE ADL E200 EV</p>

	<p><b>I366</b> DOOR ARM LEFT PS</p>	<p><b>I366</b> <i>Ventura</i> ADL E400</p>
	<p><b>I367</b> DOOR ARM RIGHT PS</p>	<p><b>I367</b> <i>Ventura</i> ADL E400</p>
	<p><b>I371</b> OVERCENTRE SOFT STOPPER ASSEMBLY</p>	<p><b>I371</b> <i>Ventura</i></p>
	<p><b>I369</b> SOFT STOP BUSH PU Ø16Ø6,5 L=16</p>	<p><b>I369</b> <i>Ventura</i></p>
	<p><b>I470</b> EMERGENCY OPEN RAISED BUTTON PNEU (N/O) # VALVE = L169     &lt; EARLIER VERSION</p>	<p><b>I470</b> <i>Ventura</i> POLISH SCANIA OMNICITY DD IG3/PS</p>
	<p><b>I486</b> RODLESS CYLINDER (PS) 32x795 ASSY   <b>TDS REFURB SERVICE = I486-RK</b>  <b># SEAL REPAIR KIT = K585</b></p>	<p><b>I486</b> <i>Ventura</i> ADL E200 SD + E400 DD, EAST LANCS SD, OPTARE VERSA SD, MCV EVOLUTION SD</p>
	<p><b>I500</b> CONTROL PLATE (REV 8)</p>	<p><b>I500</b> <i>Ventura</i></p>



	<p><b>I523</b> CABLE LOOM PS ADL E200</p>	<p><b>I523</b> <i>Ventura</i> ADL E200 SD, E400 DD</p>
	<p><b>I662</b> MINI CYLINDER R1012-0025 RB</p>	<p><b>I662</b> <i>Ventura</i> POLISH SCANIA OMNICITY DD</p>
	<p><b>I741</b> ADAPTER BRACKET ASSY LH</p>	<p><b>I741</b> <i>Ventura</i></p>
	<p><b>I801</b> ADAPTER BRACKET ASSY RH</p>	<p><b>I801</b> <i>Ventura</i></p>
	<p><b>I823</b> EMERGENCY OPEN FLUSH BUTTON ELECTRIC &amp; PNEUMATIC</p>	<p><b>I823</b> <i>Ventura</i> ADL E400 DD</p>
	<p><b>I824</b> DOUBLE BUTTON – ELECTRIC &amp; PNEUMATIC OPEN/CLOSE</p>	<p><b>I824</b> <i>Ventura</i> ADL E400 DD, OPTARE SD VERSA + TEMPO</p>
	<p><b>I826</b> FILTER REGULATOR ASSY 8mm Push in Con's</p>	<p><b>I826</b> <i>Ventura</i> <i>Replaced by Q066</i> ADL E400 DD, OPTARE SD TEMPO</p>


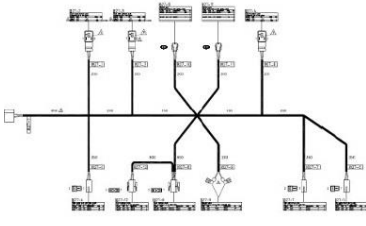


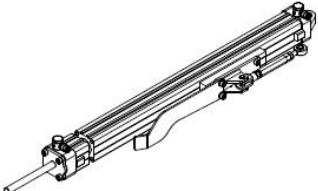
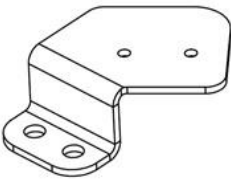
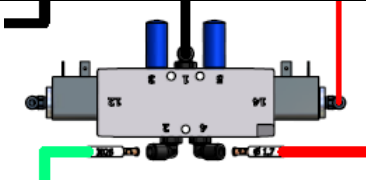
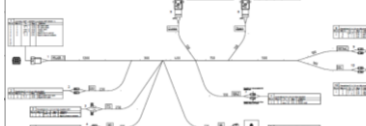
	<p><b>I830</b> PS CONNECTOR ROD</p>	<p><b>I830</b> <i>Ventura</i> ADL E200 SD + E400 DD, OPTARE SD VERSA, POLISH SCANIA OMNICITY DD</p>
	<p><b>I835</b> BUTTON CAPTRON BLUE DISABLED (WALL MOUNT)</p>	<p><b>I835</b> <i>Ventura</i></p>
	<p><b>I883</b> WABCO PNEUMATIC ASSY - MTS</p>	<p><b>I883</b> <i>Ventura</i> WRIGHTBUS NBFL DD, ADL E200 SD + E400 DD, MCV SD EVOLUTION</p>
	<p><b>I898</b> INTERNAL EMERGENCY BUTTON PNEUMATIC</p>	<p><b>I898</b> <i>Ventura</i></p>
	<p><b>I994</b> BUTTON EAO 1 SIDE GREY WC  # OCT14 - REPLACED BY Q149-KIT</p>	<p><b>I994</b> <i>Ventura</i> MCV SD EVOLUTION PS</p>
	<p><b>Q149-KIT</b> BUTTON CAPTRON 1 SIDE GREY WC  # REPLACES I994</p>	<p><b>Q149+F017</b> <i>Ventura</i> MCV SD EVOLUTION PS</p>
	<p><b>J087</b> CABLE LOOM</p>	<p><b>J087</b> <i>Ventura</i> MCV SD EVOLUTION</p>

	<p align="center"><b>J089</b> 5/2 VALVE 24VDC G1/8 SUB</p>	<p align="center"><b>J089</b> <i>Ventura</i> POLISH SCANIA OMINCITY DD</p>
	<p align="center"><b>J090</b> 5/2 VALVE BI-STABLE PNEU. ASSY</p>	<p align="center"><b>J090</b> <i>Ventura</i> POLISH SCANIA OMINCITY DD</p>
	<p align="center"><b>J097</b> 12V SOLENOID COIL MSFG-12-OD</p>	<p align="center"><b>J097</b> <i>Ventura</i></p>
	<p align="center"><b>J278</b> SPIRAL CABLE ASSY</p>	<p align="center"><b>J278</b> <i>Ventura</i> BLUEBIRD SD RS</p>
	<p align="center"><b>J400</b> CABLE 1314mm ASSY</p>	<p align="center"><b>J400</b> <i>Ventura</i> WRIGHTBUS ECLIPSE SD + STREETCAR, OPTARE SD TEMPO</p>
	<p align="center"><b>J407</b> CABLE 1214mm ASSY</p>	<p align="center"><b>J407</b> <i>Ventura</i> OPTARE SD VERSA</p>
	<p align="center"><b>J463</b> SLOW-START VALVE (8mm con) to 2x6mm Fittings</p>	<p align="center"><b>J463</b> <i>Ventura</i> BLUEBIRD SD RS</p>

	<p><b>J618</b> DOUBLE FLUSH BUTTON PNEUMATIC</p>	<p><b>J618</b> <i>Ventura</i> WRIGHTBUS NBFL DD</p>
	<p><b>J684</b> SUPERSEAL TOP BRUSH (F416-1500)</p>	<p><b>J684</b> <i>Ventura</i> ADL E400 PS</p>
	<p><b>J796</b> PS CABLE ROLLER ASSY (A841+B471)</p>	<p><b>J796</b> <i>Ventura</i></p>
	<p><b>J995</b> CABLE LOOM PS SCANIA</p>	<p><b>J995</b> <i>Ventura</i> POLISH SCANIA OMNICITY DD</p>
	<p><b>K437</b> ROLLER ASSY RODLESS CYL (D134+D136)</p>	<p><b>K437</b> <i>Ventura</i></p>
	<p><b>K581</b> CONNECTING ROD END M8</p>	<p><b>K581</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>K585, K586, K587</b> REPAIR KIT – VS PKR RODLESS CYLINDERS 32x795, 32x895, 32x730 I486/F922, E820, F168</p>	<p><b>K585, K586, K587</b> <i>Ventura</i></p>



	<p><b>K651</b> LINEAR BEARING 30mm KS30-B-PP</p>	<p><b>K651</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>K962-001</b> DOOR SEAL MIDDLE L=2200mm</p>	<p><b>K962-001</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>K962-002</b> DOOR SEAL <b>LEFT</b> L=2200mm</p>	<p><b>K962-002</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>K962-003</b> DOOR SEAL <b>RIGHT</b> L=2200mm</p>	<p><b>K962-003</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>K992</b> Ø30 PS ROLLER ASSY OD=30x15. ID=10 (A841+B442)</p>	<p><b>K992</b> <i>Ventura</i></p>
	<p><b>L062</b> EMERGENCY BUTTON EXTERIOR COVER</p>	<p><b>L062</b> <i>Ventura</i> BLUEBIRD SD RS, NBFL RS</p>
	<p><b>L063</b> EMERGENCY BUTTON INTERIOR COVER</p>	<p><b>L063</b> <i>Ventura</i> BLUEBIRD SD RS</p>

	<p><b>L312</b> MICROSWITCH ELEC</p>	<p><b>L312</b> <i>Ventura</i> BLUEBIRD RS &amp; WRIGHTBUS NBFL PLAT, NBFL PS, NBFL RS</p>
	<p><b>L317</b> CABLE LOOM ADAPTER 2-12 POLE</p>	<p><b>L317</b> <i>Ventura</i> WRIGHTBUS PS2, NBFL RS</p>
	<p><b>L538</b> PLATE PLAIN BEARING</p>	<p><b>L538</b> <i>Ventura</i></p>
	<p><b>L876</b> EMERGENCY BUTTON</p>	<p><b>L876</b> <i>Ventura</i> BLUEBIRD SD RS</p>
	<p><b>M001</b></p>	<p><b>M001</b> <i>Ventura</i></p>
	<p><b>M049</b> MICROSWITCH BRACKET</p>	<p><b>M049</b> <i>Ventura</i></p>
	<p><b>M466</b> 5/2 BI-STABLE 12VDC</p>	<p><b>M466</b> <i>Ventura</i> BLUEBIRD SD RS</p>
	<p><b>M468</b> CABLE LOOM</p>	<p><b>M468</b> <i>Ventura</i> BLUEBIRD SD RS</p>

	<p><b>M491</b> PUSHBUTTON + RUBBER SEAL</p>	<p><b>M491</b> <i>Ventura</i> BLUEBIRD SD RS</p>
	<p><b>M492</b> COVER OUTSIDE BUTTON (GREEN)</p>	<p><b>M492</b> <i>Ventura</i> BLUEBIRD SD RS</p>
	<p><b>M494</b> PUSHBUTTON GREEN ELECTRIC</p>	<p><b>M494</b> <i>Ventura</i> BLUEBIRD SD RS</p>
	<p><b>M756</b> CONNECTOR BRACKET 22 POLE</p>	<p><b>M756</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>M691</b> ELBOW CONNECTOR 6-1/4 (LATER RODLESS CYLINDERS)</p> <p><b>* UPGRADE TO PART G915</b></p>	<p><b>M691</b> <i>Ventura</i></p>
	<p><b>M971 (M979)</b> EMERGENCY OPEN BUTTON N/C PNEUMATIC/ELECTRIC</p>	<p><b>M971</b> <i>Ventura</i> WRIGHTBUS NBFL DD, NBFL IG4, NBFL IG4 PLAT, NBFL PS</p>

	<p><b>M979</b> BUTTON EMERGENCY YELLOW PNEU NC + ELEC</p>	<p><b>M979</b> <i>Ventura</i> WRIGHTBUS NBFL DD, NBFL IG4, NBFL IG4 PLAT, NBFL PS</p>
	<p><b>N427</b> PIVOT POINT</p>	<p><b>N427</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>N670</b> SPIRAL CABLE D-40 14 COILS IG4 ASSY</p>	<p><b>N670</b> <i>Ventura</i> WRIGHTBUS GEMINI DD PS2.1, NBFL DD IG4 PLAT, STREETLITE, NBFL PS</p>
	<p><b>O500</b> SPIRAL CABLE ASSY</p>	<p><b>O500</b> <i>Ventura</i> WRIGHTBUS + ADL PS2 (Later Models)</p>
	<p><b>O574</b> CABLE 1234mm ASSY</p>	<p><b>O574</b> <i>Ventura</i> WRIGHTBUS NBFL DD, NBFL PS</p>
	<p><b>O578</b> CYLINDER 32 x 815 RODLESS SUB</p>	<p><b>O578</b> <i>Ventura</i> WRIGHTBUS NBFL DD, NBFL PS</p>
	<p><b>O699</b> SOFT STOPPER ASSY</p>	<p><b>O699</b> <i>Ventura</i></p>



	<p><b>P532</b> ELBOW CONNECTOR DIA 6 G1-8</p>	<p><b>P532</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>P535</b> SOLENOID 24VDC DIN B U77</p>	<p><b>P535</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>P563 (K005/K006)</b> FILTER REGULATOR ASSY 6mm CONNECTIONS</p>	<p><b>P563</b> <i>Ventura</i> <b>PNE303UG-07</b> TDS WRIGHTBUS NBFL DD, OPTARE SD VERSA, BLUEBIRD SD RS</p>
 <p>P985-1</p>	<p><b>P985</b> 5/2 VALVE MONO-STABLE  (&gt;2013) REPLACES E469 NEEDS CONV KIT S061</p>	<p><b>P985</b> <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS + GEMINI DD PS + STREETCAR PS, ADL E300 SD IG3 + E400 DD IG3/PS, EAST LANCS SD IG3/PS, MCV SD EVOLUTION PS</p>
 <p>Q003</p>	<p><b>Q003</b> 5/2 VALVE MONO-STABLE KM/H INTERLOCK  (&gt;2013) REPLACING E470 NEEDS CONV KIT S061</p>	<p><b>Q003</b> <i>Ventura</i> WRIGHTBUS NBFL DD IG4 PLAT, NBFL PS, NBFL RS</p>
	<p><b>Q066</b> FILTER REGULATOR ASSY 8mm CONNECTIONS</p>	<p><b>Q066</b> <i>Ventura</i> <b>PNE303UG-08</b> TDS ADL &amp; OPTARE PS</p>
	<p><b>Q160</b> FILTER REGULATOR ASSY (NO FITTINGS) # PART OF Q066</p>	<p><b>Q160</b> <i>Ventura</i> <b>PNE303U-01</b> TDS ADL &amp; OPTARE PS</p>

	<p><b>Q149-KIT (P661)</b>          BUTTON CAPTRON 1 SIDE          GREY WC</p> <p># REPLACES I994</p>	<p><b>P661</b> <i>Ventura</i>          MCV SD EVOLUTION PS</p>
	<p><b>Q330</b>          5/2 VALVE 24V DC ASSY          (2x4mm &amp; 2x 6mm elbow)</p>	<p><b>Q330</b> <i>Ventura</i>          CAETANO IG4          ADL E200 EV</p>
	<p><b>R643</b>          CYLINDER 32-RS1100 LH</p>	<p><b>R643</b> <i>Ventura</i>          BLUEBIRD SD RS</p>
	<p><b>S061</b>          RETRO FIXING KIT          FOR ADDING VALVE Q003 (P985)          TO OR REPLACING E470 (E469)</p>	<p><b>S061</b> <i>Ventura</i></p>
	<p><b>S878</b>          CONNECTING ROD M8</p>	<p><b>S878</b> <i>Ventura</i>          WRIGHTBUS PS2</p>
	<p><b>S882</b>          CYLINDER 27M2A032A0105</p>	<p><b>S882</b> <i>Ventura</i>          WRIGHTBUS PS2</p>
	<p><b>S930</b>          CYLINDER BRACKET</p>	<p><b>S930</b> <i>Ventura</i></p>

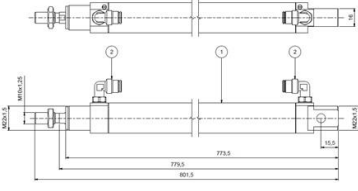
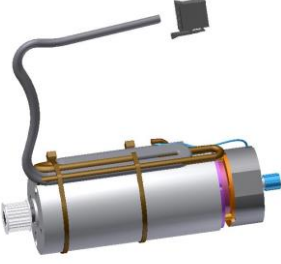

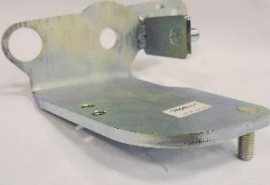


	<p><b>S933</b> SIDE PLATE L</p>	<p><b>S933</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>S957</b> PS2 CYLINDER 25x604</p>	<p><b>S957</b> <i>Ventura</i></p>
	<p><b>T129</b> DOOR CONTROLLER</p>	<p><b>T129</b> <i>Ventura</i></p>
	<p><b>T500</b> CONNECTION ROD M8</p>	<p><b>T500</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>T778</b> GUIDE SHAFT END STOP</p>	<p><b>T778</b> <i>Ventura</i></p>
	<p><b>T896</b> CONNECTING ROD M8x50 ASSY</p>	<p><b>T896</b> <i>Ventura</i> WRIGHTBUS NBFL DD</p>
	<p><b>U839</b> CABLE LOOM ADAPTER PS</p>	<p><b>U839</b> <i>Ventura</i> WRIGHTBUS PS2</p>
	<p><b>VA0134</b> OVERCENTRE SOFT STOPPER</p>	<p><b>VA0134</b> <i>Ventura</i></p>

	<p><b>VA0203</b> LH END PIECE</p>	<p><b>VA0203</b> <i>Ventura</i></p>
	<p><b>VA0204</b> RH END PIECE</p>	<p><b>VA0204</b> <i>Ventura</i></p>
	<p><b>VA0739</b> PS2 SPIRAL CABLE ASSY</p>	<p><b>VA0571</b> <i>Ventura</i> <b>WRIGHTBUS &amp; ADL PS2</b></p>
	<p><b>VA0912</b> PS ROLLER BRACKET</p> <p># USED WITH ROLLER E529 # ROLLER BOLT = VA0557</p>	<p><b>VA0912</b> <i>Ventura</i></p>
	<p><b>VA0946</b> SHAFT COUPLER 10-12 (PSE)</p>	<p><b>VA0946</b> <i>Ventura</i> <b>ADL E200 EV</b></p>
	<p><b>VA1035</b> PS2 CABLE 1425</p>	<p><b>VA1035</b> <i>Ventura</i></p>
	<p><b>VA1109</b> MOUNTING PLATE SPINDLE NUT</p>	<p><b>VA1109</b> <i>Ventura</i></p>

	<p><b>VA1280</b> PS2 CYLINDER ASSY 1200 STROKE 625</p>	<p><b>VA1280</b> <i>Ventura</i> ADL E200 EV &amp; MMC</p>
	<p><b>VA1283</b> PS2 CYLINDER ASSY 1350 STROKE 700</p>	<p><b>VA1283</b> <i>Ventura</i> MCV EVOSETI</p>
	<p><b>VA1588</b> SWITCH CAM SHAFT 12mm</p>	<p><b>VA1588</b> <i>Ventura</i></p>
	<p><b>VA3038</b> SWITCH PLATE ASSY</p>	<p><b>VA3038</b> <i>Ventura</i></p>
	<p><b>VA3191</b> DOORSHAFT BRKT LH ASSY 28MM</p>	<p><b>VA3191</b> <i>Ventura</i></p>
	<p><b>VA3192</b> DOORSHAFT BRKT RH ASSY 28MM</p>	<p><b>VA3192</b> <i>Ventura</i></p>
	<p><b>VA3289</b> DOORSHAFT ADJ BRKT LH ASSY</p>	<p><b>VA3289</b> <i>Ventura</i></p>



	<p><b>VA3290</b> DOORSHAFT ADJ BRKT RH ASSY</p>	<p><b>VA3290</b> <i>Ventura</i></p>
	<p><b>VA3594</b> PSE DRIVE UNIT PERFORMAX 52.1 24V</p>	<p><b>VA3594</b> <i>Ventura</i> ADL E200 EV</p>
	<p><b>VA6346</b> 12V LATCHING RELAY</p>	<p><b>VA6346</b> <i>Ventura</i> MELLOR ORION RS</p>
	<p><b>VA7226</b> DOOR CONTROLLER – ADL IGE <b>VA7228</b> DOOR CONTROLLER – ADL PSE</p>	<p><b>VA7226</b> <i>Ventura</i> <b>VA7228</b> <i>Ventura</i> ADL E200 EV</p>
	<p><b>VA7269</b> ELBOW CONNECTOR 6-1/4 (LATEST RODLESS CYLINDERS)  * SEP16 &gt;REPLACEMENT FOR M691/G915</p>	<p><b>VA7269</b> <i>Ventura</i></p>
	<p><b>VA8529</b> PLATE SPINDLE NUT</p>	<p><b>VA8529</b> <i>Ventura</i></p>
	<p><b>VA8634</b> PS2 CABLE 1560</p>	<p><b>VA8634</b> <i>Ventura</i> WB DD PS2, ADL E200EV</p>

	<p><b>VA8946</b> PS2 CYLINDER ASSY 1270</p>	<p><b>VA8946</b> <i>Ventura</i></p>
	<p><b>VB2107</b> ELECTROMOTOR 24VDC  # REPLACES S996</p>	<p><b>VB2107</b> <i>Ventura</i> ADL E200 EV PSE</p>
	<p><b>VB2226</b> BUTTON COVER GREY INTERNAL</p>	<p><b>VB2226</b> <i>Ventura</i></p>
	<p><b>VB2533</b> LH END PIECE</p>	<p><b>VB2533</b> <i>Ventura</i></p>
	<p><b>VB2568</b> RH END PIECE</p>	<p><b>VB2568</b> <i>Ventura</i></p>
	<p><b>VC0950</b> OBSTRUCT TEST TOOL</p>	<p><b>VC0950</b> <i>Ventura</i></p>