





TDS PRODUCT IMAGE SHEET – CATEGORY >

FIXINGS, SPACERS & STOPS







Images	TDS Part Numbers & Description	OE References
	<p>ASY070 BUMP STOP ASSY</p>	<p>0102437 <i>Deans</i></p>
	<p>CAP001A 35mm RD END CAP BLACK (FITTED TO TDS L500-05 BRG ASSY)</p>	<p>CAP001A <i>TDS</i> 6690818N00 32450049</p>
	<p>CAP009 M16x40 BLACK NUT CAP</p>	<p>CAP009 <i>TDS</i> (ISAF DOOR GUIDE SPINDLE OPTARE VEHICLES) AM450117</p>
	<p>CAP016 NEOPRENE CAP – ½” CAP017 NEOPRENE CAP – 5/16” WILL FIT OVER M8 HEX HD SCREW</p>	<p>046458 <i>Deans</i> CAP017 <i>TDS</i></p>
	<p>CIR001A CIRCLIP INTERNAL 1300-34 (34mm dia bore)</p>	<p>205074 <i>Peters</i> DEP-00156</p>
	<p>CIR002A EXTERNAL E CIRCLIP N1500-0050 CIR003A EXTERNAL E CLIP D1500-0090</p>	<p>205105 <i>Peters</i> DEP-00239 32450048 205108 <i>Peters</i></p>

	<p>CIR007A HINGE PIN E CLIP</p> <p>CIR008A EXTERNAL E CIRCLIP D1500-0120</p>	<p>CIR007A TDS</p> <p>205110 Peters 32450049</p>
	<p>CIR009A EXTERNAL CICLIP 1400-3/8</p> <p>(USED ON DEANS 16DIA DOOR GUIDE SPINDLES)</p>	<p>070002 Deans 75-19627 Deans</p> <p>DED-00017 66902888</p>
	<p>GDE001A GUIDE SHOE</p>	<p>GDE001A TDS (ALL TREKA BUS VEHICLES)</p> <p>DT565000/25 33-11126</p>
	<p>L500-50-01/2/3 ACTIVE BUMP STOP ASSY BLACK = 01 CREAM = 02 BLUE = 03</p>	<p>H102672 Deans L500-50-01/2/3 TDS</p> <p>DEP-103306 32450035 29450035</p>
	<p>L500-012 DOOR STOP COLLAR (PAINTED BLACK) Ø20x19xM8</p>	<p>L500-12 TDS</p> <p>32450041</p>
	<p>NUT-Q-02 M6 DOOR BARREL NUT</p>	<p>200398 Peters</p> <p>DAE565 88-11230</p>
	<p>NUT7-16HN-MS LOCK NUT FOR UNIBALL E13306</p>	<p>E16422 Deans</p> <p>NHUT-0725</p>

	<p>NUT05-HN-MS M5 HEX NYLOC NUT NUT08-HN-MS M8 HEX NYLOC NUT</p>	<p>071002 <i>Deans</i> 071007 <i>Deans</i></p>
	<p>NUT12-HH-MS M12 HALF HEX NUT NUT16-HH-MS M16 HALF HEX NUT</p>	<p>204221 <i>Peters</i> 071041 <i>Deans</i> 071082 <i>Deans</i> 69L0020 DEP103317</p>
	<p>NUTSP-05 CHROME 1/2" STARLOCK WASHER</p>	<p>044066 <i>Deans</i></p>
	<p>NUTSP-06 M4 TURN BUCKLE WITH RH & LH THREADS</p>	<p>400193 <i>Deans</i></p>
	<p>PIN001 M5x50 grooved spring pin</p>	<p>214510 <i>Peters</i></p>
	<p>PIN002 M3x40 grooved spring pin</p>	<p>214511 <i>Peters</i></p>
 <p>PIN003A</p>	<p>PIN003A M1.5x12 SPRING PIN</p>	<p>PIN003A <i>TDS</i></p>

	<p>PIN010A M3x20 SPIROL PIN BZP</p>	<p>PIN010A TDS</p>
	<p>PLG001A SABOT DOME PLUG</p>	<p>PLG001A TDS 29455081</p>
	<p>PLG002A BLACK DOME PLUG (ATF STRIKER & HANDRAIL LOCKNUT ACCESS)</p>	<p>PLG002A TDS 32450051 29450019</p>
	<p>PLG005 5DIA NYLON PLUG - DEANS KKT</p>	<p>0100603 Deans</p>
	<p>PLG011B M6x27 FIRTREE BUTTON BLACK</p>	<p>215144 Peters DEP-00135 32450050</p>
	<p>PP004-NY CLUTCH PIN NYLON</p>	<p>PP004-NY TDS</p>
	<p>SCR001A M12x35mm HXHD SPL SCREW</p>	<p>215553 Peters 69L0016</p>

	<p>SCR009 WOODRUFF KEY</p>	<p>0102432 <i>Deans</i></p>
	<p>SCR100610MA8 M6x10 SLOT-MUSHROOM HD BLACK NYLON SCREW</p>	<p>SCR100610MA8 <i>TDS</i></p>
 <p>SCR11225-A1</p>	<p>SCR11225-A1 M12x25 HEX HEAD SCREW</p>	<p>204358 <i>Peters</i></p> <p>DEP-00114 DEP103314</p>
	<p>SCR20816-A2 M8x16 BUTTON HD SOC SCREW</p> <p>SCR20820-A2 M8x20 BUTTON HD SOC SCREW</p> <p>SCR21045-A2 M10x45 BUTTON HD SOC SCREW</p>	<p>073031 <i>Deans</i> DEP103283</p> <p>073030 <i>Deans</i> DEP103284</p> <p>037172 <i>Deans</i> 16R0114 66902855</p>
	<p>SCR30330-A2 M3x30 SOC SCREW BZP</p>	<p>SCR30330-A2 <i>TDS</i></p>
	<p>SCR30816-A4 M8x16 SOC HD SCREW</p> <p>SCR30820-A4 M8x20 SOC HD SCREW</p>	<p>073053 <i>Deans</i> 669082913</p> <p>SCR30820-A4 <i>TDS</i> DEV-00077</p>
	<p>SCR30875M-A4 M8x75 SOC BOLT</p>	<p>H103925 <i>Deans</i></p>

 <p>SCR31460-A4</p>	<p>SCR31460-A4 M14x60 SOC HD SCREW (TDS IG DOORSHAFTS)</p>	<p>SCR31460-A4 TDS</p> <p>29450017</p>
	<p>SCR41640-A2 M16x40 SOC HD SHOULDER BOLT x M12 (REAR IG CYLINDER SECURE)</p>	<p>SCR41240-A2 TDS</p> <p>32450029</p>
	<p>SCR50508-A1 M5x8 CSK SOC HD SCREW</p> <p>SCR50640-A1 M6x40 CSK SOC HD SCREW</p> <p>SCR50660-A1 M6x60 CSK SOC HD SCREW</p>	<p>SCR50508-A1 TDS</p> <p>SCR50640-A1 TDS</p> <p>SCR50660-A1 TDS</p>
	<p>SCR50820-A5 M8x20 CSK SOCKET SS SCREW</p> <p>SCR50825-A5 M8x25 CSK SOCKET SS SCREW</p>	<p>204730 Peters</p> <p>073701 Deans</p> <p>0110322 Deans</p> <p>204730 Peters</p> <p>204730</p>
 <p>SCR70625 PA1</p>	<p>SCR70625-PA1 M6x25 PAN TAPTITE SCREW</p>	<p>SCR70625-PA1 TDS</p>
	<p>SCR80616CA10 No6x5/8" CSK POZI BLK (BUTTON FIXING SCREW)</p>	<p>SCR80616CA10 TDS</p>

	<p>SCR80809PA-10 No8x3/8" SELFTAP PAN POZI BLK</p>	<p>SCR80809PA-10 TDS</p>
 <p>SCR81020-FA1</p>	<p>SCR81020-FA1 No10x3/4" SELFTAP FLANGED SCREW</p>	<p>SCR81020-FA1 TDS DEP103339</p>
 <p>SCR81025-PA1</p>	<p>SCR81025-PA1 No10x1" SELFTAP PAN SCREW</p>	<p>SCR81025-PA1 TDS</p>
 <p>SCR81220-PA1</p>	<p>SCR81220-PA1 No12x3/4" SELFTAP PAN SCREW</p>	<p>SCR81220-PA1 TDS DEP103290</p>
 <p>SCR90606-C2</p>	<p>SCR90606-C2 M6x6 GRUB SCREW</p>	<p>SCR90606-C2 TDS 32450063</p>
	<p>SPA007 DEANS BRACKET SPACER</p>	<p>H102218 Deans</p>
 <p>SPA008</p>	<p>SPA008 ADAPTOR RING FOR LINAK MOTOR INSIDE CRK031</p>	<p>215744 Peters</p>



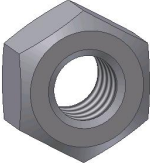
	<p>SPA010 Ø14.0 BORE x 13.0 PIVOT SPACER</p>	<p>E24527 <i>Deans</i></p>
	<p>SPA011 Ø14.0 BORE x 10.0 PIVOT SPACER</p>	<p>E26099 <i>Deans</i></p>
	<p>SPA012 Ø12.7 BORE x 7.5 PIVOT SPACER</p>	<p>025071 <i>Deans</i></p>
	<p>SPA027 ALUM M8 SPACER</p>	<p>H101626 <i>Deans</i></p>
	<p>SPA029 REAR MOUNTING SPACER COLLAR (To take Ø12x40 pins PVP005)</p>	<p>214666 <i>Peters</i></p>
	<p>SPA030-45 M8x45 M-F SPACER</p>	<p>215705 <i>Peters</i></p> <p style="text-align: right;">DEP-00482</p>
	<p>SPA032 LINAK INTERFACE PLATE</p>	<p>SPA032 <i>TDS</i></p>

	<p>SPA034 RUBBER LOCK BRACKET SPACER (used with glass mounted lock handle HDL039T/ANC001)</p>	<p>SPA034 TDS</p> 
	<p>SPA035 =1xSPACER – Deans. used as a pair</p>	<p>0104558 Deans</p>
	<p>SPA037 REAR PIVOT BEARING SPACER</p>	<p>0106981 Deans</p>
	<p>SPL001A CAP NUT</p>	<p>201351 Peters</p> <p>DAE560 33-11119</p>
 <p>STP001A</p>	<p>STP001A STOP COLLAR LONG Ø20x30xM8</p>	<p>216267 Peters</p>
	<p>STP002 M6x20(16) STP003 M10x60(25) STP004 M8x60(22)</p> <p>STP012 M16x90(22) RUBBER STOP (USED ON DEANS PS)</p>	<p>STP002 TDS</p> <p>STP003 TDS</p> <p>STP004 TDS</p> <p>H102289 Deans</p>

	<p>STP010 ACTIVE STRIKER (TDS IG DOORSHAFT)</p>	<p>STP010 TDS 29450018</p>
	<p>STP013 Ø25 RUBBER STOP M12x1.75 x 60 STUD</p>	<p>STP013 TDS</p>
	<p>WAS03RT-01 M3 SELF RETAIN WASHER</p>	<p>215537 Peters</p>
	<p>WAS03SH-J1 M3 SHAKEPROOF WASHER</p>	<p>WAS03SH-J1 TDS</p>
	<p>WAS06PL-M2 M6x30 DIA WASHER</p>	<p>WAS06PL-M2 TDS</p>
	<p>WAS08PL-A1 M8 PLAIN FORM A WASHER</p>	<p>WAS08PL-A1 TDS</p>
	<p>WAS08SP-B1 M8 SPRG RECT WASHER</p>	<p>WAS08SP-B1 TDS DEP103285</p>

 <p>068005</p> <p>WAS9.7PL-SP2</p>	<p>WAS9.7PL-SP2 THRUST RACE WASHER</p>	<p>068005 <i>Deans</i></p>
	<p>WAS10PL-A1 M10 PLAIN FORM A WASHER</p> <p>WAS12PL-A1 M12 PLAIN FORM A WASHER</p>	<p>298163 <i>Peters</i></p> <p>203860 <i>Peters</i></p>
	<p>WAS12PL-B1 M12 PLAIN FORM B WASHER</p> <p>WAS12PL-C1 M12 PLAIN FORM C WASHER</p> <p>WAS12PL-G1 M12 PLAIN FORM G WASHER</p>	<p>203866 <i>Peters</i></p> <p>WAS12PL-C1 <i>TDS</i> DEP-00115 DEP103315</p> <p>204041 <i>Peters</i> DEP-00222 DEP103316</p>
	<p>WAS12PL-G8 M12 NYLON 2.5 WASHER</p>	<p>203937 <i>Peters</i></p>
	<p>WAS12PL-S1 HINGE THRUST WASHER</p>	<p>WAS12PL-S1 <i>TDS</i></p>
 <p>WAS12SP-B1</p>	<p>WAS12SP-B1 WASHER M12 SPRING RECT</p>	<p>203924 <i>Peters</i></p>

	<p>WAS12WA-A5 WAVEY WASHER</p>	<p>215552 <i>Peters</i></p> <p>32450069</p>
	<p>WAS18PL-M8 M18 NYLON 1.6 WASHER</p>	<p>216029 <i>Peters</i></p>
	<p>WAS3-4PL-G8 WASHER 3/4 ID NYLON x2 THK</p>	<p>214663 <i>Peters</i></p>
	<p>A208 NUT DIN 934 M10 ZP</p>	<p>A208 <i>Ventura</i></p> <p>DED-00180 6690829S01 DP039834</p>
	<p>A222 RETAINING RING DIN 471 A12</p>	<p>A222 <i>Ventura</i></p> <p>DED-00307 42-5145-222</p>
	<p>A249 M8 DIN125A WASHER ZP</p>	<p>A249 <i>Ventura</i></p> <p>DED-00145 42-5145-020</p>
	<p>A473 NUT DIN 985 M5 A2</p>	<p>A473 <i>Ventura</i></p>
	<p>A497 ELBOW CONN TUBE 6-1/4 WABCO</p>	<p>A497 <i>Ventura</i></p> <p>DEV-00166 6690815F75</p>

	<p>A696 BOLT DIN 933 M6x16 DM</p>	<p>A696 <i>Ventura</i></p> <p>DED-00310</p>
	<p>A732 WASHER DIN 125A M6 ZP</p>	<p>A732 <i>Ventura</i></p>
	<p>A735 NUT M16x1.5</p>	<p>A735 <i>Ventura</i></p> <p>DEV-00171 6690801F117</p>
	<p>A741 CABLE FIXER 4mm</p>	<p>A741 <i>Ventura</i></p> <p>DEV-00273 DP736837</p>
	<p>A757 RETAINING RING DIN 471 A15 x 1 ST</p>	<p>A757 <i>Ventura</i></p> <p>DED-00308 6690804N33</p>
	<p>A760 BOLT M6x16 ZP</p>	<p>A760 <i>Ventura</i></p> <p>DED-00171 6690801F117</p>
	<p>A763 WASHER DIN 125A M10 NYLON</p>	<p>A763 <i>Ventura</i></p> <p>DEV-00391</p>
	<p>A764 NUT DIN 934 M6 ZP</p>	<p>A764 <i>Ventura</i></p> <p>DED-00220</p>

	<p>A767 BOLT DIN 933 M6x25 ZP</p>	<p>A767 <i>Ventura</i> DED-00347 DP733700</p>
	<p>A768 BOLT DIN 933 M8x16 ZP</p>	<p>A768 <i>Ventura</i> DED-00309 DP736436</p>
	<p>A775 BOLT M10x20 ZP</p>	<p>A775 <i>Ventura</i> DED-00212</p>
	<p>A808 NUT DIN 934 M8 DM</p>	<p>A808 <i>Ventura</i> DEV-00164 DEV-00379 66903818</p>
	<p>A839 SCREW DIN 7991 M5x10 ZP</p>	<p>A839 <i>Ventura</i> DED-00252</p>
	<p>A845 BOLT DIN 933 M8x20 DM</p>	<p>A845 <i>Ventura</i> DED-00223 6690836S01</p>
	<p>A851 NUT DIN 934 M5 ZP</p>	<p>A851 <i>Ventura</i> DEV-00368</p>
	<p>A889 DOORSTOP</p>	<p>A889 <i>Ventura</i> 6690811L010</p>


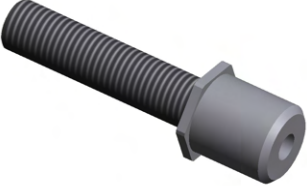
	<p>A891 BOLT DIN 912 M6x20 DM</p>	<p>A891 <i>Ventura</i> DED-00142 42-5145-016</p>
	<p>A898 WASHER DIN 125A M5 A2</p>	<p>A898 <i>Ventura</i> DED-00348 DP733701</p>
	<p>A988 BOLT DIN 912 M5x20 A2 B492 NUT DIN 912 M5x12 A2</p>	<p>A988 <i>Ventura</i> B492 <i>Ventura</i> DP733716</p>
	<p>B326 BOLT M6x30 B486 BOLT M10x30</p>	<p>B326 <i>Ventura</i> DED-00131 42-5145-010 B486 <i>Ventura</i> DED-00394 6690823D237</p>
	<p>B325 CIRCLIP DIN 471 10x1 A2</p>	<p>B325 <i>Ventura</i> DED-00312 DP737055</p>
	<p>B494 NUT DIN 985 M8 ZP</p>	<p>B494 <i>Ventura</i> 6690824S01</p>
	<p>B585 PIVOT BOLT M6</p>	<p>B585 <i>Ventura</i></p>
	<p>B666 BOLT DIN 933 M8x25 ZP</p>	<p>B666 <i>Ventura</i> DEV-00198 6690821S01</p>

	<p>B706 PS ROLLER BOLT M10x40</p>	<p>B706 <i>Ventura</i> DED-00247 42-5145-706</p>
	<p>B713 NUT DIN 934 M8 L ZP</p>	<p>B713 <i>Ventura</i> DED-00201</p>
	<p>B969 BOLT M10x25 ZP</p>	<p>B969 <i>Ventura</i> DED-00313</p>
	<p>C242 WASHER DIN 9021 M6 A2</p>	<p>C242 <i>Ventura</i> DP733698</p>
	<p>C252 BOLT DIN 912 M5x50 A2</p>	<p>C252 <i>Ventura</i> DED-00237 DP737052</p>
	<p>C272 HANDRAIL NYLON CAP</p>	<p>C272 <i>Ventura</i> DED-00505 6690810N00</p>
	<p>C397 SCREW DIN 7981 ST4 8x25 A4</p>	<p>C397 <i>Ventura</i> DEV-00126 6690834S01</p>
	<p>C456 Screw Din 916 M8x10 ZP</p>	<p>C456 <i>Ventura</i> DEV-00376 6690806N26</p>

	<p align="center">C492 VIBRATION DAMPER 20x15</p>	<p align="center">C492 <i>Ventura</i></p> <p align="right">DED-00138 42-5145-166 1780300</p>
	<p align="center">C506 BOLT DIN 912 M6x50 DM</p>	<p align="center">C506 <i>Ventura</i></p> <p align="right">DED-00238 DP737053</p>
	<p align="center">D326 SPACER RING D=21 POM</p>	<p align="center">D326 <i>Ventura</i></p> <p align="right">DED-00297 DP737054</p>
	<p align="center">D452 BOLT DIN 933 M8x12 ZP</p>	<p align="center">D452 <i>Ventura</i></p> <p align="right">DEV-00393 42-5145-021</p>
	<p align="center">D539 PS DOOR ARM TORX FIXING M12x30</p>	<p align="center">D539 <i>Ventura</i></p> <p align="right">DED-00134 42-5145-014 32455028</p>
	<p align="center">D760 PS ROLLER SPACER 16/10</p> <p align="center"># ROLLER + H750, SECURE BOLT B706</p>	<p align="center">D760 <i>Ventura</i></p> <p align="right">DED-00262 6690816D31 42-5145-760 1780494</p>
	<p align="center">D806 BOLT DIN 912 M6x12 DM</p>	<p align="center">D806 <i>Ventura</i></p> <p align="right">DEV-00162 DP733705</p>
	<p align="center">D870 SK LOCKING DISK SPRING M8</p>	<p align="center">D870 <i>Ventura</i></p> <p align="right">DED-00513 6690801N26 6690804N41</p>

	<p>D978 SPACER SHAFT</p>	<p>D978 <i>Ventura</i></p>
	<p>E009 SK LOCKING DISK M6</p>	<p>E009 <i>Ventura</i> DED-00326 6690801F84</p>
	<p>E010 LOCKING DISK</p>	<p>E010 <i>Ventura</i> DED-00327 6690830S01</p>
	<p>E092 NUT DIN 439B M8 ZP</p>	<p>E092 <i>Ventura</i> DEV-00399 6690817D237</p>
	<p>E234 LUBRICATOR NIPPLE M6-180</p>	<p>E234 <i>Ventura</i> DED-00328</p>
	<p>E240 NUT 3xD M5</p>	<p>E240 <i>Ventura</i> 33-11194-1</p>
	<p>E241 SCREW DIN 963 M5x25 BLACK</p>	<p>E241 <i>Ventura</i></p>
	<p>E322 Locking Collar</p>	<p>E322 <i>Ventura</i></p>
	<p>E478 BOLT DIN 931 M8x110 ZP</p>	<p>E478 <i>Ventura</i> 6690813S01 DEV-00306 6690807S01</p>

	<p>E567 WASHER M5 A2</p>	<p>E567 <i>Ventura</i> DEV-00283</p>
	<p>E692 BOLT DIN 912 M8x35 ZP</p>	<p>E692 <i>Ventura</i> 6690828237</p>
	<p>F010 SPACER 19-15 L=5</p>	<p>F010 <i>Ventura</i> DEV-00366 6690809N127</p>
	<p>F033 SCREW DIN 916 M10x20 ZP</p>	<p>F033 <i>Ventura</i></p>
	<p>F534 BOLT M8x18 ZP</p>	<p>F534 <i>Ventura</i></p>
	<p>F591 NUT DIN 933 M6x12 ZP</p>	<p>F591 <i>Ventura</i> DP733718</p>
	<p>F693 SCREW DIN 7380 TX M8x16 DP</p>	<p>F693 <i>Ventura</i></p>
	<p>F716 BOLT DIN 931 M8x100 ZP</p>	<p>F716 <i>Ventura</i></p>





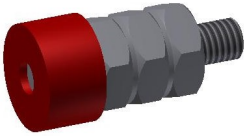


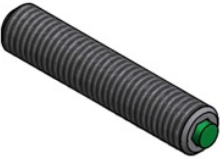
	<p>G112 BOLT DIN 912 M5x16 A2</p>	<p>G112 <i>Ventura</i> DP733708 DEV-00309</p>
	<p>G202 RUBBER ENDSTOP</p>	<p>G202 <i>Ventura</i> DEV-00016 6690822D177</p>
	<p>G260 CABLE CLAMP</p>	<p>G260 <i>Ventura</i></p>
	<p>G419 SK LOCKING DISK M5</p>	<p>G419 <i>Ventura</i> DEV-00362 6690822S01</p>
	<p>G613 BLIND RIVET NUT</p>	<p>G613 <i>Ventura</i> DEV-00135 6690808N00</p>
	<p>G756 RETAINING CLIP (F681 SHAFT ARM BEARING)</p>	<p>G756 <i>Ventura</i> DED-00501 6690800N226</p>
	<p>G932 IG HANDRAIL BOLT</p>	<p>G932 <i>Ventura</i> DED-00481 669003F60</p>
	<p>H047 IG3 DOORSHAFT HEIGHT ADJUSTER</p>	<p>H047 <i>Ventura</i> DEV-00879 6690807N39</p>

	<p>H110 PIN</p>	<p>H110 <i>Ventura</i></p>
	<p>H114 SK LOCKING DISK M16</p>	<p>H114 <i>Ventura</i> DEV-00169 6690802F117</p>
	<p>H119 IG DOOR MECH SPACER 30mm</p>	<p>H119 <i>Ventura</i> DED-00511 6690801F75 6690800N127</p>
	<p>H166 SCREW DIN 7981 ST4 8x16 C-H DP</p>	<p>H166 <i>Ventura</i> DEV-00426</p>
	<p>H425 M8x35 HEX HD SCREW 8.8 BZP</p>	<p>H425 <i>Ventura</i> DEV-00176 DP736922</p>
	<p>H470 IG PRECISION BOLT LOW</p>	<p>H470 <i>Ventura</i> FXM-00128 6600030N33</p>
	<p>H671 SCREW M8x25 TORX ZP</p>	<p>H671 <i>Ventura</i> 6690802N26</p>
	<p>H699 SCREW M8x16 TORX ZP</p>	<p>H699 <i>Ventura</i> DED-00440 6690803N26</p>

	<p style="text-align: center;">H832 SCREW M5x8 WITH FLANGE A2</p>	<p style="text-align: right;">H832 <i>Ventura</i> DEV-00183 6690825D177</p>
	<p style="text-align: center;">H901 IG HANDRAIL PLASTIC SPACER</p>	<p style="text-align: right;">H901 <i>Ventura</i> DED-00480 6690002F60</p>
	<p style="text-align: center;">H916 SCREW DIN 7981 ST4.2x13 C-H DP</p>	<p style="text-align: right;">H916 <i>Ventura</i></p>
	<p style="text-align: center;">I020 WASHER SPECIAL M8 (FOR GUIDE SPINDLES)</p>	<p style="text-align: right;">I020 <i>Ventura</i> DEV-00367 6690806N127</p>
	<p style="text-align: center;">I024 SCREW DIN 7380 10 9TX M8x30 DM</p>	<p style="text-align: right;">I024 <i>Ventura</i> DEV-00100 6690806N127</p>
	<p style="text-align: center;">I221 IG3 PIVOT SPACER RING (DOORSHAFT ARM)</p>	<p style="text-align: right;">I221 <i>Ventura</i> DEV-00517 6690806N00 1896093</p>
	<p style="text-align: center;">I224 LOCKING NUT M16x1.5</p>	<p style="text-align: right;">I224 <i>Ventura</i> DEA-00270 6690827D31</p>
	<p style="text-align: center;">I242 NUT M10 DIN 439B INOX</p>	<p style="text-align: right;">I242 <i>Ventura</i> DEV-00878</p>
	<p style="text-align: center;">I369 SOFT STOP BUSH PU Ø16Ø6,5 L=16</p>	<p style="text-align: right;">I369 <i>Ventura</i></p>

	<p>I371 PS OVERCENTRE SOFT STOPPER ASSY</p>	<p>I371 <i>Ventura</i> 6690805N33</p>
	<p>I462-001 PU GREEN CORD 2DIA x15MM (POTENTIOMETER BUSH)</p>	<p>I462-001 <i>Ventura</i></p>
	<p>I513 MS BOLT</p>	<p>I513 <i>Ventura</i> DP736462</p>
	<p>I571 PLUG</p>	<p>I571 <i>Ventura</i></p>
	<p>I572 GROMMET 6x9x1.5</p>	<p>I572 <i>Ventura</i> DEV-00296 6690828D237</p>
	<p>I915 BOLT DIN 912 M8x70 ZP</p>	<p>I915 <i>Ventura</i> DEV-00402</p>
	<p>J199 COVERING CAP</p>	<p>J199 <i>Ventura</i> DEV-00174 6690835S01</p>
	<p>J405 PS CATCH BLOCK (BOTTOM SUPPORT)</p>	<p>J405 <i>Ventura</i> 6690803D252 32455002</p>

	<p style="text-align: center;">K684 BOLT DIN 933 M8x14 ZP</p>	<p style="text-align: right;">K684 <i>Ventura</i> DEV-00361 6690820S01</p>
	<p style="text-align: center;">L714 SPACER DIA 20-8.5 L=28.5</p>	<p style="text-align: right;">L714 <i>Ventura</i> DEV-00363 6690823S01</p>
	<p style="text-align: center;">L725 SK LOCKING DISK M8 A4</p>	<p style="text-align: right;">L725 <i>Ventura</i> DEV-00112 DP737059</p>
	<p style="text-align: center;">L812 IG4 DOORSHAFT HEIGHT ADJUSTER M16x100</p>	<p style="text-align: right;">L812 <i>Ventura</i> DEV-00178 6690800F117</p>
	<p style="text-align: center;">L886 IG4 PIVOT POINT BOLT</p>	<p style="text-align: right;">L886 <i>Ventura</i> DEV-00170 6690814F75</p>
	<p style="text-align: center;">M210 SCREW DIN 7380 TX M8x20 DP</p>	<p style="text-align: right;">M210 <i>Ventura</i> DEV-00125 6690833S01</p>
	<p style="text-align: center;">M414 DOOR PROFILE L463 - PLUG FOR SENS EDGE WIRE ENTRY</p>	<p style="text-align: right;">M414 <i>Ventura</i> DEV-00294 6690837S01</p>
	<p style="text-align: center;">M739 SCREW M6x16 TORX BLACK (IG FLAP COVER)</p>	<p style="text-align: right;">M739 <i>Ventura</i></p>

	<p>N860 TOGGLE NUT M8</p>	<p>N860 <i>Ventura</i> DEV-00410 6600031N33</p>
	<p>N944 PLUG FOR HOLE DIA 13 (IG PROFILE)</p>	<p>N944 <i>Ventura</i> DEV-00129 6690831S01</p>
	<p>O689 M16x60(1.5) SOC HD DOORSHAFT SCREW</p>	<p>O689 <i>Ventura</i> DEV-00200</p>
	<p>O697 PS SOFT STOP ASSY (21 Dia x 19mm L)</p>	<p>O697 <i>Ventura</i> 66908100</p>
	<p>O699 PS SOFT STOP ASSY (21 Dia x 37mm L)</p>	<p>O699 <i>Ventura</i> DEV-00264 6690834D31</p>
	<p>Q792 RUBBER LINED 18MM P CLIP</p>	<p>Q792 <i>Ventura</i></p>
	<p>Q916 CATCH BLOCK BENDED DOOR</p>	<p>Q916 <i>Ventura</i> DEV-00152</p>
	<p>S685 PS END STOP ASSY</p>	<p>S685 <i>Ventura</i></p>

	<p>T778 GUIDE SHAFT END STOP</p>	<p>T778 <i>Ventura</i></p>
	<p>VA0134 OVERCENTRE SOFT STOPPER</p>	<p>VA0134 <i>Ventura</i></p>
	<p>VA0772 GUIDE RING (SPIRAL CABLE)</p>	<p>VA0772 <i>Ventura</i></p>
	<p>VC0950 OBSTRUCT TEST TOOL</p>	<p>VC0950 <i>Ventura</i> 6690819L010</p>

ALL OTHER COMMON DOOR RELATED FIXINGS AVAILABLE, A SELECTION ONLY IS SHOWN HERE.
PLEASE ENQUIRE AS REQUIRED.