


EWL211-04F




LINAK- Peters Electric Drive.

SET UP FOR PETERS DRIVE UNITS ONLY

IMPORTANT: MOTOR MUST SHUT OFF SAME TIME AS DOOR FULLY CLOSED OR OPEN POSITION DO NOT LET MOTOR RUN ON

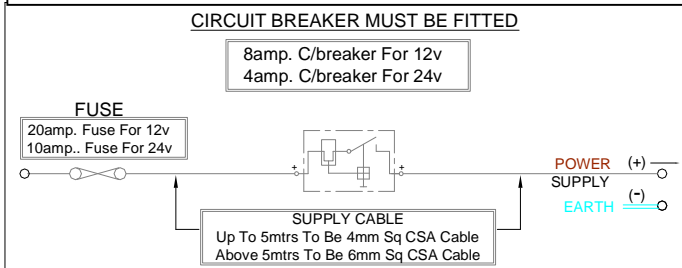


IMPORTANT: CHECK POWER SUPPLY REQUIREMENTS. CIRCUIT BREAKER FITTED AND WORKING WHEN INSTALLING NEW MOTOR

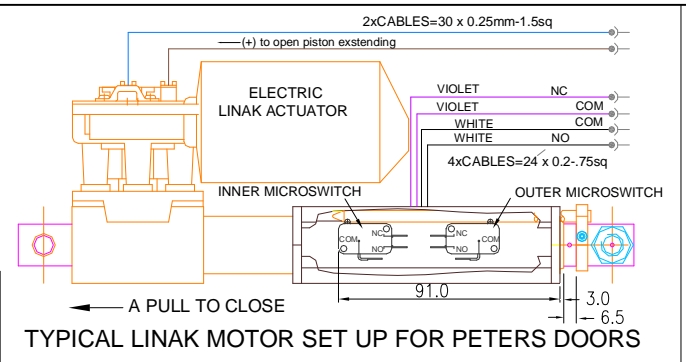


MICRO-SWITCH SET UP'S. ALL SHOWN THE RAM AS A PULL TO CLOSE ACTION
S1= SIGNAL FROM OPEN CONTROL BUTTON. S2= SIGNAL FROM CLOSE CONTROL BUTTON

PETERS With a 3-Relay (PCRB) & DEANS With a 2-Relay Systems.

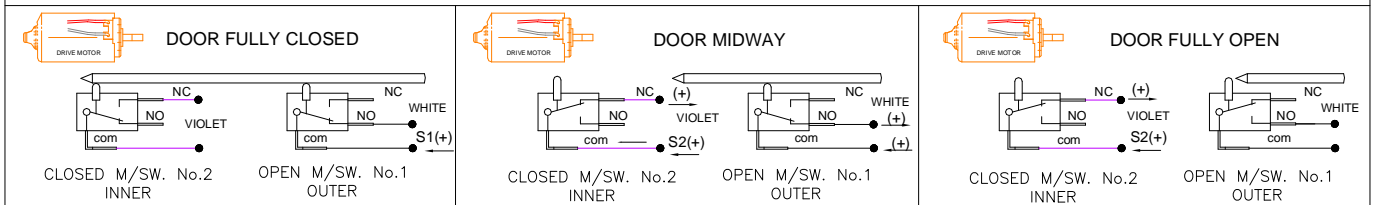

PETERS With a PCD Control Box 216774 System.

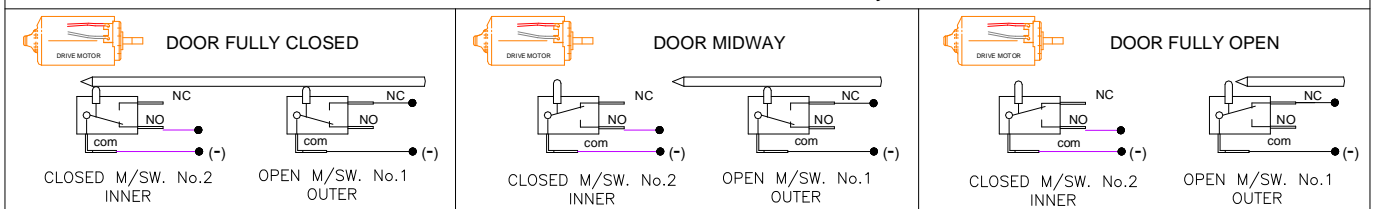

MICRO SWITCH
ELE028H



MOTOR
ELE004A=12v
ELE005A=24v



SPINDLE=STROKE
ELE006A=100 Braked
ELE007A=200 None braked
ELE034A=150 None braked



M-SWITCHES + HOUSING
ELE001A=100
ELE002A=200
ELE003A=150

