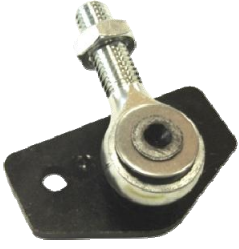
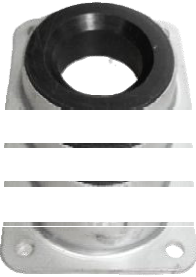
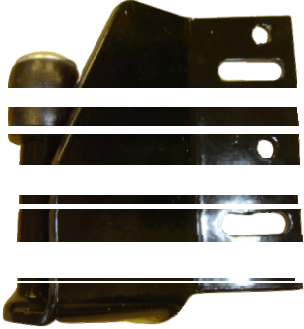


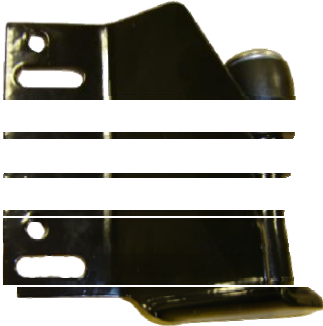
TDS PRODUCT IMAGE SHEET – CATEGORY >		
BEARINGS, BUSHES & ROLLERS		
Images	TDS Part Numbers & Description	OE References & (WHERE FITTED)
	ASY001B BOTTOM BEARING ASSY - Ø22mm ROLLER	215311 <i>Peters</i> 33-11130 DP038157 DEP-00014 DEP-0007
	ASY002B BOTTOM BEARING ASSY - Ø25mm ROLLER	218065 <i>Peters</i> 108377 DEP-00388 DEP-00410
	ASY003B UNIVERSAL GUIDE SPINDLE LONG Ø30 ROLLER (ADJUSTMENT 60mm MIN > 73mm MAX)	H102250 <i>Deans</i> H105408 <i>Deans</i> 216292-KIT <i>Peters</i> DEP-00016 33-11134 DP038158
	ASY004B UNIVERSAL GUIDE SPINDLE SHORT Ø30 ROLLER (ADJUSTMENT 48mm MIN > 60mm MAX)	216264-KIT <i>Peters</i> 0123268 <i>Deans</i> H102249, 106070 033889B-10A 32450040 6690802N12 DEP-00066

	ASY005A BOTTOM BEARING ASSY – Ø32mm ROLLER	ASY005A <i>TDS</i>
	ASY006B INLINE BOTTOM BEARING – Ø25mm ROLLER	75-22155 <i>Deans</i> <i>DED-0100A</i>
	ASY007A INLINE BOTTOM BEARING – Ø22mm ROLLER	215144 <i>Peters</i> <i>117663</i>
	ASY008A INLINE BOTTOM BEARING – Ø32mm ROLLER	D21059 <i>Deans</i>
	ASY009B SOLO INLINE BOTTOM BEARING – Ø25mm ROLLER	ASY009B <i>TDS</i> <i>6690833N00</i> <i>16R0241</i>
	ASY010A SOLO INLINE BOTTOM BEARING – Ø32mm ROLLER	032024+5 <i>Deans</i> <i>227681</i> <i>16R0016</i> <i>16R0017</i>

	ASY011A M12x1.75 SPH PIVOT PLATE ASSY # RODEND = BRG010B	022680 <i>Overton</i> 03717B-7 <i>Overton</i> 42-5093820
	ASY013A TRI BOTTOM BEARING – Ø25mm ROLLER	C25245 <i>Deans</i> 66900013 DP038159
	ASY014A TRI BOTTOM BEARING – Ø32mm ROLLER	C23262 <i>Deans</i> C23632 <i>Deans</i> C44067 <i>Deans</i> DP038165 6690802F01
	ASY015A LONG INLINE BOTTOM BEARING – Ø22mm ROLLER	215957 <i>Peters</i> 215958 <i>Peters</i> Alt to 12649.00.0 <i>Isaf</i> 69L0008 69L0009
	ASY017T UNIVERSAL GUIDE PIN LONG (ADJUSTMENT 60mm MIN > 73mm MAX)	ASY017T <i>TDS</i>

	ASY018A M12x1.75 SPH PIVOT PLATE ASSY # RODEND = BRG010B	024820 <i>Overton</i>
	ASY019A Ø 10 SPH BEARING PLATE ASSY	045470 <i>Deans</i> D34018 <i>Deans</i> 031821 <i>Deans</i> 66132870 DP038168
	ASY020A M12x1.75 SPH PIVOT PLATE ASSY Off set by 13mm # RODEND = BRG010B # PLATE = PLT003A	100-0034-KIT <i>Peters</i> DP038194 DEP-00359 DEP-00046
	ASY023T SPINDLE ASSY LONG=M16x97 Ø32 ROLLER	026426 Assy <i>Deans</i> 70-0066-000

	ASY024T SPINDLE ASSY SHORT =M16x71 Ø32 ROLLER	026425 Assy <i>Deans</i>
	ASY029A M14 SPH BOTTOM ASSY 35mm HGT # BEARING = BRG021B # BRACKET = BRK021	216760-ASY <i>Peters</i> DEP-00153
	ASY030A M14 SPH BOTTOM ASSY 24mm HGT BRG021B # BEARING = BRG021B # BRACKET = BRK022	217631-ASY <i>Peters</i>
	ASY031 Ø22 BEARING HOUSING ASSY # BEARING = BRG001A	205580+90 <i>Peters</i>
	ASY032T SPINDLE ASSY M12x64 Ø30 ROLLER # SEE SPL015 = SPINDLE SEPARATELY	022648= <i>Overton</i> ASY032T <i>TDS</i>
	ASY033 RH SIDE No1 DOOR MOUNTED BOTTOM BEARING ASSY Ø32 ROLLER (RLR003A)	0101567 <i>Deans</i> 6601007N00

	ASY034 LH SIDE No2 DOOR MOUNTED BOTTOM BEARING ASSY Ø32 ROLLER (RLR003A)	0101568 <i>Deans</i> 6601008N00
	ASY035T DOOR GUIDE SPINDLE Ø30x 94mm. M10 FIXING OFF SET	<i>Bode</i>
	ASY040 BOTTOM BEARING BRACKET Ø12 SPH BEARING (BRG046=12x22x7) KKT=Door System	H102923 <i>Deans</i> 6690803N13
	ASY043 LH GUIDE BRKT+SPINDLE ASSY (LONG) # BRACKET = BRK054 # SPINDLE = ASY003B	0104967 <i>Deans</i>
	ASY044 RH GUIDE BRKT+SPINDLE ASSY (LONG) # BRACKET = BRK055 # SPINDLE = ASY003B	0104968 <i>Deans</i>

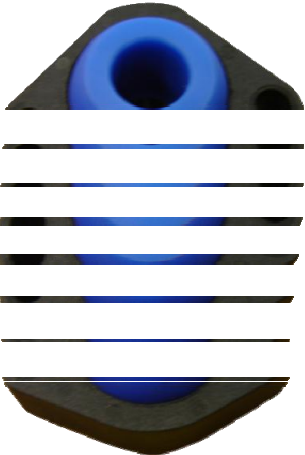
	ASY065 SPINDLE ASSY LONG =M16x97 Ø35 ROLLER	ISAF (OPTARE VERSA)
	ASY072T SPINDLE ASSY SHORT =M16x105 Ø32 ROLLER	***** <i>Deans</i> Use on Dennis trident
	BRG001A PLAIN NYLON BEARING Ø22mm Bore Ø38.5mm O/D x 14mm	205580 <i>Peters</i>
	BRG002A TOP HAT NYLON FLANGE BEARING Ø22mm Bore	200377 <i>Peters</i> DEP-00345 DP038178
	BRG003A PLAIN NYLON BEARING Ø25mm BORE Ø39mm O/D x 25mm	201421 <i>Peters</i>
	BRG004B OILTE BEARING BUSH I/D 3/4"x 7/8"x 1"	203327 <i>Peters</i>

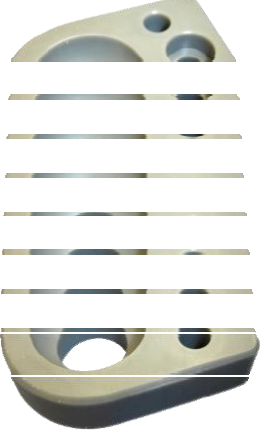
	BRG007B M12x1.25 RH FEMALE RODEND	BRG007B TDS
	BRG008B M10x1.5 LH MALE RODEND	203280 Peters B128 Ventura
	BRG009B M10x1.5 RH MALE SPH RODEND	203281 Peters B127 Ventura
	BRG010B M12x1.75 RH MALE SPH RODEND	203286 Peters 049651 Deans 66903241 DEP-00015
	BRG011B M16x1.5 RH FEMALE SPH RODEND	BRG011B TDS

	BRG012B-ASSY 1/2 UNF RH MALE SPH RODEND ASSY	E11311 <i>Deans</i> 66902760 DP038154 16R0032
	BRG013B-ASSY 7/16 UNF RH MALE SPH RODEND ASSY	E13306 <i>Deans</i> DP038155
	BRG014B M12x1.75 LH MALE SPH RODEND	BRG014B <i>TDS</i>
	BRG015B M14x2.0 RH MALE SPH RODEND	BRG015B <i>TDS</i> 6690819N00 16R0289
	BRG016B Ø10 X 8.0 DU BUSH	203323 <i>Peters</i>
	BRG017B M16x2.0 RH MALE SPH RODEND	BRG017B <i>TDS</i>

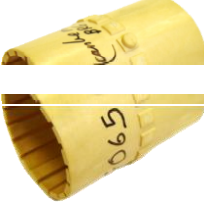
	BRG018B M14x2.0 LH MALE SPH RODEND	BRG018B <i>TDS</i>
	BRG019B Ø 10mm SPH BEARING RACE O/D=26 x 10.5	041339 <i>Deans</i> 669003081
	BRG021B Ø14 SPH BEARING RACE O/D=34x13.5	216767 <i>Peters</i> DEP-00157
	BRG022B Ø25 FLANGED SPH NY-BEARING	0100559 <i>Deans</i> BRG022B <i>TDS</i> 6690802G01
	BRG023B Ø25 FLANGED SPH BEARING	216751 <i>Peters</i> DEP-00203
	BRG024B Ø12 FLANGED NY-BEARING	034616 <i>Deans</i>

	BRG025B $\varnothing 12 \times 12 \times \varnothing 18$ F= $\varnothing 24 \times 3$ OILITE FLANGED BUSH	203352 <i>Peters</i> 33-11137
	BRG026B $\varnothing 12 \times 8 \times \varnothing 18$ F= $\varnothing 24 \times 3$ OILITE FLANGED BUSH	BRG026B <i>TDS</i> 22450046
	BRG027B $\varnothing 6 \times 10$ FLAP NY-FLANGED BUSH	BRG027B <i>TDS</i>
	BRG029B $\varnothing 16 \times 20 \times 18$od NY-SLEEVE CLUTCH BEARING	BRG029B <i>TDS</i>
	BRG030B $\varnothing 12 \times 20 \times 14$od NY-SLEEVE HINGE BEARING	BRG030B <i>TDS</i>
	BRG031B $\varnothing 1/2 \times 1/2$ DU BUSH	200362 <i>Peters</i>

	BRG035 TOP NYLON BEARING	034641 <i>Deans</i> 66902825 DP038188 69F0505
	BRG036 Ø16 FLANGED NY-BEARING ID=16x6 (CYLINDER REAR)	BRG036 <i>TDS</i> (OPTARE OLYMPUS DD)
	BRG037 Ø14 SPH BEARING KGLM-14 OD=28x13.5 (Fits on ASY025)	0100605 <i>Deans</i> 6690823D177
	BRG040D RODEND - PDS CYLINDER PISTON	200362 <i>Peters</i> DEP-00036
	BRG045 STEELBEARING SLEEVE Ø19-16x40 DEANS CYLINDER BRACKET	BRG045 <i>TDS</i>

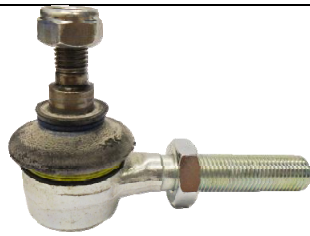
	BRG046 Ø12 SPH BEARING EGLM-12 OD=22x7 (FITS INTO ASY040 & ASY027)	0100606 <i>Deans</i> 6690804N13 16R0228
	BRG048 NYLON SHELFPLATE BEARING	220137 <i>Overton</i> 053571B-5
	BRG049B LOWER DOORLEAF ARM BEARING BLOCK (IGUS)	***** <i>Isaf</i>
	BRG050F RH BEARING PLATE PDS REPLACES OE EXTRUSION PART 	200273 <i>Peters</i> DP038164 DEP-00344
	BRG051F LH BEARING PLATE PDS REPLACES OE EXTRUSION PART 	200274 <i>Peters</i> DP038162 DP038171 DEP-00421

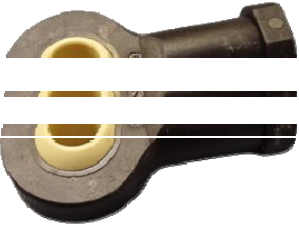
	BRG052 USED TO CONVERT TDS SPH BRG 25mm SHELFPLATE TO STD BRG TOP HAT TYPE 22mm BRG002 FIXING CNTRE=76 x 8.5slots	BRG052 <i>TDS</i> (ELECTRIC FOLDERS)
	BRG055 M14x1.5 MALE xSTUD M10x1.0 FINE THREAD	080071 <i>Deans</i> POST-1995
	BRG056 M18 MALE x STUD=M10x1.5 MALE FINE THREAD B10B	80073 <i>Deans</i> PRE-1995 DED-00113
	BRG057B M6x1.0 RH SPH FEMALE RODEND	D26185 <i>Deans</i> <i>Rodend</i> <i>Only</i> 0103479 <i>Deans</i> (IG)
	BRG058 Ø6 PLUG SLIDER LOWER SHAFT GUIDE RADIAL BEARING Id=6 Od=19 thk=6	0102265 <i>Deans</i> (E200 DEANS PS)

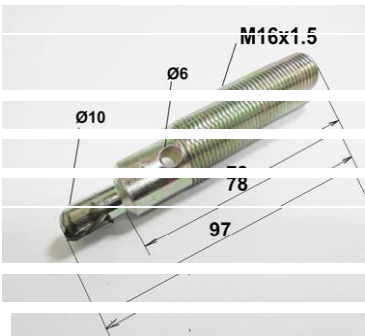
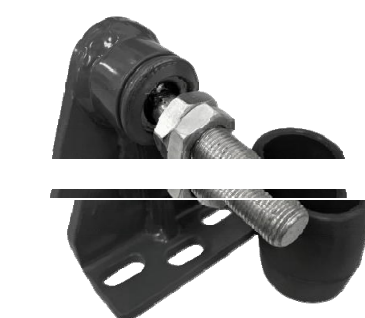
	BRG061B M8 x 1.25 RH MALE SPH RODEND	BRG061B <i>TDS</i>
	BRG062B M8 x 1.25 LH MALE SPH RODEND	BRG062B <i>TDS</i>
	BRG063B M12 X 1.75 RH FEMALE SPH RODEND	BRG063B <i>TDS</i>
	BRG064 Ø16mm DIA SPH BEARING RACE	0100287 <i>Deans</i>
	BRG065 CLOSED SLIDE CARRIAGE BEARING	048492 <i>Deans</i> (E200 DEANS PS)


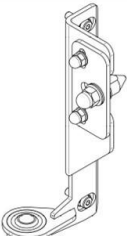
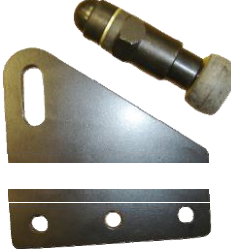
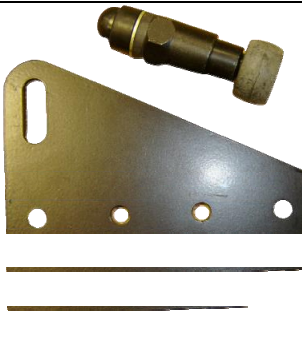
	BRG066 OPEN SLIDE CARRIAGE BEARING	H110116-010675 <i>Deans</i> (E200 DEANS PS)
	BRG068B Ø10 x 6 x 12od NY-SLEEVE	0101454 <i>Deans</i> <i>Plug slider lower arm</i>
	BRG070-01-KIT DOUBLE LINK TRANSVERSE LINK ASSY	H102623 <i>Deans</i> (E200 DEANS PS)
	BRG071 M14 X 1.5 FEMALE TO Ø16 SPH ROD END DEANS USED REDUCER TO Ø16 TO Ø12	0108269 <i>Deans</i> <i>NOW GO TO BRG080</i> M14 X 1.5 FEMALE TO Ø12 SPH ROD END
	BRG072 Ø20 ROLLER BEARING OD=42x12	048484 <i>Deans</i> (E200 DEANS PS ROLLER CARRIAGE)

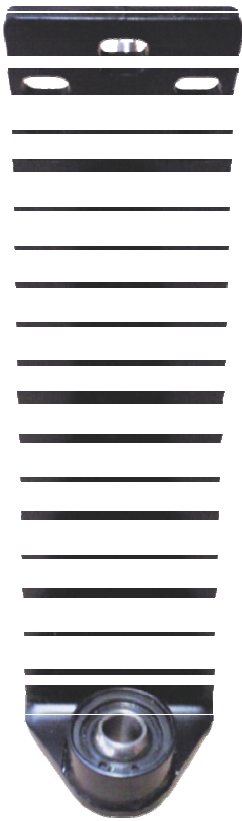
	BRG073-KIT-01 M16x2 to M12x1.75 MALE SPH ROD END WITH FIXINGS (UNIVERSAL PART - PLUG DOOR PIVOT ARMS)	BRG073-KIT-01 TDS # SEE ALSO BRK070-28, RUB045, SAB040
	BRG073-KIT-02 M16x2 to M12x1.75 MALE SPH ROD END WITH FIXINGS (UNIVERSAL PART - PLUG DOOR PIVOT ARMS)	BRG073-KIT-02 TDS
	BRG074 7/16"UNF LH MALE SPH RODEND	E13307 Deans
	BRG075B M12 X 1.75 LH FEMALE SPH RODEND	BRG075B TDS
	BRG076 ALTERNATIVE LINKBALL JOINT FOR TBS12	BRG076 TDS

	BRG077B M10x1.5 RH FEMALE SPH ROD END	BRG077 TDS
	BRG078B M10 X 1.5 LH FEMALE SPH ROD END	BRG078B TDS
	BRG080 M14x1.5 RH FEMALE THREAD TO Ø12 SPH ROD END (Ø16 SPH ROD END WITH REDUCER TO Ø12 SPH)	0108268 Deans
	BRG081B Ø16 x 20 x 22od NY-SLEEVE (CENTRE CRANK ARMS)	BRG081B TDS
	BRG082 M14x1.5 RH MALE TRACK RODEND M10x1.5 STUD	B400007 BCE

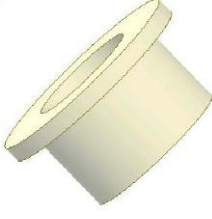
	BRG083 M14x1.5 LH MALE TRACK RODEND M10x1.5 STUD	B400024 <i>BCE</i>
	BRG085 M10 IGUBALL FEMALE RODEND	218058 <i>Peters</i>
	BRG086 BCE PIVOT ARM BALL JOINT ASSY	B600216 <i>BCE</i>
	BRG088 M16x1.5 SPH BRG HINGE ASSY offset 40mm	35111A00 <i>Masats</i>
	BRG090 PIVOT BRACKET & BEARING POST	B705073 <i>BCE</i>
	BRG091 Ø10xØ33.5x39 BEARING BUSH For spring=SPG024 For bearing pin=BRG092	372138A0 <i>Masats</i>

	BRG092 Ø10 BEARING PIN For spring=SPG024 For bearing bush=BRG091	870137C0 <i>Masats</i>
	BRG096 M16x2 BODY-M12x1.75 STUD BALL JOINT	10050.04.0 <i>ISAF</i> (OPTARE VERSA – ISAF DOOR) 29455026
	BRG099 M16x1.5 SPH BEARING HINGE ASSY off set 75mm	35111E00<i>Masats</i>
	BRG100 FEMALE BEARING BUSH	473124B0 <i>Masats</i>
	BRG104 M16x1.5 SPH BEARING HINGE ASSY off set 75mm	35111L00<i>Masats</i>
	BRG105 M16x1.5 SPH BEARING HINGE ASSY off set 48mm	35111F00 <i>Masats</i>

	BRG108B M8x1.25 RH SPH FEMALE RODEND	BRG108B <i>TDS</i>
	DS-H101747 PS BOTTOM BEARING ASSY LH	H101747 <i>Deans</i> (ADL E400 OLDER)
	DS-H101750 PS BOTTOM BEARING ASSY RH	H101750 <i>Deans</i> (ADL E400 OLDER)
	KIT015 IG 3 HOLE DOOR GUIDE BRACKET SPINDLE KIT # BRACKET = BRK026 # SPINDLE = ASY004B	200285/288 <i>Peters</i>
	KIT016 IG 4 HOLE DOOR GUIDE BRACKET SPINDLE KIT # BRACKET = BRK027 # SPINDLE = ASY004B	200298 <i>Peters</i>

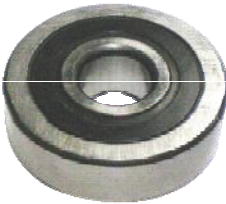
	L500-05-ASSY-01 IG Ø14 UPPER BEARING BRACKET ASSY # BRACKET = L500-05-01 # BEARING = BRG021B # RETAINER CIRCLIP = CIR001A	L500-05-ASSY-01 TDS (ALL OPTARE – TDS DOOR) DP0383826
	L500-09-ASSY-01 IG Ø14 LOWER BEARING BRACKET ASSY # BRACKET = L500-09-01 # BEARING = BRG021B # RETAINER CIRCLIP = CIR001A	L500-09-ASSY-01 TDS (ALL OPTARE – TDS DOOR) 6690832N00
	RLR001A Ø22mm O/DIA X 17mm Ø 12.75mm I/DIA NYLON ROLLER FOR BOTTOM BEARING	205606 Peters 66902499 DEM-00068
	RLR002A Ø25mm O/DIA X 17mm Ø 12.75mm I/DIA NYLON ROLLER FOR BOTTOM BEARING	200435/200547 Peters E22156 Deans 66902177

	RLR003A Ø32mm O/DIA X 17mm Ø 12.75mm I/DIA NYLON ROLLER FOR DEANS BOTTOM BEARING	026437 <i>Deans</i> 66902213
	RLR004A Ø30mm O/DIA X 16mm Ø 12.75mm I/DIA (NYLON ROLLER FOR EARLY PETERS GUIDE SPINDLES)	205751 <i>Peters</i> 215593 <i>Peters</i> DP038161 DEM-00068 DAE550
	RLR005A Ø32mm O/DIA X 17mm Ø 9.65mm I/DIA (NYLON ROLLER FOR DEANS GUIDE SPINDLES)	E32682 <i>Deans</i> 126847
	ROD002-290-01 M12x360CTRS SPH LINK ROD ASSY KIT # OTHER SIZES/RODEND OPTIONS AVAILABLE ON REQUEST	ROD002-290-01 <i>TDS</i>
	A441	A441 <i>Ventura</i> 6690812L010
	A841 Ø10 BEARING ROLLER 6000 LLU. OD=26x8	A841 <i>Ventura</i> DED-00178 42-5145-133

	A925 GUIDE ROLLER LR 202 2RSR o/d=40 x i/d=15 x 11.0	A925 <i>Ventura</i> DED-00187 669082D237
	A937 Ø10 DOOR SPACER ID=10.0x15. OD=15.0 F= Ø20x4	A937 <i>Ventura</i> DED-00177 DP039835
	B253 Ø16 NYLON BEARING BUSH ID=16x22. OD=22 F= Ø30x2.5 (DOORSHAFT TOP ARM)	B253 (P059) <i>Ventura</i> DEV-00006 42-5145-715 6690807N00
	B688 PS PIVOT BOLT 16xM10 (BOTTOM SUPPORT ASSY)	B688 <i>Ventura</i> DED-00205 6690818D31 42-5145-688
	B689 PS SHAFT BEARING BUSH ID=16.5. OD=21-23 LG=24. F= Ø 30x3.0 (ALL PS/RS DOORSHAFTS)	B689 <i>Ventura</i> DED-00204 6690800N33
	B708 Ø12 BEARING BUSH MFM-1216-10 ID=12.5x10. OD=16.25 F=22x2 (RS DOOR MECHANISM)	B708 <i>Ventura</i>

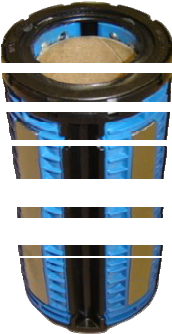
	B711 M8x1.25 RH MALE SPH RODEND (BRONZE BUSH) (PS CONNECTOR RODS)	B711 <i>Ventura</i> BRG061 <i>TDS</i> DED-00199 42-5145-169
	B712 M8x1.25 LH MALE SPH RODEND (BRONZE BUSH) (PS CONNECTOR RODS)	B712 <i>Ventura</i> BRG062 <i>TDS</i> DED-00200 42-5145-168
	C189 POTENTIOMETER BUSH	C189 <i>Ventura</i>
	C395 IG RUBBER BUSH 50mm NBR 65 (CYLINDER REAR BRKT)	C395 <i>Ventura</i> 6690803F75
	D105 GUIDE ROLLER Ø12 ROLLER BEARING OD=30x8	D105 <i>Ventura</i> 42-5145-D105

	D107 Ø12 BEARING BUSH ID=12x7. OD=14 F=19.75x1.0	D107 <i>Ventura</i> DED-00318 6690804D31
	D112 Ø 25 x76ctrs BEARING BLOCK FLCTEY INA AY25-XL-NPP-B <i>(IG3 DOORSHAFT ASSYS)</i> <i># FIXINGS = A808 + D870 + H425</i> <i># SPINDLE = ASY004B</i>	D112 <i>Ventura</i> DEV-00073 6690801N39
	D552 Ø24 ROLLER ASSY ID=14x12 <i>(DOORSHAFT ROLLER ASSY</i> <i>LOWER ARM)</i>	D552 <i>Ventura</i> 42-5145-552A
	D760 SPACER 16/10 L23.5	D760 <i>Ventura</i> <i>(BLUEBIRD & MELLOR ORION)</i> DED-00262 6690816D31 42-5145-760
	D660 CONNECTING ROD M6 x 120mm <i>(POTENTIOMETER LINK ROD ASSY)</i>	D660 <i>Ventura</i>
	D803 LOCATING BUSH <i>(PS BOTTOM SUPPORT ASSY)</i>	D803 <i>Ventura</i> DEV-00162 DP733705

	E456 Ø25 GUIDE ROLLER OD=25x6.75. ID=18	E456 <i>Ventura</i> DEV-00148
	E464 Ø16 HYLON BEARING ID=16x9. OD=18 F=23.75x1	E464 <i>Ventura</i> DEV-00157
	E515 PS CONNECTING ROD M8x50 ASSY # RODENDS = B711 & B712 # NUTS = A808 & B713	E515 <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS + STREETCAR PS, ADL E200 SD PS, PLAXTON PRESIDENT DD PS, OPTARE SD TEMPO PS, POLISH SCANIA OMNICITY DD PS, MCV DD EVOSETI PS2 42-5145-515 DED-00335
	E529 PS Ø10 GUIDE ROLLER LR 200 2RSR PS OD=30x9	E529 <i>Ventura</i> WRIGHTBUS NBFL DD DED-00336 6690836D177
	F169 PS CONNECTING ROD M8x75 ASSY # RODENDS = B711 & B712 # NUTS = A808 & B713	F169 <i>Ventura</i> WRIGHTBUS GEMINI DD
	F170 PS CONNECTING ROD M8x120 ASSY # RODENDS = B711 & B712	F170 <i>Ventura</i> WRIGHTBUS GEMINI DD
	# NUTS = A808 & B713	

	F230 PS CONNECTING ROD M8x90 ASSY # RODENDS = B711 & B712 # NUTS = A808 & B713	F230 <i>Ventura</i> WRIGHTBUS GEMINI DD
	F640 FLANGED BEARING BUSH Ø8x10 OD=10 (IG3 FLAPS)	F640 <i>Ventura</i> DEV-00355 669082221L013
	F681 IG Ø14 PLAIN SPH BEARING ID=14. OD=28x13.35 (TOP DOORSHAFT ARMS)	F681 <i>Ventura</i> DEV-00007 6690813F75
	G215 BEARING BUSH 15	G215 <i>Ventura</i>
	G951 PIVOT BOLT 21DIA M10	G951 <i>Ventura</i> DEV-00034 DED-00471 6690824N33
	G968 BUSH DIA 16-10 L=14	G968 <i>Ventura</i> WRIGHTBUS IG4 DEV-00160 6690822D237

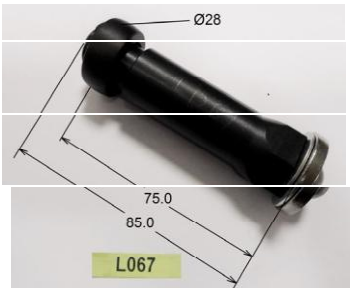
	H072 IG3 SHAFT BEARING BUSH IB=21. OD=29.25-30 LG=30. F= Ø 38x5 (ALL IG3 DOORSHAFTS)	H072 <i>Ventura</i> DEV-00008 6690804N00
	H074 Ø12.4 NYLON BEARING BUSH Bore =12.4 OD=16.25 LG=10, F= Ø22 x 2.0 thk (IG3 DOORSHAFT LOWER BRACKET)	H074 <i>Ventura</i> DEV-00546 6690805N00
	H080 CONNECTING ROD END M8	H080 <i>Ventura</i> WRIGHTBUS PS2 DEV-00405
	H096 PIVOT BOLT M12	H096 <i>Ventura</i>
	H119 SPACER BUSH 30	H119 <i>Ventura</i> DED-00511 6690801F75 6690800N127
	H706 BUSH 10-6,5 L=12	H706 <i>Ventura</i> DED-00506 6690809N00

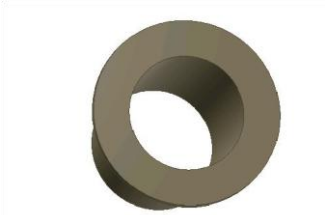
	H750 Ø 26mm PS/RS DOORSHAFT ROLLER ASSY # FIXING BOLTS = PS1 > B706 PS2 > B486 RS > B486 / J977 # SPACERS = PS1 > D760 PS2/RS = G968	H750 <i>Ventura</i> (D755+D758) DED-00257 42-5145-755A 66903320
	H780 GUIDE RING – SPIRAL CABLE	H780 <i>Ventura</i>
	H818 LINEAR BEARING - RS	H818 <i>Ventura</i> BLUEBIRD ORION RS
	I120 RS Connection Rod M8 (1210L)	I120 <i>Ventura</i>
	I162 IG4 SHAFT BEARING BUSH IB=21. OD=32-33 LG=30. F=Ø38x5	I162 <i>Ventura</i> ADL IG3 DOORSHAFTS ALL IG4 DOORSHAFTS (2010>) NBFL IG4 PLAT, NBFL IG4 PS DEV-00185 6690817F75
	I220 PIVOT POINT BOLT SHORT (IG3) # BEARING BUSH = H074	I220 <i>Ventura</i> DEV-00544 6690813N00

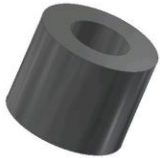
	I221 RING	I221 <i>Ventura</i> DED-00517 6690806N00
	I261 BEARING BUSH bore Ø16x16.88xØ18 Flange Ø24 x 1.0 thk	I261 <i>Ventura</i> WRIGHTBUS PS
	I274 BUSH DIA o/d=12, i/d=9, L=9.5	I274 <i>Ventura</i> WRIGHTBUS PS2 DEV-00418
	I653 bore Ø8.0x5.5 x Ø10 Flange Ø15.0 x 0.87 thick	I653 <i>Ventura</i>
	I714 IG4 GUIDING SHAFT ASSY 106 Lg -96ctr x Ø28 with CABLE ENTRY # ROLLER ASSY = J301	I714 <i>Ventura</i> EAST LANCS SD/DD IG3, MCV SD IG4, ADL E200 SD IG4 + E400 DD IG4 (SENS EDGE CABLE ENTRY ONLY) 6690809D177
	I830 PS CONNECTOR ROD M8 x 58 ASSY # RODENDS = B711 & B712 # NUTS = A808 & B713	I830 <i>Ventura</i> ADL E200 SD PS + E400 DD PS, OPTARE SD VERSA PS, POLISH SCANIA OMNICITY DD PS 6690800N223

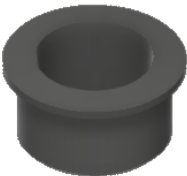
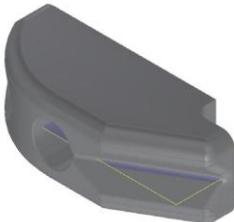
	I893 IG4 GUIDING SHAFT ASSY 99 Lg-89ctr x Ø28 with CABLE ENTRY # ROLLER ASSY = J301	I893 <i>Ventura</i> ADL E400 DD IG3, POLISH SCANIA OMNICITY DD IG3
	I989 IG4 GUIDING SHAFT ASSY 87 Lg-78ctr x Ø28 with CABLE ENTRY # ROLLER ASSY = J301	I989 <i>Ventura</i> WRIGHTBUS DD DUBLIN + GEMINI DD IG4 + NBFL DD IG4/IG4 PLAT, ADL E300 SD IG3 + DD E400+500 IG3 DUBLIN, TEMSA SD IG4, MCV DD EVOSETI (SENS EDGE CABLE ENTRY) 66903314 DEV-00085 DEV-00047
	J015 RS CONNECTOR ROD M8 X 735 ASSY # RODENDS = B711 & B712 # NUTS = A808 & B713	J015 <i>Ventura</i> 6690827D237
	J301 Ø28mm IG GUIDE ROLLER ASSY (E503+504) (ALL VS GUIDING SHAFT ASSYS)	J301 <i>Ventura</i> DEV-00013 DEV-00364 DEV-00365 6690803N33 6690810D177
	J405 CATCH BLOCK BOTTOM SUPPORT PS	J405 <i>Ventura</i> ADL E200 (MAY11-DEC13) 6690803D252

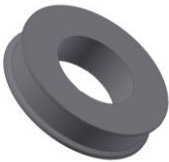
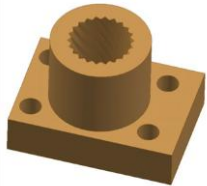
	J796 PS CABLE ROLLER ASSY (A841+B471)	J796 <i>Ventura</i> DEV-00396 66908070 42-5145-132
	K437 PS SPINDLE ROLLER ASSY (D134+D136)	K437 <i>Ventura</i>

	K651 LINEAR BEARING 30mm KS30-B-PP	K651 <i>Ventura</i> WRIGHTBUS PS2 DEV-00392 6690802S005
	K992 Ø30 PS ROLLER ASSY OD=30x15. ID=10 (A841+B442)	K992 <i>Ventura</i>
	L067 (J302) GUIDE ROLLER ASSY 85Lg-75ctrs x Ø28 # ROLLER ASSY = J301	L067 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG4, E300 SD IG3, ADL E400 DD IG3, EAST LANCS SD & DD IG3, MCV SD 112/124RLE IG4 (NO CABLE ENTRANCE) DED-00422 6690800N26

	L535 BUSH DIA12-8 L=86	L535 <i>Ventura</i> WRIGHTBUS IG4 DEV-00305 6690814S01
	L538 PLATE PLAIN BEARING	L538 <i>Ventura</i> 6690831D237
	L559 RS CONNECTING ROD M8x700 ASSY # RODENDS = B711 & B712 # NUTS = A808 & B713	L559 <i>Ventura</i> WRIGHTBUS NBFL DD IG4/IG4 PLAT DEV-00099
	L744 IG4 FLAP BEARING POINT (ALL IG4 DOOR FLAPS)	L744 <i>Ventura</i> DEV-00136 6690823D177
	L745 Ø8 BEARING BUSH ID=8.25x12. OD=9.12 F=13x0.42 (ALL IG4 DOOR FLAPS)	L745 <i>Ventura</i> DEV-00333 6690818D177
	L782 Ø12.35 NYLON BEARING BUSH MFM ID=12.35x8 OD=18.0 F= Ø23.75x2.9	L782 <i>Ventura</i> DEV-00179 6690816F75

	L805 Ø20 x 72crts BEARING LOCK FLCTEY SB204/LFTC204204	L805 <i>Ventura</i> DEV-00177 6690812F75
	L886 IG4 PIVOT POINT BOLT SHORT # BEARING BUSH = H074	L886 <i>Ventura</i> DEP-00459
	M117 RS CONNECTOR ROD M8x955 ASSY # RODENDS = B711 & B712 # NUTS = A808 & B713	M117 <i>Ventura</i> BLUEBIRD SD RS
	M195 BUSH DIA=20-16 L=25 POM	M195 <i>Ventura</i> WRIGHTBUS IG4 DEV-00175 6690824D177
	M236 SPACER POM L=20	M236 <i>Ventura</i> DEV-00175 6690802F75
	O101 BEARING BUSH POTENTIOMETER	O101 <i>Ventura</i> 6690833E001

	O102 POTENTIOMETER BUSH IG4	O102 <i>Ventura</i> 6690812L013
	O731 GUIDE BLOCK	O731 <i>Ventura</i> NBFL IG PLATFORM
	P059 Ø16 BEARING BUSH (POM BLACK) ID=16x22. OD=22 F= Ø30x2.5 (DOORSHAFT TOP ARM)	P059 (B253) <i>Ventura</i> DEV-00006 42-5145-715 6690807N00
	P261 CATCH BLOCK BOTTOM SUPPORT	P261 <i>Ventura</i> WRIGHTBUS PS2 DEV-00102 6616803L120
	R283 GUIDING SHAFT ASS. 154	R283 <i>Ventura</i>
	S878 CONNECTING ROD M8 # RODENDS = B711 & B712 # NUTS = A808 & B713	S878 <i>Ventura</i> WRIGHTBUS PS2 DEV-00403

	T500 CONNECTING ROD M8x41 ASSY # RODENDS = B711 & B712 # NUTS = A808 & B713	T500 <i>Ventura</i> WRIGHTBUS PS2 DEV-00397 6690808L010
	VA0317 GUIDING SHAFT ASS. 98mm LG x M10 # ROLLER ASSY = J301	VA0317 <i>Ventura</i> ADL E200/E400 EV 6690815E001
	VA0633 ROLLER GUIDING SHAFT	VA0633 <i>Ventura</i> 6690846L002
	VA0634 BEARING BUSH GSM	VA0634 <i>Ventura</i> 6690801S005
	VA0946 PSE SHAFT COUPLER 10-12	VA0946 <i>Ventura</i> ADL E200/E400 EV VDL GLIDER 6690821E001
	VA0948 PSE SPINDLE NUT	VA0948 <i>Ventura</i> ADL E200/E400 EV

	VA0964 BUSH 6DIA,1x7,9x15 NYLON	VA0964 <i>Ventura</i> ADL E200/E400 EV
	VA1107 PSE SPRING SPACER BUSH # SPRING = E324	VA1107 <i>Ventura</i> ADL E200/E400 EV
	VA1108 PSE SPRING BUSH # SPRING = E324	VA1108 <i>Ventura</i> ADL E200/E400 EV
	VA1617 BUSH 12-05 L=16	VA1617 <i>Ventura</i> 6690849L002
	VA2778 BEARING BUSH GFM	VA2778 <i>Ventura</i> 6690834L013 6690804S005