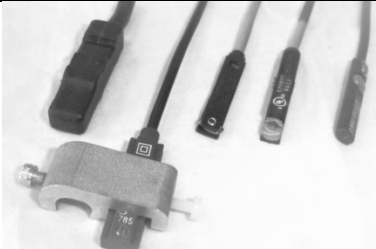


TDS PRODUCT IMAGE SHEET – CATEGORY >

BRACKETS & PIVOTS

Images	TDS Part Numbers & Description	OE References & (WHERE FITTED)
	ASY025 IG PIVOT BRACKET ASSY # Ø14 BEARING=BRG037 #PART on runout JUN25 > bearing still available'	H105023 Deans
	ASY026 RH BOTTOM BEARING ASSEMBLY DEANS	H102724 Deans
	ASY027 PIVOT BRACKET ASSY KIT DEANS (Ø12 BEARING=BRG046)	H105021 Deans
	ASY058 DEANS RH GUIDE ASSY (RLR005)	D17984 Deans
	BRK001A BOTTOM STEADY BRACKET WITH 10.5x21 SLOT	BRK001A TDS (TREKABUS 16)

	BRK002-01 (BLACK) BRK002-04 (WHITE) IG DOOR GUIDE BRACKET	BRK002A TDS (MELLOR MAXIMA) (TREKABUS 16)
	BRK005A DOOR GUIDE BRACKET FLAT OFFSET FLD	BRK005A TDS (PARRY PPM60)
	BRK007A MICROSWITCH MOUNT BRACKET (SDU CLUTCH ASSY)	BRK007A TDS (TREKABUS 16)
	BRK008 CABLE END BRACKET	BRK008 TDS (TREKABUS 16)
 	BRK009-KIT UNIVERSAL SENSOR MOUNT BRACKET FOR ANY 8mm < TIE ROD CYLINDERS	BRK009-KIT TDS
	BRK011 REAR END BRKT MALE Ø16mm 63 BORE CYLINDER	BRK011 TDS
	BRK012 REAR END BRKT L SHAPE Ø16mm 63 BORE CYLINDER	BRK012 TDS

	BRK013 REAR END TRUNION SPH Ø16mm 63 BORE CYLINDER	BRK013 TDS
	BRK014 REAR END FEMALE TRUNION Ø16mm 63 BORE CYLINDER	BRK014 TDS
	BRK015 REAR END SPIGOT-M10 63 BORE CYLINDER	BRK015 TDS
	BRK019 FOOT MOUNT 20 BORE MINI CYLINDER	BRK019 TDS
	BRK020A FLD DOOR GUIDE BRACKET FLAT OFFSET	BRK020A TDS (FLD001 PARRY PPM)
	BRK021 DOORSHAFT BEARING HOUSING LONG # Ø14 BEARING=BRG021B	216760 Peters DEP-00150
	BRK023 DOOR GUIDE USED ON TDS FLD004-5	BRK023 TDS (DENNIS EAGLE DUSTCART) DEP103275

	BRK024 CRANK @ 25 RH HG=25 SLOT CTR=85x55	BRK024 <i>TDS</i>
	BRK025 CRANK @ 25 LH HG=25 SLOT CTR=85x55	BRK025 <i>TDS</i>
	BRK026 DOOR GUIDE BRACKET PDS 3 HOLE	200449 <i>Peters</i>
	BRK027 DOOR GUIDE BRACKET PDS 4 HOLE	200353 <i>Peters</i>
	BRK029 GUIDE BRACKET KIT DEANS	H104566 <i>Deans</i>
	BRK031 BEARING HOUSING # BEARING = BRG001A	205590 <i>Peters</i>
	BRK039 RH DOOR GUIDE BRACKET CRK=22. OFFSET=66. SLOT=10x30.	215808 <i>Peters</i>

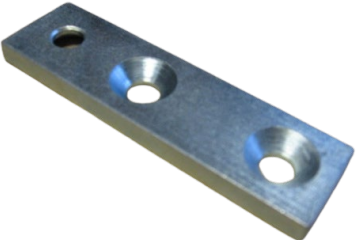
	BRK040 LH DOOR GUIDE BRACKET CRK=22. OFFSET=66. SLOT=10x30	215807 <i>Peters</i>
	BRK046-ASY IG Ø12 RUBBER BUSH BRKT ASSY FOR Ø50 CYLINDERS + M8 Fixings	BRK046-ASY <i>TDS</i> 6600807N33
	BRK049 LH SUPPORT BRACKET	027946 <i>Deans</i> 66902955
	BRK050 RH SUPPORT BRACKET	027947 <i>Deans</i> 66902721
	BRK054 NO.1 DOOR GUIDE BRACKET (KKT DOOR) height=62mm	H102945 <i>Deans</i>
	BRK055 NO.2 DOOR GUIDE BRACKET (KKT DOOR) height=62	H102946 <i>Deans</i>

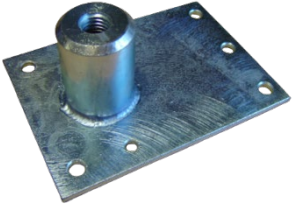
	BRK056 MOUNT BRACKET - PNE303 TDS FILTER REG RANGE (HOLE DIA=30mm)	BRK056 TDS
	BRK067 CORNER INSERT DEANS KEIKERT BONDED GLAZING DOORS	C49800 Deans
	BRK068 RH NO.1 BOTTOM LEADING EDGE BRACKET (KEIKERT BONDED GLASS DOORS)	H107216 Deans
	BRK069 LH NO.2 BOTTOM LEADING EDGE BRACKET (KEIKERT BONDED GLASS DOORS)	H107217 Deans 6690811N05
	BRG070-28 M12 SLOTxM8 FIXINGS BY 28mm DEEP CTRS	BRG070-28 TDS FOR PLUG DOOR PIVOT ARMS, ALSO SEE >  BRG073 RUB045 SAB040
	BRK071 No1 LH DOORGUIDE BRACKET	027724 Deans

	BRK072 No2 RH DOORGUIDE BRACKET	027725 <i>Deans</i>
	BRK079 MASATS TOP CONTROLLER	475215C0A <i>Masats</i>
	BRK080-01RH BEARING SUPPORT BRACKET RH CENTRE	BRK050-01RH <i>TDS</i>
	BRK083 ROTARY LOCK & COVER RETAINING BRACKET	BRK083 <i>TDS</i> USED WITH HDL039T GLASS MOUNT ROTARY LOCK SYSTEM
	BRK084 UNIVERSAL BRACKET OFF SET @ 160 CTR 	BRK084 <i>TDS</i>
	BRK084-01-ASSY UPPER DOORSHAFT BRG (25dia X 160 OFF SET) ASSY # BEARING = BRG022B	BRK084-01-ASSY <i>TDS</i>

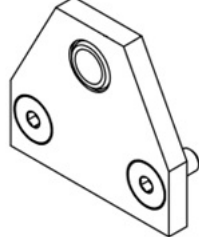
	BRK084-02-ASSY LOWER DOORSHAFT BRG (25dia x 160 OFF SET) ASSY # BOTT BEARING = ASY006B	BRK084-02-ASSY TDS
	BRK085	BRK085 TDS
	BRK101 STABILIZER & DOOR GUIDE BRACKET with Ø10 hole	BRK101 TDS
	KIT010 IG DOORSHAFT PIVOT FIXING KIT	100-051-KIT Peters 66903056
	KIT014 PIVOT KIT PDS GLIDER TOP OR BOTTOM M12x1.75	100-034-KIT Peters (100-084-KIT)
	KIT023 PDS DOORSHAFT FIXING KIT	100-57-A4 Peters

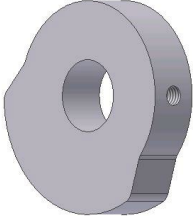
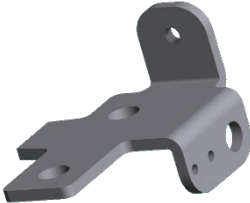
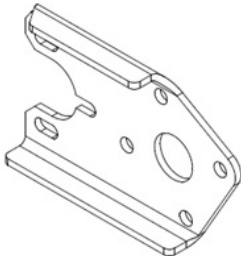
	KIT027 M12 SPH TOP/OILT BOTT FIT FOR RH DOOR VIEWED FROM INSIDE VEHICLE	100-040RL-KIT Peters (OPTARE EXCEL)
	KIT028 M12 SPH TOP/OILT BOTT FIT FOR LH DOOR VIEWED FROM INSIDE VEHICLE	100-040LL-KIT Peters (OPTARE EXCEL)
	KIT027-BRL OILTE BOTTOM PIVOT KIT FOR LH DOOR VIEWED FROM INSIDE VEHICLE	100-040-A4 Peters (OPTARE EXCEL)
	KIT028-BLL OILTE BOTTOM PIVOT KIT FOR LH DOOR VIEWED FROM INSIDE VEHICLE	100-040-A4 Peters (OPTARE EXCEL)
	L500-05-ASSY-01 IG UPPER BEARING BRACKET ASSY # SPH BEARING = BRG021B # RETAINER CIRCLIP = CIR001A # PROTECTIVE CAP = CAP001A	L500-05-ASSY-01 TDS (ALL OPTARE VEHICLES – TDS DOOR) DP0383826
	L500-06-LH IG DOOR GUIDE BRACKET LH # GUIDE SPINDLE = ASY004B	L500-06-LH TDS (ALL OPTARE VEHICLES – TDS DOOR EXCEPT OLYMPUS DD) 32450027

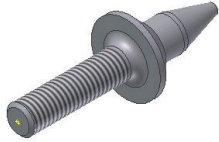
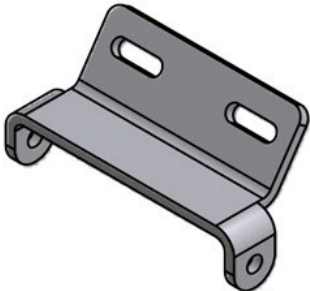
	L500-06-RH IG DOOR GUIDE BRACKET RH # GUIDE SPINDLE = ASY004B	L500-06-RH TDS (ALL OPTARE VEHICLES – TDS DOOR EXCEPT OLYMPUS DD) 32450028
	L500-09-ASSY-01 IG LOWER BEARING BRACKET ASSY # SPH BEARING = BRG021B # RETAINER CIRCLIP = CIR001A # PROTECTIVE CAP = CAP001A	L500-09-ASSY-01 TDS (ALL OPTARE VEHICLES – TDS DOOR) 6690832N00
	PVP003 Ø12 CLEVIS CLUTCH PIN	214677 Peters
	PVP005 Ø12 x 40 PIVOT PIN	213548 Peters
	PVT001A Ø12 REAR PIVOT PLATE ELEC ACTUATOR	214664 Peters
	PVT002A DOOR PIVOT PLATE	201361 Peters 201361 204730
	PVT003A RH BEARING PIVOT PLATE	214750 Peters

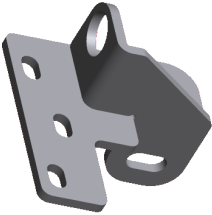
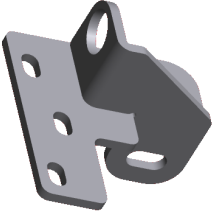
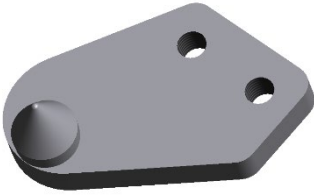
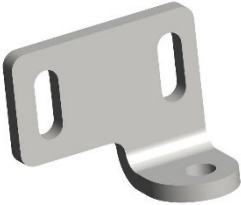
	PVT004A LH BEARING PIVOT PLATE	214751 <i>Peters</i>
	PVT005A M12 ACTUATOR PIVOT PLATE	217117 <i>Peters</i>
	PVT008A PIVOT PLATE RH	201348 <i>Peters</i>
	PVT009A PIVOT PLATE LH	201349 <i>Peters</i>
	PVT010A IG DOOR HINGE BLOCK LONG- Ø12.7 Spigot # RODEND = BRG012B-ASSY, BOLT = SCR20816-A2, WASHER = WAS08PL-C1, SPACER = SPA012, BOOT = RUB201	E25408 <i>Deans</i> 16R0121 16R0131
	PVT011A IG DOOR HINGE BLOCK SHORT- Ø12.7 Spigot # RODEND = BRG012B-ASSY, BOLT = SCR20816-A2, WASHER = WAS08PL-C1	E25407 <i>Deans</i> 16R0120
	PVT013A SHORT PIVOT PLATE TOP RH	214426 <i>Peters</i>

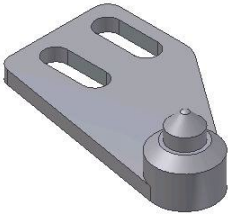
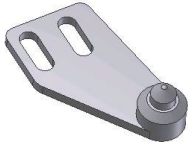
	PVT014A SHORT PIVOT PLATE TOP LH	214427 <i>Peters</i>
	PVT015A LOWER HINGE PIVOT BRACKET- Ø12.7 Spigot	D31431 <i>Deans</i>
	PVT016A UPPER HINGE PIVOT BRACKET- Ø12.7 Spigot	D31388 <i>Deans</i>
	PVT017A UPPER BEARING PIVOT BRACKET Ø14 Spigot	PVT017A <i>TDS</i>
	PVT017-ASY IG M14 UPPER BEARING PIVOT ASSY # RODEND = BRG015B # PIVOT PLATE = PVT017	PVT017-ASY <i>TDS</i> 29455017 660835N00
	PVT018A Ø14 LOWER BEARING PIVOT BRACKET- Ø14 Spigot	PVT018A <i>TDS</i>
	PVT018-ASY IG M14 LOWER BEARING PIVOT ASSY # RODEND = BRG015B # PIVOT PLATE = PVT018 # PROTECT BOOT = RUB201	PVT018-ASY <i>TDS</i> 6690836N00 294550018 16R0236

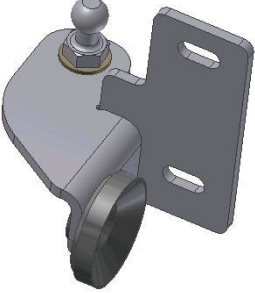
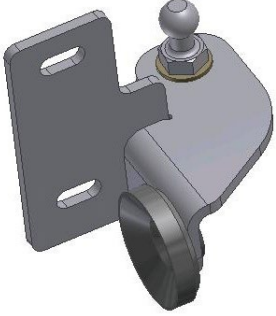
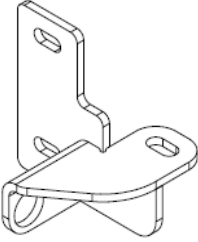
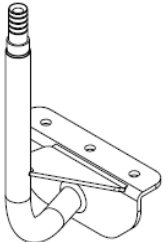
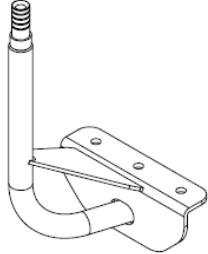
	PVT019A O/D=31.65 x 82(O/L=110) Ø14BOTTOM SPIGOT FITS INTO O/D 38mm DOORSHAFT	216755 <i>Peters</i> 33-19078-2
	PVT022 M12 REAR PIVOT PLATE RETROFIT ON TO SHELFPLATE 	RETROFIT PART FOR FITTING TO PETERS UPPER SHELFPLATE 217721 BASE SHELFPLATE = HPA034 TDS (EAST LANCs OMNIDECK)
	PVT023A Ø16 REAR PIVOT PLATE FOR PNEU ACTUATOR	200348 <i>Peters</i>
	PVT025 Ø3/4 PIVOT BRACKET WELD ASSY	214660 <i>Peters</i>
	PVT029 PS LOWER PIVOT ARM ASSY (DEANS PS)	088099 <i>Deans</i>
	PVT031 LOWER PIVOT HINGE PLATE WITH BRG	PVT031 <i>TDS</i>
	ROD101 DRIVE ROD END COUPLING	ROD101 <i>TDS</i>

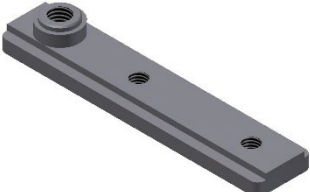
	ROD102 DRIVE ROD SUPPORT BRACKET	ROD102 TDS
	B470 PS SWITCH CAM SHAFT	B470 Ventura DEP-00218 DSP-00090 42-5145-178
	B585 IG4 PIVOT BOLT M6	B585 Ventura WRIGHTBUS STREETLITE IGE
	C592 PS CATERPILLAR CABLE SUPPORT BRACKET	C592 Ventura
	B680 PS END PLATE RIGHT	B680 Ventura DED-00270
	B688 PS PIVOT BOLT 16xM10 # SEE VD6482 KIT 	B688 Ventura VD6482 Ventura DED-00270 6690818D31 42-5145-688
	C727 RS ACTUATOR BRACKET LH	C727 Ventura

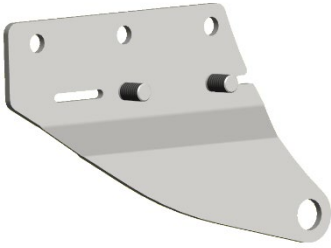
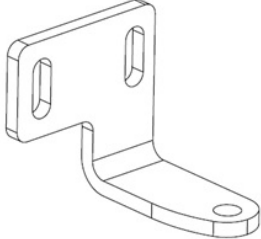
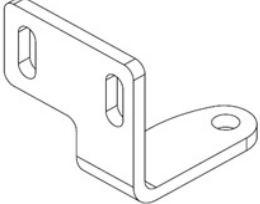
	C924 PS CATCH PIN	C924 <i>Ventura</i> DED-00393
	C965 PS CATCH BLOCK (EARLY)	C965 <i>Ventura</i>
	D088 PS FRONT CYLINDER BRACKET (FOR D622/E820/I486)	D088 <i>Ventura</i> 42-5145-139
	D090 PS CYLINDER BRACKET (REAR D622)	D090 <i>Ventura</i> 42-5145-140
	D091 PS CYLINDER BRACKET (CARRIAGE D622)	D091 <i>Ventura</i> 42-5145-143
	D102 PS CAM ROLLER BRACKET	D102 <i>Ventura</i> 42-5145-117
	D135 PS TENSION BRACKET	D135 <i>Ventura</i> 42-5145-123

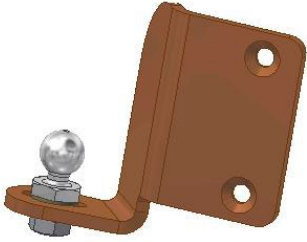
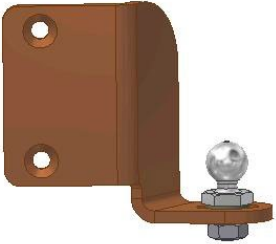
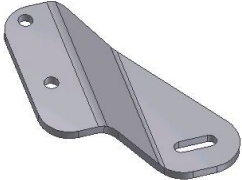
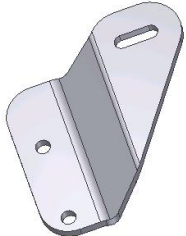
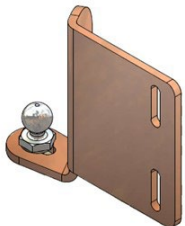
	D525 PS BOTTOM SUPPORT LH	D525 <i>Ventura</i> 42-5145-173
	D526 PS BOTTOM SUPPORT RH	D526 <i>Ventura</i> 42-5145-174
	D545 PS CATCH PIN PLATE LH	D545 <i>Ventura</i> 42-5145-025
	D546 PS CATCH PIN PLATE RH	D546 <i>Ventura</i> 42-5145-017
	D549 PS ENDPLATE RH WELD ASSY	D549 <i>Ventura</i> 42-5145-103
	D703 PS DOORSHAFT ADJUSTING BRACKET LH	D703 <i>Ventura</i>
	D704 PS DOORSHAFT ADJUSTING BRACKET RH	D704 <i>Ventura</i> 6600800N33

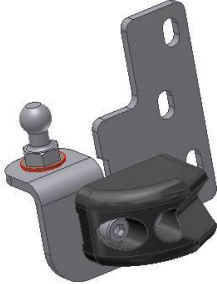
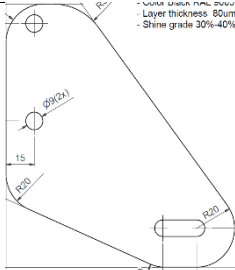
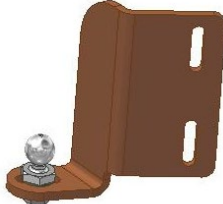
	D802 PS SUPPORT BRACKET DOORSHAFT RH	D802 <i>Ventura</i> DED-00207
	E096 PS CATCH PIN PLATE RH	E096 <i>Ventura</i> DED-00383 6690821D31
	E097 PS CATCH PIN PLATE LH	E097 <i>Ventura</i> DED-00384 6690820D31
	E121 PS BOTTOM SUPPORT ASSY LH # PIVOT BOLT = B688 # CATCH BLOCK = D803	E121 <i>Ventura</i> ADL E200 SD PS + E400 DD PS, MCV SD EVOLUTION PS 6600023N33
	E122 PS BOTTOM SUPPORT ASSY RH # PIVOT BOLT = B688 # CATCH BLOCK = D803	E122 <i>Ventura</i> ADL E200 SD PS + E400 DD PS, MCV SD EVOLUTION PS 6600024N24
	E508 PS END PLATE LEFT WELD ASSY	E508 <i>Ventura</i>

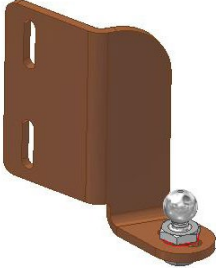
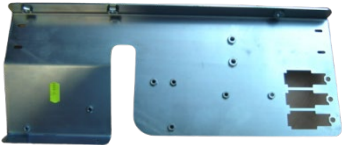
	E818 PS BOTTOM SUPPORT ASSY LH # PIVOT BOLT = B688 # CATCH BLOCK = D803	E818 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3 + STREETCAR PS , ADL E400 DD IG3, EAST LANCS SD IG3/PS + OLYMPUS DD PS, POLISH SCANIA OMNICITY DD IG3/PS, EAST LANCS Olympus DD IG3 DED-00340 DEC-00406
	F302 PS BOTTOM SUPPORT ASSY RH # PIVOT BOLT = B688 # CATCH BLOCK = D803	F302 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3 + STREETCAR PS , ADL E400 DD IG3, EAST LANCS SD IG3/PS + OLYMPUS DD PS, POLISH SCANIA OMNICITY DD IG3/PS, EAST LANCS Olympus DD IG3 DED-00343 DEC-00405
	F303 PS BOTTOM SUPPORT RIGHT	F303 <i>Ventura</i> WRIGHTBUS GEMINI DD PS
	F864 IG3 GUIDING BRACKET LH OMNI	F864 <i>Ventura</i> POLISH SCANIA OMNICITY DD IG3/PS
	F865 IG3 GUIDING BRACKET RH OMNI	F865 <i>Ventura</i> POLISH SCANIA OMNICITY DD IG3/PS

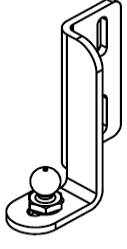
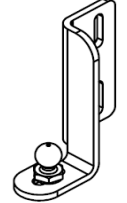
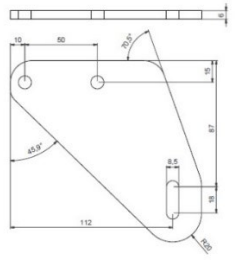
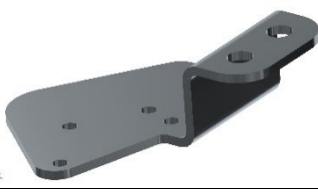
	F913 PS DOORSHAFT ADJUSTER BRACKET LH 43MM # JUN25 - REPLACED BY VA3284	F913 <i>Ventura</i> 6600801N196
	F914 PS DOORSHAFT ADJUSTER BRACKET RH 43MM # OCT14 - REPLACED BY VA3285	F914 <i>Ventura</i> 6600800N196
	G257 IG3 DOOR SHAFT SUPPORT LH ASSY	G257 <i>Ventura</i> POLISH SCANIA OMNICITY DD IG3
	G298 IG3 DOOR SHAFT SUPPORT RH ASSY	G298 <i>Ventura</i> POLISH SCANIA OMNICITY DD IG3
	G379 IG3 LOWER SHAFT BRACKET LH # BUSH = H074	G379 <i>Ventura</i> DEV-00245 DP038838
	G951 IG4 M10 PIVOT BOLT 21DIA # SEE VD6483 KIT 	G951 <i>Ventura</i> VD6483 <i>Ventura</i> DEV-00027 6600806N33
	G955 IG SUSPENSION PIVOT PLATE	G955 <i>Ventura</i> DEV-00090 6690804N26

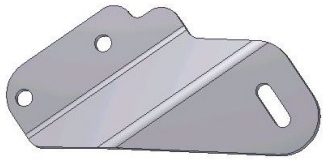
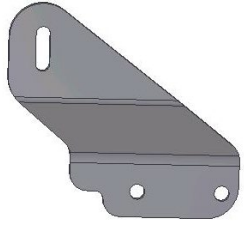
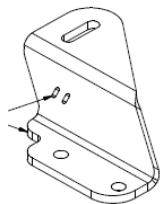
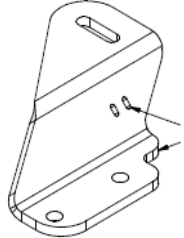
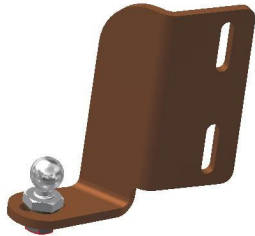
	G989 IG3 PIVOT PIN	G989 <i>Ventura</i> DED-00441 6690803N41
	H036 PS DRIVE BRACKET ASSY # BEARING BUSH = D107	H036 <i>Ventura</i> DEV-00222 6690807D252
	H096 PIVOT BOLT M12	H096 <i>Ventura</i>
	H227 PS DOORSHAFT ADJ BRACKET RH	H227 <i>Ventura</i>
	H228 PS DOORSHAFT ADJ BRACKET LH	H228 <i>Ventura</i>
	H430 IG3 FRAME BRACKET RH	H430 <i>Ventura</i>

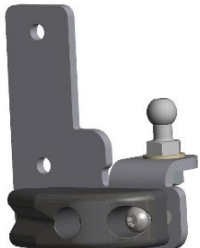
	H437 IG3 DOORSHAFT SUPPORT RH # PIVOT BOLT = G951	H437 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3, EAST LANCS Olympus DD IG3 DEV-00026
	H465 IG3 DOORSHAFT SUPPORT RH # PIVOT BOLT = G951	H465 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3, EAST LANCS Olympus DD IG3 DEV-00025
	H502 IG3 GUIDING BRACKET LH	H502 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E300 SD IG3, EAST LANCS SD IG3 DED-00420
	H508 IG3 GUIDING BRACKET RH	H508 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E300 SD IG3, EAST LANCS SD IG3 DED-00421
	H776 IG3 BOTTOM SUPPORT LH 135 # PIVOT BOLT = G951	H776 <i>Ventura</i> 6600006N26
	H777 IG3 BOTTOM SUPPORT RH 135 # PIVOT BOLT = G951	H777 <i>Ventura</i> 6600007N26

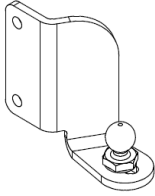
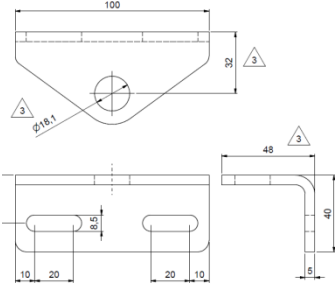

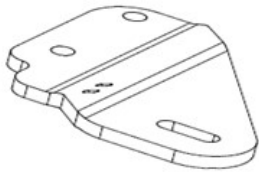
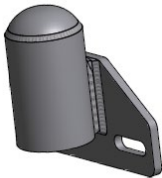
	H987 IG3 DOOR SHAFT SUPPORT LH ASSY # PIVOT BOLT = G951	H987 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3 + OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3 33-11188
	H988 IG3 DOOR SHAFT SUPPORT RH ASSY # PIVOT BOLT = G951	H988 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3 + OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3 33-11187
	I269 PS BOTTOM SUPPORT LH ASSY # PIVOT BOLT = B688 # CATCH BLOCK = J405	I269 <i>Ventura</i> OPTARE SD PS VERSA + TEMPO 66900369
	I270 PS2 BOTTOM SUPPORT RH ASSY # PIVOT BOLT = B688 # CATCH BLOCK = J405	I270 <i>Ventura</i> OPTARE SD PS VERSA + TEMPO 66900370
	I291 IG3 DOOR GUIDING BRACKET	I291 <i>Ventura</i> EAST LANCS OLYMPUS DD IG3
	I357 IG3 DOORSHAFT SUPPORT LH 100 ASSY # PIVOT BOLT = G951	I357 <i>Ventura</i> ADL E200 SD IG4 + E300 SD IG3/IG4 + E400 DD IG3/IG4, TEMSA SD IG4 6600008N33

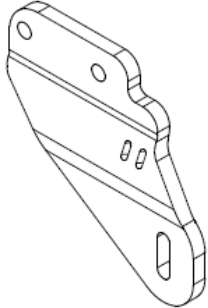
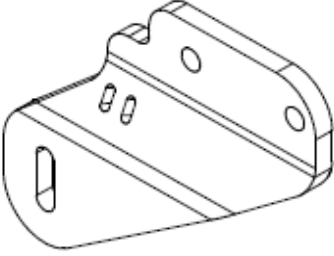
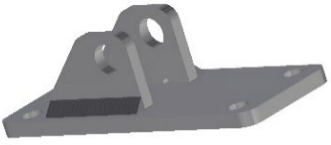
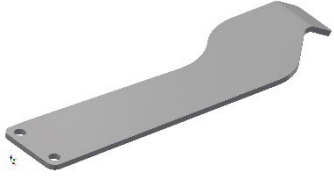
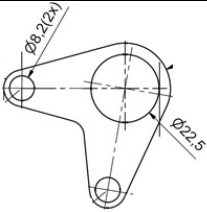
	I358 IG3 DOORSHAFT SUPPORT RH 100 ASSY # PIVOT BOLT = G951	I358 <i>Ventura</i> ADL E200 SD IG4 + E300 SD IG3/IG4 + E400 DD IG3/IG4, TEMSA SD IG4 6600009N33
	I461 IG3 GUIDING BRACKET	I461 <i>Ventura</i> ADL E400 DD IG3 6690825N33
	I500 PS CONTROL MOUNT PLATE (REV 8 LATEST VERSION)	I500 <i>Ventura</i> 6690832D31
	I741 PS ADAPTER BRACKET LH	I741 <i>Ventura</i> 6690800D99
	I801 PS ADAPTER BRACKET RH	I801 <i>Ventura</i> 6690801D99
	I944 IG4 GUIDING BRACKET	I944 <i>Ventura</i> TEMSA SD IG4

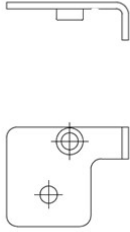
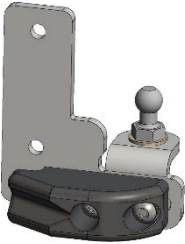
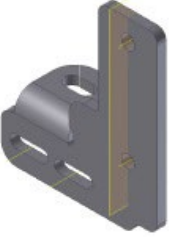
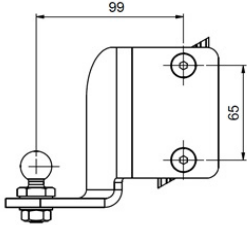
	J122 IG3 DOOR SHAFT SUPPORT LH ASSY # PIVOT BOLT = G951	J122 <i>Ventura</i> MCV IG3
	J123 IG3 DOOR SHAFT SUPPORT RH ASSY # PIVOT BOLT = G951	J123 <i>Ventura</i> MCV IG3
	J405 PS CATCH BLOCK BOTTOM SUPPORT	J405 <i>Ventura</i> 6690803D252 32455002
	J964 IG3 GUIDING BRACKET FLAT	J964 <i>Ventura</i> ADL E200 IG3
	L778 IG4 LOWER SHAFT (FLAP) BRKT # BEARING BUSH = L782 # NYLON WASHER = A497	L778 <i>Ventura</i> DEV-00172 6690818F75
	M049 PS MICROSWITCH BRACKET	M049 <i>Ventura</i>
	M106 RS BOTTOM SUPPORT LH ASSY # PIVOT BOLT = B688	M106 <i>Ventura</i> 6690808D237

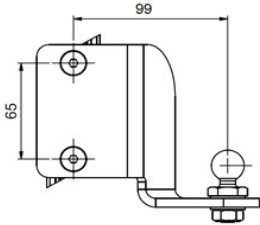
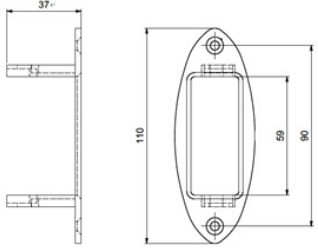
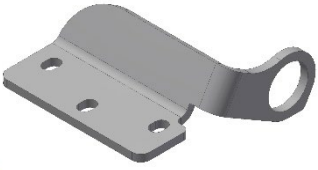
	M592 IG4 GUIDING BRACKET LH	M592 <i>Ventura</i> ADL E200 SD IG4 + E300 SD IG4 + E400 DD IG4 6690811D177
	M593 IG4 GUIDING BRACKET RH	M593 <i>Ventura</i> ADL E200 SD IG4 + E300 SD IG4 + E400 DD IG4 6690812D177
	M670 IG4 GUIDING BRACKET LH	M670 <i>Ventura</i> MCV SD 112/124RLE IG4
	M671 IG4 GUIDING BRACKET RH	M671 <i>Ventura</i> MCV SD 112/124RLE IG4
	M717 IG4 GUIDING BRACKET	M717 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + NBFL DD IG4/IG4 PLAT DEV-00107
	N035 IG4 DOOR SHAFT SUPPORT LH ASSY # PIVOT BOLT = G951	N035 <i>Ventura</i> MCV SD 112/124RLE IG4 66000003
	N036 IG4 DOOR SHAFT SUPPORT RH ASSY # PIVOT BOLT = G951	N036 <i>Ventura</i> MCV SD 112/124RLE IG4 66000004

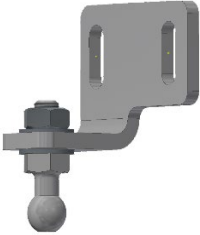
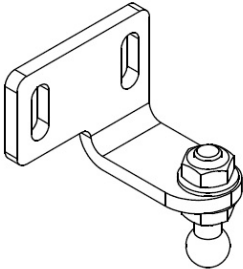
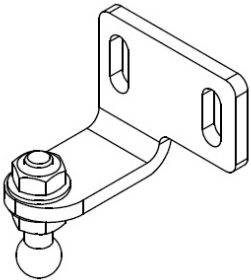
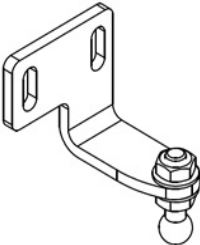
	N058 IG4 BOTTOM SUPPORT LH ASSY 90 # PIVOT BOLT = G951	N058 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + STREETLITE SD IG4 + NBFL DD IG4 DEV-00067 DEV-00944 DP733703
	N059 IG4 BOTTOM SUPPORT RH ASSY 90 # PIVOT BOLT = G951	N059 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + STREETLITE SD IG4 + NBFL DD IG4 DEV-00068 DEV-00945 DP038200
	N427 IG4/PS2 PIVOT POINT	N427 <i>Ventura</i> WRIGHTBUS PS2, MCV DD EVOSETI PS2 DEV-00412 6690862L002
	N881 IG4 BOTTOM SUPPORT LH ASSY 90 # PIVOT BOLT = G951	N881 <i>Ventura</i> ADL E200/E400 IG4 + MCV EVOSETI DD IG4 6690804N196
	N882 IG4 BOTTOM SUPPORT RH ASSY 90 # PIVOT BOLT = G951	N882 <i>Ventura</i> ADL E200/E400 IG4 + MCV EVOSETI DD IG4 6690805N196
	O272 PS2 BOTTOM SUPPORT LH ASSY # PIVOT BOLT = B688 # CATCH BLOCK = P261	O272 <i>Ventura</i> WRIGHTBUS NBFL DD PS DEV-00104
	O273 PS2 BOTTOM SUPPORT RH ASSY # PIVOT BOLT = B688 # CATCH BLOCK = P261	O273 <i>Ventura</i> WRIGHTBUS NBFL DD PS DEV-00106

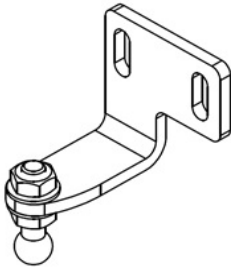
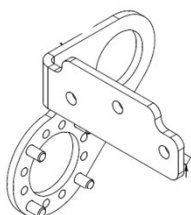
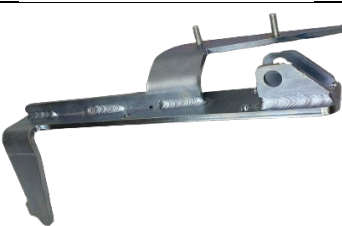
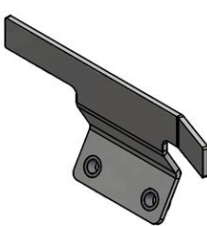
	O400 IG4 BOTTOM SUPPORT RH ASSY 77 (TOGGLE NUT) # PIVOT BOLT = G951	O400 <i>Ventura</i> WRIGHTBUS NBFL DD IG4/IG4 PLAT DEV-00096
	O412 IG4 PIVOT POINT BOTTOM	O412 <i>Ventura</i> WRIGHTBUS NBFL DEV-00318
	O413 IG4 PIVOT POINT TOP	O413 <i>Ventura</i> WRIGHTBUS NBFL DEV-00317 DEV-00193
	O415 IG4 CURVED DOOR TOP SUPPORT	O415 <i>Ventura</i> WRIGHTBUS NBFL DD IG4 PLAT DEV-00155
	O553 IG4 GUIDING BRACKET LH	O553 <i>Ventura</i> 6690849S01
	O554 IG4 GUIDING BRACKET RH	O554 <i>Ventura</i> 6690849S01
	O670 IG4 CURVED DOOR BOTTOM SUPPORT	O670 <i>Ventura</i> WRIGHTBUS NBFL DD IG4 PLAT DEV-00156

	P256 PS2 BOTTOM SUPPORT LH ASSY # PIVOT BOLT = B688 # CATCH BLOCK = P261	P256 <i>Ventura</i> MCV DD EVOSETI PS2 6616802P375 66903829
	P257 PS2 BOTTOM SUPPORT RH ASSY # PIVOT BOLT = B688 # CATCH BLOCK = P261	P257 <i>Ventura</i> MCV DD EVOSETI PS2 6616803D375 66903830
	P725 IG4 GUIDING BRACKET LH 72.5mm	P725 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4
	P726 IG4 GUIDING BRACKET RH 72.5mm	P726 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4
	Q348 RS DRIVE BRACKET (R643)	Q348 <i>Ventura</i>
	S752 RS CYLINDER DRIVE BRACKET SWITCH PLATE (R643)	S752 <i>Ventura</i>
	S930 PS2 CYLINDER BRACKET	S930 <i>Ventura</i>

	S950 PS CABLE BRACKET	S950 <i>Ventura</i>
	T986 PS2 BOTTOM SUPPORT LH ASSY # PIVOT BOLT = B688 # CATCH BLOCK = P261	T986 <i>Ventura</i> WRIGHTBUS PS2 DEV-00416 DP737061
	T987 PS2 BOTTOM SUPPORT RH ASSY # PIVOT BOLT = B688 # CATCH BLOCK = P261	T987 <i>Ventura</i> WRIGHTBUS PS2 DEV-00481 DP737066
	T988 BOTTOM SUPPORT LH	T988 <i>Ventura</i> DEV-00417
	T989 BOTTOM SUPPORT R H	T989 <i>Ventura</i> DEV-00420
	U537 IG4 BOTTOM SUPPORT LH ASSY # PIVOT BOLT = G951	U537 <i>Ventura</i> 6690806S01

	U538 IG4 BOTTOM SUPPORT RH ASSY # PIVOT BOLT = G951	U538 <i>Ventura</i> 6690805S01
	VA0203 PS LH END PIECE	VA0203 <i>Ventura</i>
	VA0204 PS RH END PIECE	VA0204 <i>Ventura</i>
	VA0541 IG4 SENSOR BRACKET	VA0541 <i>Ventura</i> 6690822L120
	VA0721 CYLINDER BRACKET	VA0721 <i>Ventura</i>
	VA0912 PS ROLLER BRACKET # USED WITH ROLLER E529 # ROLLER BOLT = VA0557	VA0912 <i>Ventura</i> 6690864L002
	VA2123 PS2 DOORSHAFT ADJUST BRACKET LH ASSY # PIVOT BOLT = B688	VA2123 <i>Ventura</i>

	VA2124 PS2 DOORSHAFT ADJUST BRACKET RH ASSY # PIVOT BOLT = B688	VA2124 <i>Ventura</i>
	VA3191 PS2 DOORSHAFT BRKT LH ASSY 28MM # PIVOT BOLT = B688	VA3191 <i>Ventura</i>
	VA3192 PS2 DOORSHAFT BRKT RH ASSY 28MM # PIVOT BOLT = B688	VA3192 <i>Ventura</i>
	VA3284 PS DOORSHAFT ADJUSTER BRACKET LH 43MM # JUN25 - REPLACES F913	VA3284 <i>Ventura</i> 6600801N196
	VA3285 PS DOORSHAFT ADJUSTER BRACKET RH 43MM # JUN25 – REPLACES F914	VA3285 <i>Ventura</i> 6600800N196
	VA3289 DOORSHAFT ADJUST BRACKET LH ASSY # PIVOT BOLT = B688	VA3289 <i>Ventura</i>

	VA3290 DOORSHAFT ADJUST BRACKET RH ASSY # PIVOT BOLT = B688	VA3290 <i>Ventura</i>
	VA3700 RS BOTTOM SUPPORT RH ASSY (T-SLOT) # PIVOT BOLT = B688	VA3700 <i>Ventura</i> WRIGHTBUS NBFL PLAT RS DEV-00601
	VA3874 PSE Motor Bracket	VA3874 <i>Ventura</i>
	VA5480 RS DRIVE BRACKET L	VA5480 <i>Ventura</i>
	VA6793 IG4 GUIDING BRACKET LH	VA6793 <i>Ventura</i>
	VA6794 IG4 GUIDING BRACKET RH	VA6794 <i>Ventura</i>
	VA8532 PS2 SWITCH CAM BRACKET	VA8532 <i>Ventura</i> 6690846S01

	VB2533 PS LH END PIECE	VB2533 <i>Ventura</i>
	VB2568 PS RH END PIECE	VB2568 <i>Ventura</i>