


**VENTURA PS 1.0 – DOORSHAFTS SERVICE KIT – P/N: KIT602**

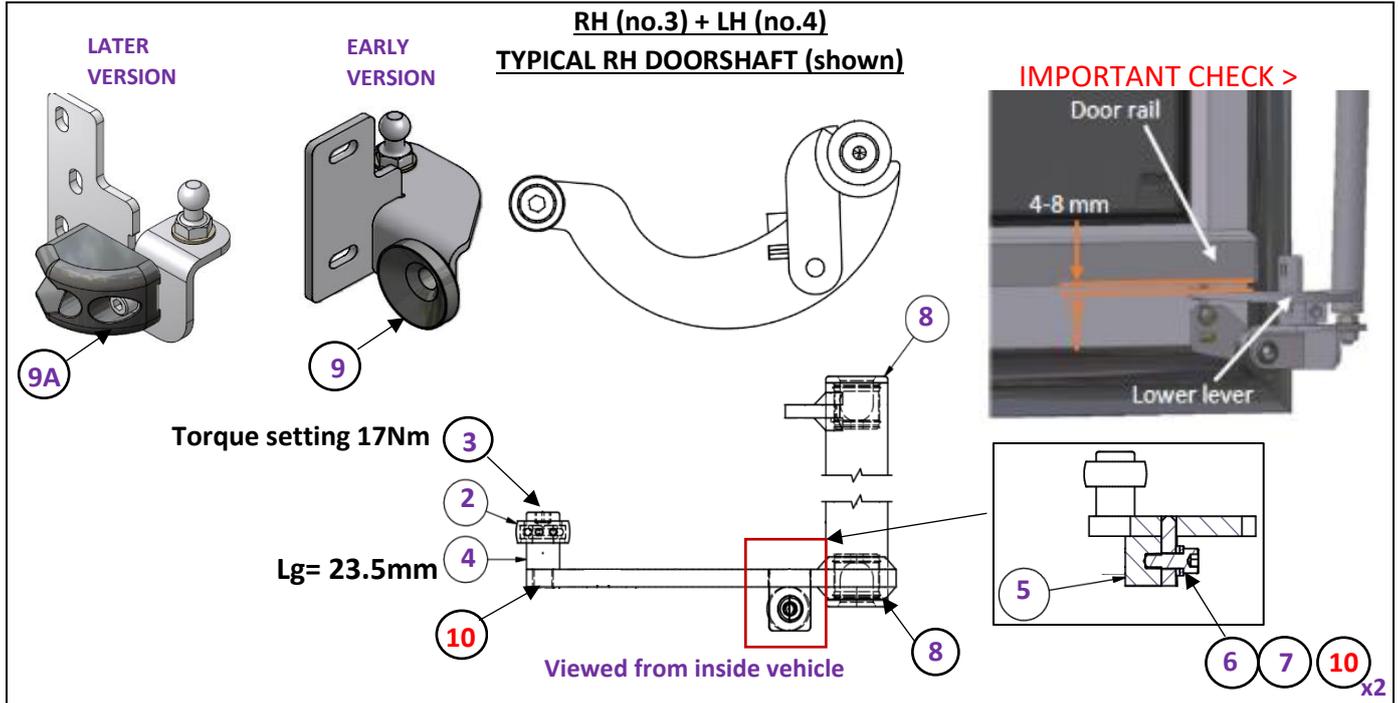

**KIT COMPONENT PARTS**

# THIS IS A SINGLE DOORSHAFT/LEAF KIT, 2x REQUIRED PER DOUBLE DOOR SET

(2) <b>H750</b> = GUIDE ROLLER ASSY x 1 Ø26x10 (bearing Ø22x6x10 bore)		(7) <b>A732</b> = M6 A2 WASHER x 2	
(3) <b>B706</b> = M10x40 FIXING BOLT x 1		(8) <b>B689</b> = DOORSHAFT BEARING BUSH x 2	
(5) <b>C492</b> = VIBRATION DAMPER Ø20x15 x 1		(9) <b>D803</b> = BOTTOM SUPPORT CATCH BLOCK x 1	
(4) <b>D760</b> = ROLLER SPACER BUSH x 1 Ø16 x 10 bore x 23.5 Lg		(9A) <b>J405</b> = BOTTOM SUPPORT CATCH BLOCK x 1	
(6) <b>A760</b> = M6x16 FIXING BOLT x 1		(10) <b>C625-0.5ML</b> = LOCTITE 243 TREADLOCKER x 1 Supplied in a 0.5ml Vial for retaining items 3 & 6	

#SINGLE SHAFT KIT = KIT602 #ASSOCIATED CATCH PIN/WEDGE PLATES: REF ONLY NOT SUPPLIED IN KIT (AVAILABLE ON REQUEST)

<b>D545</b> LH CATCH PIN ON PLATE 	<b>D546</b> RH CATCH PIN ON PLATE 	<b>E097</b> LH CATCH PIN ON PLATE 	<b>E096</b> RH CATCH PIN ON PLATE 
<b>I275</b> LH CATCH WEDGE 	<b>I276</b> RH CATCH WEDGE 	<b>C924</b> CATCH PIN 	<b>M801 CHECK IF REQ'D</b> GUIDE ROLLER SECURING KIT SEE DOC SME013E 

IF IN DOUBT ON PART SELECTION - PLEASE CONTACT US WITH DETAILS FROM THE DOOR LABEL ATTACHED TO TOP OF LEAF >