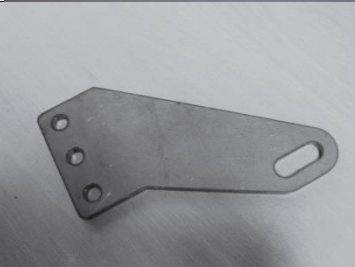


TDS PRODUCT IMAGE SHEET – CATEGORY > BRACKETS/PIVOTS-KITS

Image	TDS Part Number & Description	OE & Alternative Part References (WHERE FITTED)
	ASY025 PIVOT BRACKET ASSY KIT DEANS (Ø14 BEARING=BRG037)	H105023 <i>Deans</i>
	ASY026 RH BOTTOM BEARING ASSEMBLY DEANS	H102724 <i>Deans</i>
	ASY027 PIVOT BRACKET ASSY KIT DEANS (Ø12 BEARING=BRG046)	H105021 <i>Deans</i>
	ASY058 DEANS RH GUIDE ASSY (RLR005)	D17984 <i>Deans</i>
	BRK001A BOTTOM STEADY BRACKET	BRK001A <i>TDS</i>
	BRK002A DOOR GUIDE BRACKET CRANKED INLINE GLD	BRK002A <i>TDS</i>

	BRK005A DOOR GUIDE BRACKET FLAT OFFSET FLD	BRK005A TDS (PARRY PPM60)
	BRK007A MICROSWITCH MOUNT BRACKET (SDU CLUTCH ASSY)	BRK007A TDS (TREKABUS 16)
	BRK008 CABLE END BRACKET	BRK008 TDS
	BRK009 UNIVERSAL SENSOR MOUNT TDS CYLINDERS	BRK009 TDS
	BRK011 REAR END BRKT MALE Ø16mm 63 BORE CYLINDER	BRK011 TDS
	BRK012 REAR END BRKT L SHAPE Ø16mm 63 BORE CYLINDER	BRK012 TDS
	BRK013 REAR END TRUNION SPH Ø16mm 63 BORE CYLINDER	BRK013 TDS

	BRK014 REAR END FEMALE TRUNION Ø16mm 63 BORE CYLINDER	BRK014 TDS
	BRK015 REAR END SPIGOT-M10 63 BORE CYLINDER	BRK015 TDS
	BRK019 FOOT MOUNT 20 BORE MINI CYLINDER	BRK019 TDS
	BRK020A DOOR GUIDE BRACKET BLACK FLAT OFFSET FLD	BRK020A TDS (FLD001)
	BRK021 DOORSHAFT BEARING HOUSING LONG To take BRG021B Ø 14 SPH Bearing race	216760 Peters
	BRK023 DOOR GUIDE USED ON TDS FLD004-5	BRK023 TDS
	BRK024 CRANK @ 25 RH HG=25 SLOT CTR=85x55	BRK024 TDS

	BRK025 CRANK @ 25 LH HG=25 SLOT CTR=85x55	BRK025 <i>TDS</i>
	BRK026 DOOR GUIDE BRACKET PDS 3 HOLE	200449 <i>Peters</i>
	BRK027 DOOR GUIDE BRACKET PDS 4 HOLE	200353 <i>Peters</i>
	BRK029 GUIDE BRACKET KIT DEANS	H104566 <i>Deans</i>
	BRK031 BEARING HOUSING To take BRG001A nylon bearing	205590 <i>Peters</i>
	BRK039 RH DOOR GUIDE BRACKET CRK=22. OFFSET=66. SLOT=10x30.	215808 <i>Peters</i>
	BRK040 LH DOOR GUIDE BRACKET CRK=22. OFFSET=66. SLOT=10x30	215807 <i>Peters</i>

	BRK046-ASY = (V.S)Ø12 Rubber Bush for Ø50 Cyl + M8 Fixings	
	BRK049 LH SUPPORT BRACKET	027946 <i>Deans</i>
	BRK050 RH SUPPORT BRACKET	027947 <i>Deans</i>
	BRK054 LH NO.1 DOOR GUIDE BRACKET (KKT DOOR)	H102945 <i>Deans</i>
	BRK055 RH NO.2 DOOR GUIDE BRACKET (KKT DOOR)	H102946 <i>Deans</i>
	BRK056 =BRACKET USED ON PNE303 RANGE ETC. HOLE DIA=30mm	BRK056 <i>TDS</i>

	BRK067 CORNER INSERT DEANS KEIKERT BONDED GLAZING DOORS	C49800 <i>Deans</i>
	BRK068 RH No.1 Door. BOTTOM LEADING EDGE BRACKET DEANS KEIKERT BONDED GLAZING DOORS	H107216 <i>Deans</i>
	BRK069 LH No.2 Door. BOTTOM LEADING EDGE BRACKET DEANS KEIKERT BONDED GLAZING DOORS	H107217 <i>Deans</i>
	BRG070-28 M12 SLOTxM8 FIXINGS BY 28mm DEEP CTRS	For Plug Door pivot arms. See also BRG073 RUB045 SAB040
	BRK071 No1 LH DOORGUIDE BRACKET	027724 <i>Deans</i>
	BRK072 No2 RH DOORGUIDE BRACKET	027725 <i>Deans</i>

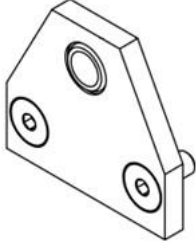
	BRK080-01RH BEARING SUP-BRKT RH CENTRE	BRK050-01RH <i>TDS</i>
	BRK083 ROTARY LOCK & COVER. RETAINING BRACKET	BRK083 <i>TDS</i> USED WITH HDL039T GLASS MOUNT ROTARY LOCK SYSTEM
	BRK084 UNIVERSAL BRACKET OFF SET @0160CTR 	BRK084 <i>TDS</i>
	BRK084-01-ASSY UPPER DOORSHAFT BRG (25dia X 160 off set) ASSY	BRK084-01-ASSY <i>TDS</i>
	BRK084-02-ASSY LOWER DOORSHAFT BRG (25dia x 160 off set) ASSY	BRK084-02-ASSY <i>TDS</i>
	KIT010 DOORSHAFT FIXING KIT	100-051-KIT <i>Peters</i>
	KIT014 PIVOT KIT PDS GLIDER TOP OR BOTTOM M12x1.75	100-034-KIT <i>Peters</i> (100-084-KIT)

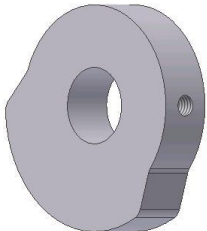
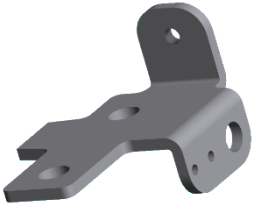
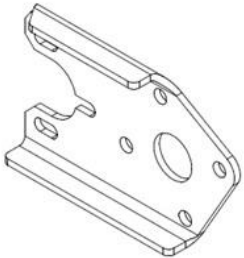
	KIT023 PDS DOORSHAFT FIXING KIT	100-57-A4 <i>Peters</i>
	KIT027 M12 SPH TOP/OILT BOTT FIT FOR RH DOOR VIEWED FROM INSIDE VEHICLE	100-040RL-KIT <i>Peters</i> (OPTARE EXCEL)
	KIT028 M12 SPH TOP/OILT BOTT FIT FOR LH DOOR VIEWED FROM INSIDE VEHICLE	100-040LL-KIT <i>Peters</i> (OPTARE EXCEL)
	KIT027-BRL OILTE BOTTOM PIVOT KIT FOR LH DOOR VIEWED FROM INSIDE VEHICLE	(100-040-A4) <i>Peters</i> (OPTARE EXCEL)
	KIT028-BLL OILTE BOTTOM PIVOT KIT FOR LH DOOR VIEWED FROM INSIDE VEHICLE	(100-040-A4) <i>Peters</i> (OPTARE EXCEL)
	L500-05-ASSY-01 UPPER BEARING BRACKET ASSY With BRG021B Ø 14 SPH BEARING RACE	L500-05-ASSY-01 <i>TDS</i> (ALL OPTARE VEHICLES – TDS DOOR)
	L500-06-LH DOOR GUIDE BRACKET LEFT	L500-06-LH <i>TDS</i> (ALL OPTARE VEHICLES – TDS DOOR EXCEPT OLYMPUS DD)

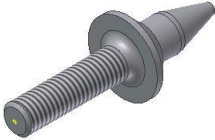
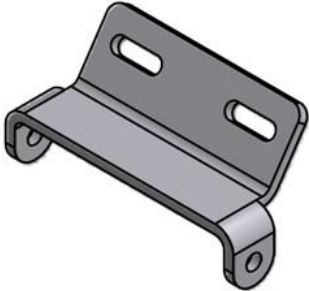
	L500-06-RH DOOR GUIDE BRACKET RIGHT	L500-06-RH TDS (ALL OPTARE VEHICLES – TDS DOOR EXCEPT OLYMPUS DD)
	L500-09-ASSY-01 LOWER BEARING BRACKET ASS With BRG021B Ø 14 SPH BEARING RACE	L500-09-ASSY-01 TDS (ALL OPTARE VEHICLES – TDS DOOR)
	PVP003 Ø12 CLEVIS CLUTCH PIN	214677 Peters
	PVP005 Ø12 x 40 PIVOT PIN	213548 Peters
	PVT001A Ø12 REAR PIVOT PLATE ELEC ACTUATOR	214664 Peters
	PVT002A DOOR PIVOT PLATE	201361 Peters
	PVT003A RH BEARING PIVOT PLATE	214750 Peters

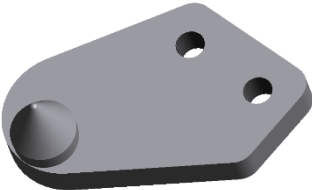
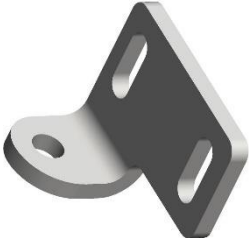
	PVT004A LH BEARING PIVOT PLATE	214751 <i>Peters</i>
	PVT005A M12 ACTUATOR PIVOT PLATE	217117 <i>Peters</i>
	PVT008A PIVOT PLATE RH	201348 <i>Peters</i>
	PVT009A PIVOT PLATE LH	201349 <i>Peters</i>
	PVT010A ENT DOOR HINGE BLOCK LONG- Ø12.7 Spigot	E25408 <i>Deans</i>
	PVT011A ENT DOOR HINGE BLOCK SHORT- Ø12.7 Spigot	E25407 <i>Deans</i>
	PVT013A SHORT PIVOT PLATE TOP RH	214426 <i>Peters</i>

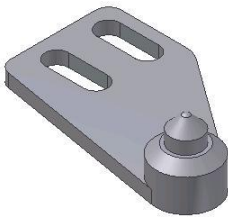
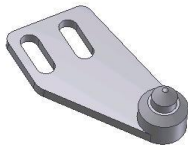
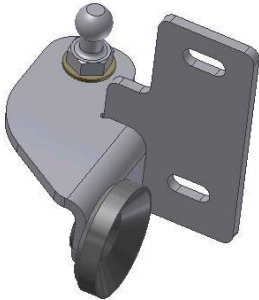
	PVT014A SHORT PIVOT PLATE TOP LH	214427 <i>Peters</i>
 PVT015A	PVT015A LOWER HINGE PIVOT BRACKET- Ø12.7 Spigot	D31431 <i>Deans</i>
 PVT016A	PVT016A UPPER HINGE PIVOT BRACKET- Ø12.7 Spigot	D31388 <i>Deans</i>
 PVT017A	PVT017A UPPER BEARING PIVOT BRACKET Ø14 Spigot	PVT017A <i>TDS</i>
	PVT017-ASY M14 UPPER BEARING PIVOT ASSY	PVT017-ASY <i>TDS</i>
 PVT018A	PVT018A Ø14 LOWER BEARING PIVOT BRACKET- Ø14 Spigot	PVT018A <i>TDS</i>
	PVT018-ASY M14 LOWER BEARING PIVOT ASSY	PVT018-ASY <i>TDS</i>

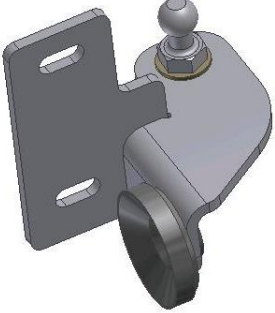
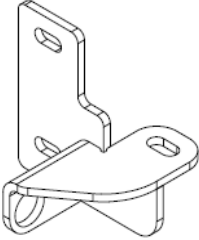
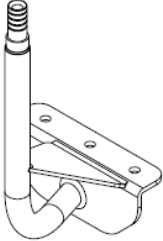
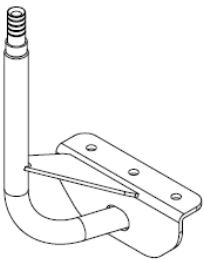
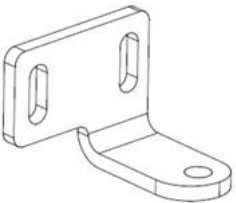
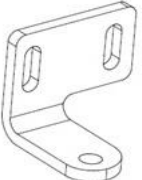
 PVT019A	PVT019A O/D=31.65 x 82(O/L=110) Ø14BOTTOM SPIGOT FITS INTO O/D 38mm DOORSHAFT	216755 <i>Peters</i>
 PVT022	PVT022 M12 PIVOT PLATE RETROFIT ELANCS OMNIDECK	217721 <i>Peters</i>
 PVT023A	PVT023A Ø16 REAR PIVOT PLATE FOR PNEU ACTUATOR	200348 <i>Peters</i>
 PVT025	PVT025 Ø3/4 PIVOT BRACKET WELD ASSY	216660 <i>Peters</i>
	PVT029 LOWER PIVOT ARM ASSY (DEANS PS)	088099 <i>Deans</i>
	PVT031 LOWER PIVOT HINGE PLATE WITH BRG	PVT031 <i>TDS</i>
	ROD101 DRIVE ROD END COULPING	ROD101 <i>TDS</i>

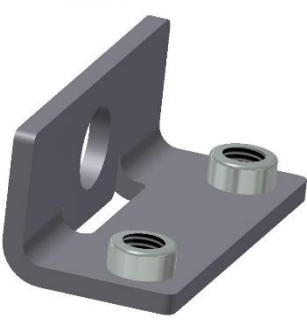
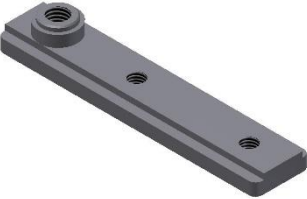
	ROD102 DRIVE ROD SUPPORT BRACKET	ROD102 <i>TDS</i>
	B470 SWITCH CAM SHAFT	B470 <i>Ventura</i>
	B585 PIVOT BOLT M6	B585 <i>Ventura</i> WRIGHTBUS STREETLITE IGE
	B680 END PLATE RIGHT	B680 <i>Ventura</i>
	B688 PIVOT BOLT 16xM10 (PS)	B688 <i>Ventura</i> (PS BOTTOM SUPPORT ASSY)
	C592 CATERPILLAR CABLE SUPPOR BRACKET	C592 <i>Ventura</i>
	C727 ACTUATOR BRACKET L (RS)	C727 <i>Ventura</i>

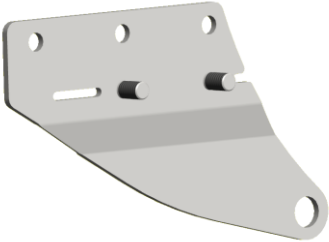
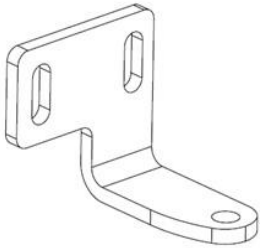
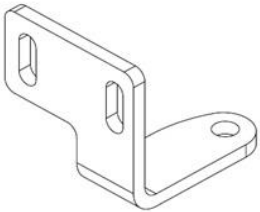
	C924 PSP CATCH PIN	C924 <i>Ventura</i>
	C965 CATCH BLOCK (OLD PS)	C965 <i>Ventura</i>
	D088 CYLINDER BRACKET (FRONT D622)	D088 <i>Ventura</i>
	D090 CYLINDER BRACKET (REAR D622)	D090 <i>Ventura</i>
	D091 CYLINDER BRACKET (CARRIAGE D622)	D091 <i>Ventura</i>
	D102 CAM ROLLER BRACKET	D102 <i>Ventura</i>
	D135 TENSION BRACKET (PS)	D135 <i>Ventura</i>

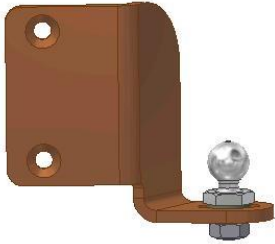
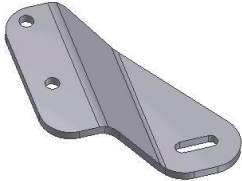
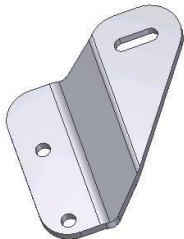
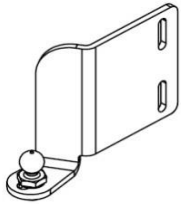
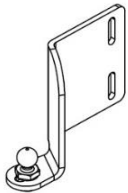
	D525 BOTTOM SUPPORT LEFT	D525 <i>Ventura</i>
	D526 BOTTOM SUPPORT RIGHT	D526 <i>Ventura</i>
	D545 CATCH PIN PLATE LH	D545 <i>Ventura</i>
	D546 CATCH PIN PLATE RH	D546 <i>Ventura</i>
	D549 ENDPLATE RIGHT WELD ASSY	D549 <i>Ventura</i>
	D704 DOORSHAFT ADJUSTING BRACKET	D704 <i>Ventura</i>
	D802 SUPPORT BRACKET DOORSHAFT RH	D802 <i>Ventura</i>

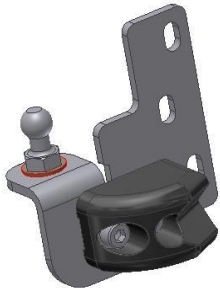
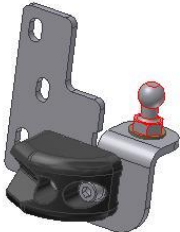
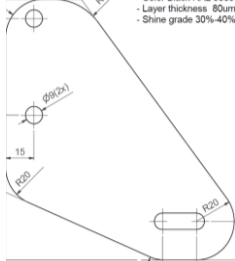
	E096 CATCH PIN PLATE RH	E096 <i>Ventura</i>
	E097 CATCH PIN PLATE RH	E097 <i>Ventura</i>
	E121 BOTTOM SUPPORT ASSY LH PS # PIVOT BOLT = B688 # CATCH BLOCK = D803	E121 <i>Ventura</i> ADL E200 SD PS + E400 DD PS, MCV SD EVOLUTION PS
	E122 BOTTOM SUPPORT ASSY RH PS # PIVOT BOLT = B688 # CATCH BLOCK = D803	E122 <i>Ventura</i> ADL E200 SD PS + E400 DD PS, MCV SD EVOLUTION PS
	E508 END PLATE LEFT WELD ASSY	E508 <i>Ventura</i>
	E818 BOTTOM SUPPORT ASSY LH PS # PIVOT BOLT = B688 # CATCH BLOCK = D803	E818 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3 + STREETCAR PS , ADL E400 DD IG3, EAST LANCS SD IG3/PS + OLYMPUS DD PS, POLISH SCANIA OMNICITY DD IG3/PS, EAST LANCS Olympus DD IG3

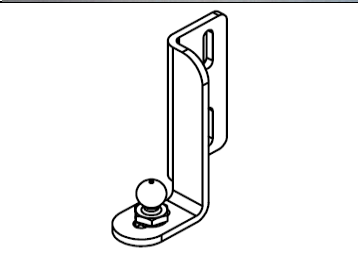
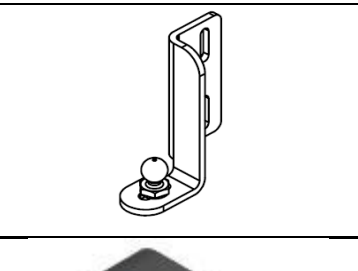
	F302 BOTTOM SUPPORT ASSY RH PS # PIVOT BOLT = B688 # CATCH BLOCK = D803	F302 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3 + STREETCAR PS , ADL E400 DD IG3, EAST LANCS SD IG3/PS + OLYMPUS DD PS, POLISH SCANIA OMNICITY DD IG3/PS, EAST LANCS Olympus DD IG3
	F303 BOTTOM SUPPORT RIGHT	F303 <i>Ventura</i> WRIGHTBUS GEMINI DD PS
	F864 GUIDING BRACKET IG3 LH OMNI	F864 <i>Ventura</i> POLISH SCANIA OMNICITY DD IG3/PS
	F865 GUIDING BRACKET IG3 RH OMNI	F865 <i>Ventura</i> POLISH SCANIA OMNICITY DD IG3/PS
	F913 DOORSHAFT ADJ BRKT LH	F913 <i>Ventura</i>
	F914 DOORSHAFT ADJ BRKT RH	F914 <i>Ventura</i>

	G257 DOOR SHAFT SUPPORT ASSY LH IG3	G257 <i>Ventura</i> POLISH SCANIA OMNICITY DD IG3
	G298 DOOR SHAFT SUPPORT ASSY RH IG3	G298 <i>Ventura</i> POLISH SCANIA OMNICITY DD IG3
	G379 LOWER IG.3 SHAFT BRKT ASSY LH (Bush if required=H074)	G379 <i>Ventura</i>
	G951 PIVOT BOLT 21DIA M10	G951 <i>Ventura</i>
	G955 PIVOT PLATE	G955 <i>Ventura</i>
	G989 PIVOT PIN	G989 <i>Ventura</i>

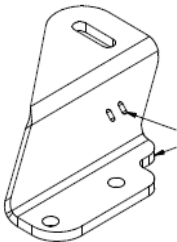
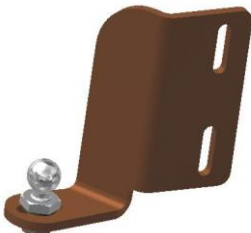
	H036 DRIVE BRACKET ASSY # BEARING BUSH = D107	H036 <i>Ventura</i>
	H096 PIVOT BOLT M12	H096 <i>Ventura</i>
	H227 DOORSHAFT ADJ BRACKET RH	H227 <i>Ventura</i>
	H228 DOORSHAFT ADJ BRACKET LH	H228 <i>Ventura</i>
	H430 FRAME BRACKET IGP RH	H430 <i>Ventura</i>
	H437 DOORSHAFT SUPPORT ASSY LH IG3 (BLACK) # PIVOT BOLT = G951	H437 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3, EAST LANCS Olympus DD IG3

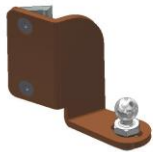
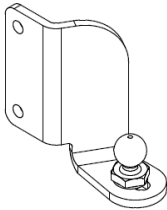
	H465 DOORSHAFT SUPPORT ASSY RH IG3 (BLACK) # PIVOT BOLT = G951	H465 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3, EAST LANCS Olympus DD IG3
	H502 GUIDE BRACKET LEFT IG	H502 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E300 SD IG3, EAST LANCS SD IG3
	H508 GUIDE BRACKET RIGHT IG	H508 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E300 SD IG3, EAST LANCS SD IG3
	H776 BOTTOM SUPPORT LH 135 # PIVOT BOLT = G951	H776 <i>Ventura</i>
	H777 BOTTOM SUPPORT RH 135 # PIVOT BOLT = G951	H777 <i>Ventura</i>
	H987 DOOR SHAFT SUPPORT LH # PIVOT BOLT = G951	H987 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3 + OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3
	H988 DOOR SHAFT SUPPORT RH # PIVOT BOLT = G951	H988 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3 + OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3

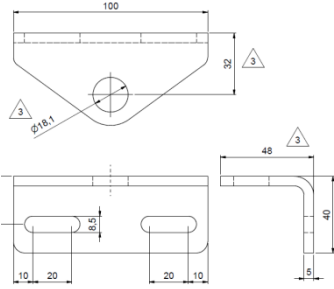

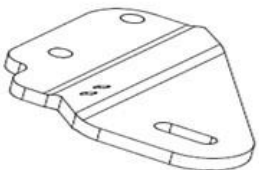
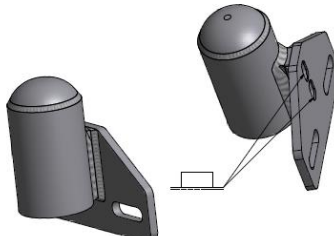
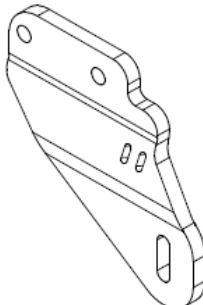
	I269 BOTTOM SUPPORT LEFT PS2 # PIVOT BOLT = B688 # CATCH BLOCK = J405	I269 <i>Ventura</i> OPTARE SD PS VERSA + TEMPO
	I270 BOTTOM SUPPORT RIGHT PS2 # PIVOT BOLT = B688 # CATCH BLOCK = J405	I270 <i>Ventura</i> OPTARE SD PS VERSA + TEMPO
	I291 DOOR GUIDING BRACKET	I291 <i>Ventura</i> EAST LANCS OLYMPUS DD IG3
	I357 DOORSHAFT SUPPORT ASSY LH IG3 100 # PIVOT BOLT = G951	I357 <i>Ventura</i> ADL E200 SD IG4 + E300 SD IG3/IG4 + E400 DD IG3/IG4, TEMSA SD IG4
	I358 DOORSHAFT SUPPORT ASSY RH IG3 100 # PIVOT BOLT = G951	I358 <i>Ventura</i> ADL E200 SD IG4 + E300 SD IG3/IG4 + E400 DD IG3/IG4, TEMSA SD IG4
	I461 GUIDING BRACKET	I461 <i>Ventura</i> ADL E400 DD IG3

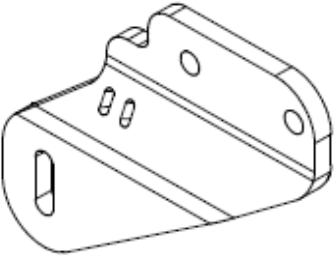
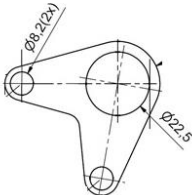
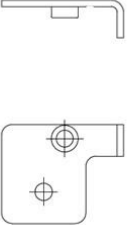
	I500 CONTROL MOUNT BRACKET	I500 <i>Ventura</i>
	I741 ADAPTER BRACKET LH	I741 <i>Ventura</i>
	I801 ADAPTER BRACKET RH	I801 <i>Ventura</i>
	I944 GUIDING BRACKET IGP	I944 <i>Ventura</i> TEMSA SD IG4
	J122 DOOR SHAFT SUPPORT LH # PIVOT BOLT = G951	J122 <i>Ventura</i> MCV SD 112/124RLE IG4
	J123 DOOR SHAFT SUPPORT RH # PIVOT BOLT = G951	J123 <i>Ventura</i> MCV SD 112/124RLE IG4
	J405 CATCH BLOCK BOTTOM SUPPORT PS	J405 <i>Ventura</i>

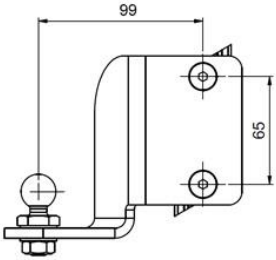
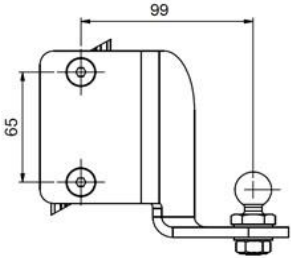
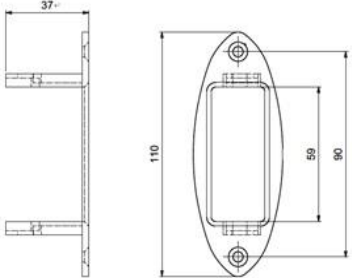
T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk

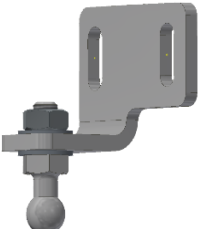
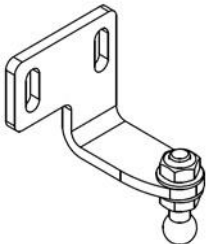
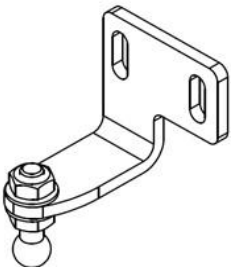
	M671 GUIDING BRACKET RIGHT	M671 <i>Ventura</i> MCV SD 112/124RLE IG4
	M717 GUIDING BRACKET	M717 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + NBFL DD IG4/IG4 PLAT
	N035 DOOR SHAFT SUPPORT LH # PIVOT BOLT = G951	N035 <i>Ventura</i> MCV SD 112/124RLE IG4
	N036 DOOR SHAFT SUPPORT RH # PIVOT BOLT = G951	N036 <i>Ventura</i> MCV SD 112/124RLE IG4
	N058 BOTTOM SUPPORT LH ASSY 90 # PIVOT BOLT = G951	N058 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + STREETLITE SD IG4 + NBFL DD IG4
	N059 BOTTOM SUPPORT RH ASSY 90 # PIVOT BOLT = G951	N059 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + STREETLITE SD IG4 + NBFL DD IG4
	N427 PIVOT POINT	N427 <i>Ventura</i> WRIGHTBUS PS2, MCV DD EVOSSETI PS2

	N881 BOTTOM SUPPORT LH ASSY 90 # PIVOT BOLT = G951	N881 <i>Ventura</i> ADL E200/E400 IG4 + MCV EVOSETI DD IG4
	N882 BOTTOM SUPPORT RH ASSY 90 # PIVOT BOLT = G951	N882 <i>Ventura</i> ADL E200/E400 IG4 + MCV EVOSETI DD IG4
	O272 BOTTOM SUPPORT LH PS2 # PIVOT BOLT = B688 # CATCH BLOCK = P261	O272 <i>Ventura</i> WRIGHTBUS NBFL DD PS
	O273 BOTTOM SUPPORT RH PS2 # PIVOT BOLT = B688 # CATCH BLOCK = P261	O273 <i>Ventura</i> WRIGHTBUS NBFL DD PS
	O400 BOTTOM SUPPORT R 77 (TOGGLE NUT) # PIVOT BOLT = G951	O400 <i>Ventura</i> WRIGHTBUS NBFL DD IG4/IG4 PLAT
	O412 PIVOT POINT BOTTOM NBFL	O412 <i>Ventura</i>
	O413 PIVOT POINT TOP WRIGHT NBFL	O413 <i>Ventura</i>

	O415 BENDED DOOR SUPPORT TOP	O415 <i>Ventura</i> WRIGHTBUS NBFL DD IG4 PLAT
	O553 GUIDING BRACKET LH	O553 <i>Ventura</i>
	O554 GUIDING BRACKET RH	O554 <i>Ventura</i>
	O670 BENDED DOOR SUPPORT BOTTOM	O670 <i>Ventura</i> WRIGHTBUS NBFL DD IG4 PLAT
	P256 BOTTOM SUPPORT LH 3 HOLES ASSY # PIVOT BOLT = B688 # CATCH BLOCK = P261	P256 <i>Ventura</i> MCV DD EVOSETI PS2
	P257 BOTTOM SUPPORT RH 3 HOLES ASSY # PIVOT BOLT = B688 # CATCH BLOCK = P261	P257 <i>Ventura</i> MCV DD EVOSETI PS2
	P725 GUIDING BRACKET L 72.5mm	P725 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4

	P726 GUIDING BRACKET R 72.5mm	P726 <i>Ventura</i> WRIGHTBUS ECLIPSE SD IG4
	Q348 DRIVE BRACKET (R643)	Q348 <i>Ventura</i>
	S930 CYLINDER BRACKET	S930 <i>Ventura</i>
	S950 Cable Bracket	S950 <i>Ventura</i>
	T986 BOTTOM SUPPORT LH ASSY # PIVOT BOLT = B688 # CATCH BLOCK = P261	T986 <i>Ventura</i> WRIGHTBUS PS2
	T988 BOTTOM SUPPORT L	T988 <i>Ventura</i>
	T989 BOTTOM SUPPORT R	T989 <i>Ventura</i>

	U537 IG4 BOTTOM SUPPORT LH 100 TOGGLE NUTS # PIVOT BOLT = G951	U537 <i>Ventura</i>
	U538 IG4 BOTTOM SUPPORT RH 100 TOGGLE NUTS # PIVOT BOLT = G951	U538 <i>Ventura</i>
	VA0203 LH END PIECE	VA0203 <i>Ventura</i>
	VA0204 RH END PIECE	VA0204 <i>Ventura</i>
	VA0541 SENSOR BRACKET	VA0541 <i>Ventura</i>
	VA0912 PS ROLLER BRACKET # USED WITH ROLLER E529 # ROLLER BOLT = VA0557	VA0912 <i>Ventura</i>

	VA3191 DOORSHAFT BRKT LH ASSY 28MM	VA3191 <i>Ventura</i>
	VA3192 DOORSHAFT BRKT RH ASSY 28MM	VA3192 <i>Ventura</i>
	VA3289 DOORSHAFT ADJ BRKT LH ASSY	VA3289 <i>Ventura</i>
	VA3290 DOORSHAFT ADJ BRKT RH ASSY	VA3290 <i>Ventura</i>
	VA3700 BOTTOM SUPPORT RH ASSY T-SLOT # PIVOT BOLT = B688	VA3700 <i>Ventura</i> WRIGHTBUS NBFL PLAT RS
	VA6793 Guide Bracket LH	VA6793 <i>Ventura</i>
	VA6794 Guide Bracket RH	VA6794 <i>Ventura</i>
	VB2533 LH END PIECE	VB2533 <i>Ventura</i>

	VB2568 RH END PIECE	VB2568 <i>Ventura</i>
---	-------------------------------	------------------------------