


TDS PRODUCT IMAGE SHEET >



**VENTURA – NBFL/NRM (ROUTEMASTER) – DOOR LEAF SET**

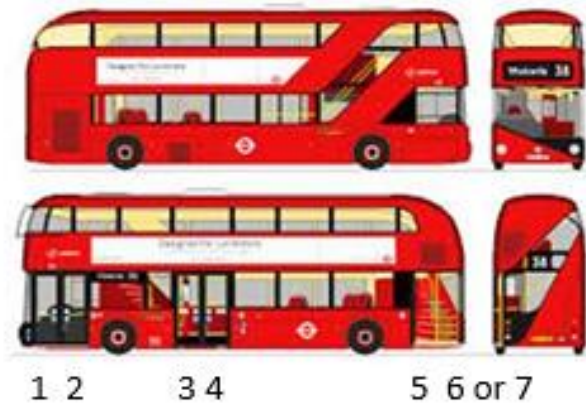

Leaves 1 & 2 = Front IG4 Inward Glider

Leaves 3 & 4 = Mid PS Plug Slider

Leaves 5 & 6 = Rear IG4 Platform Inward Glider

Leaf 7 = Rear RS Platform Rapid Slider (instead of 5 & 6)

Image	TDS Part Number & Description	OE Part Numbers (SUPPLIED FOR DOOR SYSTEM)
	<p align="center"><b>B253</b> DOORSHAFT BEARING BUSH IG</p>	<p align="center"><b>B253</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p align="center"><b>B689</b> DOORSHAFT BEARING BUSH</p>	<p align="center"><b>B689</b> <i>Ventura</i> MID PS / REAR RS</p>
	<p align="center"><b>C199</b> HANDGRIP PLASTIC</p>	<p align="center"><b>C199</b> <i>Ventura</i> MID PS</p>
	<p align="center"><b>C492</b> VIBRATION DAMPER 20x15</p>	<p align="center"><b>C492</b> <i>Ventura</i> MID PS</p>

	<p><b>D331-001</b> SENSITIVE EDGE 1905</p>	<p><b>D331-001</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT / MID PS / REAR RS</p>
	<p><b>D672</b> BRUSH ASSY 523L</p>	<p><b>D672</b> <i>Ventura</i> MID PS</p>
	<p><b>E464</b> BEARING BUSH IG4 PLAT</p>	<p><b>E464</b> <i>Ventura</i> REAR IG4 PLAT</p>
 <p>F681</p>	<p><b>F681</b> DOORSHAFT TOP ARM BEARING</p>	<p><b>F681</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
 <p>G202</p>	<p><b>G202</b> RUBBER END STOP</p>	<p><b>G202</b> <i>Ventura</i> MID PS / REAR RS</p>
 <p>H 4 7 0</p>	<p><b>H470</b> PRECISION BOLT LOW</p>	<p><b>H470</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p><b>H750</b> 26MM PSP ROLLER ASSY (D755+8)  ASSOCIATED PARTS &gt; D760 SPACER, B706 BOLT</p>	<p><b>H750</b> <i>Ventura</i> MID PS / REAR RS</p>

 <p><b>H901</b></p>	<p><b>H901</b> HANDRAIL PLASTIC SPACER</p>	<p><b>H901</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p><b>I162</b> DOORSHAFT BEARING BUSH IG4</p>	<p><b>I162</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
 <p><b>I883</b></p>	<p><b>I883</b> WABCO CONTROL VALVE ASSY</p>	<p><b>I883</b> <i>Ventura</i> MID PS / REAR RS</p>
 <p><b>I989</b></p>	<p><b>I989</b> GUIDING SHAFT ASSY (78) CABLE ENT</p>	<p><b>I989</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
 <p><b>I995</b></p>	<p><b>I995</b> SLIDE PLATE LEFT EXTENDED</p>	<p><b>I995</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
 <p><b>I996</b></p>	<p><b>I996</b> SLIDE PLATE RIGHT EXTENDED</p>	<p><b>I996</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>

	<p><b>J593</b> LEVER BLOCK</p>	<p><b>J593</b> <i>Ventura</i> MID PS / REAR RS</p>
	<p><b>K095</b> PORTAL RUBBER U FRAME 1250</p>	<p><b>K095</b> <i>Ventura</i> FRONT IG4</p>
	<p><b>L744</b> BEARING POINT FLAP IG4</p>	<p><b>L744</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p><b>L745</b> BEARING BUSH FLAP IG4</p>	<p><b>L745</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p><b>L778</b> FLAP BRACKET IG4</p>	<p><b>L778</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p><b>L782</b> DOORSHAFT BEARING BUSH</p>	<p><b>L782</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>

 <p>L805</p>	<p><b>L805</b> DOORSHAFT BEARING BLOCK IG4</p>	<p><b>L805</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p><b>L812</b> DOORSHAFT TOP BOLT M16x100</p>	<p><b>L812</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p><b>L846-003</b> FLAP ASSY IG4 LH (509)</p>	<p><b>L846-003</b> <i>Ventura</i> FRONT IG4</p>
	<p><b>L865-003</b> FLAP ASSY IG4 RH (509)</p>	<p><b>L865-003</b> <i>Ventura</i> FRONT IG4</p>
	<p><b>L865-005</b> FLAP ASSY IG4 RH (765)</p>	<p><b>L865-005</b> <i>Ventura</i> REAR IG4 PLAT</p>
 <p>L886</p>	<p><b>L886</b> PIVOT POINT BOLT FLAP IG4</p>	<p><b>L886</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>

	<p><b>M717</b> GUIDING BRACKET</p>	<p><b>M717</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p><b>N058</b> BOTTOM SUPPORT L90</p>	<p><b>N058</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p><b>N059</b> BOTTOM SUPPORT R90</p>	<p><b>N059</b> <i>Ventura</i> FRONT IG4 / REAR IG4 PLAT</p>
	<p><b>O272</b> BOTTOM SUPPORT ASSY LH PS</p>	<p><b>O272</b> <i>Ventura</i> MID PS</p>
	<p><b>O273</b> BOTTOM SUPPORT ASSY RH PS</p>	<p><b>O273</b> <i>Ventura</i> MID PS</p>
	<p><b>O281</b> CATCH WEDGE LH</p>	<p><b>O281</b> <i>Ventura</i> MID PS</p>

	<p><b>O282</b> CATCH WEDGE RH</p>	<p><b>O282</b> <i>Ventura</i> MID PS</p>
	<p><b>O400</b> DOORSHAFT SUPPORT ASSY R77</p>	<p><b>O400</b> <i>Ventura</i> REAR IG4 PLAT</p>
	<p><b>O412</b> PIVOT POINT BOTTOM NBFL</p>	<p><b>O412</b> <i>Ventura</i> REAR IG4 PLAT</p>
	<p><b>O413</b> PIVOT POINT TOP WRIGHT NBFL</p>	<p><b>O413</b> <i>Ventura</i> REAR IG4 PLAT</p>
	<p><b>O430</b> BRUSH ASSY 543L</p>	<p><b>O430</b> <i>Ventura</i> REAR IG4 PLAT</p>
	<p><b>O670</b> BENDED DOOR SUPPORT BOTTOM</p>	<p><b>O670</b> <i>Ventura</i> REAR IG4 PLAT</p>



	<p><b>O689</b> BOLT DIN 912 M16x1.5x60 ZP</p>	<p><b>O689</b> <i>Ventura</i> REAR IG4 PLAT</p>
	<p><b>Q916</b> CATCH BLOCK BENDED DOOR</p>	<p><b>Q916</b> <i>Ventura</i> REAR IG4 PLAT</p>
	<p><b>S255</b> END STOP ASSY - M8x35</p>	<p><b>S255</b> <i>Ventura</i> REAR RS</p>
	<p><b>VA0290</b> HANDGRIP FLAT</p>	<p><b>VA0290</b> <i>Ventura</i> REAR RS</p>
	<p><b>VA3302</b> SIDE SENS EDGE - NBFL</p>	<p><b>VA3302</b> <i>Ventura</i> REAR IG4 PLAT</p>
	<p><b>VA3616</b> CONNECTING ROD M8</p>	<p><b>VA3616</b> <i>Ventura</i> REAR RS</p>
	<p><b>VA3699</b> BOTTOM SENS EDGE - NBFL</p>	<p><b>VA3699</b> <i>Ventura</i> REAR IG4 PLAT</p>

	<p><b>VA3700</b> BOTTOM SUPPORT RH</p>	<p><b>VA3700</b> <i>Ventura</i> REAR IG4 PLAT / REAR RS</p>
	<p><b>VA3702</b> COVER CENTRE - NBFL FOOT SENS</p>	<p><b>VA3702</b> <i>Ventura</i> REAR IG4 PLAT</p>
	<p><b>VA3703</b> COVER LEFT - NBFL FOOT SENS</p>	<p><b>VA3703</b> <i>Ventura</i> REAR IG4 PLAT</p>
	<p><b>VA3704</b> CABLE LOOM DOORLEAF 2/2 POLE</p>	<p><b>VA3703</b> <i>Ventura</i> REAR IG4 PLAT</p>
	<p><b>VA4802-002</b> DOOR SEAL LH 2200 CUTOUT - GEN3</p>	<p><b>VA4802-002</b> <i>Ventura</i> MID PS / REAR RS</p>
	<p><b>VA4802-003</b> DOOR SEAL RH 2200 CUTOUT - GEN3</p>	<p><b>VA4802-003</b> <i>Ventura</i> MID PS / REAR RS</p>