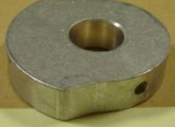


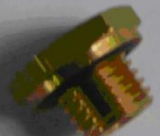
TDS PRODUCT IMAGE SHEET >

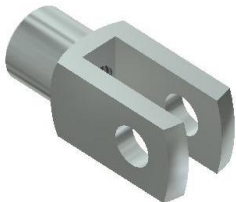
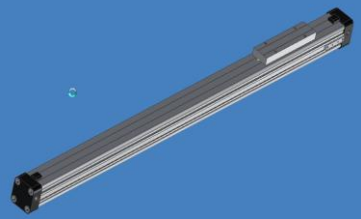
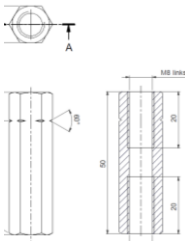
VENTURA – PLUG SLIDER – DOOR MECHANISM & CONTROLS

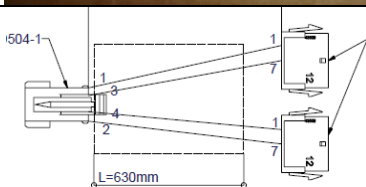
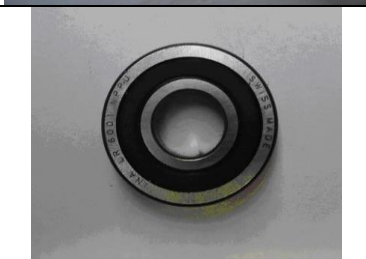
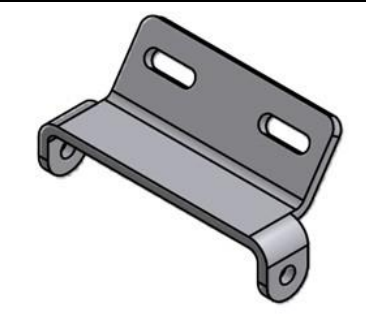
Image	TDS Part Number & Description	OE Part Numbers (WHERE FITTED)
 A155 MICROSWITCH	A155 MICROSWITCH K5 (FITTED TO A159/A160)	A155 Ventura PART OF A159/A160
 A159	A159 OBSTRUCTION DETECTION VALVE	A159 Ventura WRIGHTBUS GEMINI DD
 A160	A160 OBSTRUCTION DETECTION VALVE	A160 Ventura WRIGHTBUS ECLIPSE SD + STREETCAR + STREETLITE SD + NBFL DD, ADL E200 SD + E400 DD, PLAXTON PRESIDENT DD, EAST LANCS SD, OPTARE SD VERSA + TEMPO, MCV SD EVOLUTION, BLUEBIRD SD RS
 A358	A358 PRESSURE SWITCH	A358 Ventura WRIGHTBUS GEMINI DD, POLISH SCANIA OMNICITY DD
 A368	A368 MICROSWITCH HARTMANN # SECURING SCREW - B396	A368 Ventura WRIGHTBUS ECLIPSE SD + GEMINI DD + STREETCAR + STREETLITE SD + NBFL DD, ADL E200 SD + E400 DD, PLAXTON PRESIDENT DD, EAST LANCS SD + OLYMPUS DD, OPTARE SD TEMPO + VERSA, MCV SD EVOLUTION, BLUEBIRD SD RS

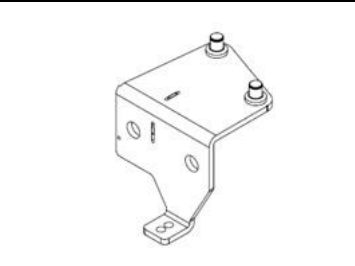
 A517	A517 5/2 VDMA 24VDC G1/8	A517 Ventura WRIGHTBUS GEMINI DD
	A751 T CONNECTOR DIA 4mm	A751 Ventura WRIGHTBUS PS2
 A757	A757 RETAINING RING (BEARING HOUSING CARRIAGE)	A757 Ventura
 A760	A760 BOLT M6x16 ZP	A760 Ventura
 A775	A775 BOLT M10x20 ZP	A775 Ventura
	A925 GUIDE ROLLER LR202 2RSR	A925 Ventura
 A976	A976 CONNECTOR DIN B WITH VARISTOR24 (WABCO SOLENOID)	A976 Ventura

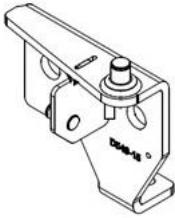
 FIT052B	B158 FIT052B ELBOW 6mm PUSHFIT x M5	FIT052B TDS B158 Ventura
	B309 4/2 EMERGENCY VALVE M10x1	B309 Ventura PART OF F184
	B310 ROTARY GRIP FOR 4/2 EMERG. VALVE	B310 Ventura PART OF F184
 B 4 7 0 SWITCH CAM	B470 SWITCH CAM SHAFT	B470 Ventura ALL PLUG SLIDERS
 B680	B680 END PLATE RH	B680 Ventura
 B711	B711 M8 x 1.25 RH RODEND	B711 Ventura PART OF CONNECTOR ROD ASSYS
 B712	B712 M8 x 1.25 LH RODEND	B712 Ventura PART OF CONNECTOR ROD ASSYS

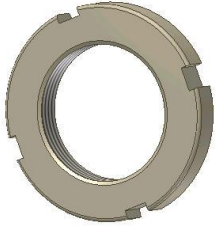
 B969	B969 BOLT M10x25 ZP	B969 <i>Ventura</i>
 C215	C215 LEVER SHAFT LEFT	C215 <i>Ventura</i>
 C247	C247 PNEUMATIC BASE CONTROL UNIT WABCO MTS	C247 <i>Ventura</i> BASE UNIT FOR > F060, F070, F689, G926, I883
 C248	C248 ELECTRIC CONTROL UNIT MTS PX	C248 <i>Ventura</i> POLISH SCANIA OMNICITY DD (OLDER)
	C250 ELECTRIC PUSH BUTTON N/O	C250 <i>Ventura</i> POLISH SCANIA OMNICITY DD
	C251 BRASS PLUG M12x1.5 (WABCO BLOCK)	C251 <i>Ventura</i>
 C258	C258 CLASP LEVER	C258 <i>Ventura</i>

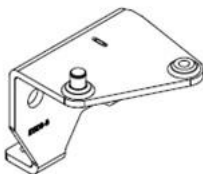
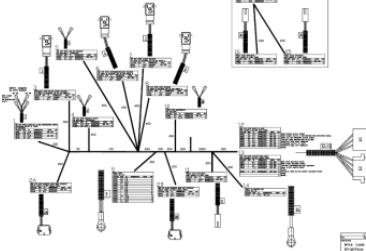
	C290 FORK JOINT	C290 <i>Ventura</i>
 C334	C334 PRESSURE SWITCH NC 4BAR	C334 <i>Ventura</i> BLUEBIRD SD RS
	C434 BASE PS RODLESS CYLINDER 32x730 (used for D622/F168)	C434 <i>Ventura</i>
	C519 CONNECTING ROD M8x50	C519 <i>Ventura</i> PLAXTON PRESIDENT DD
 C592	C592 CATERPILLAR CABLE SUPPORT BRACKET	C592 <i>Ventura</i>
 C714	C714 TOOTHED BELT PULLEY HTD36- 3M-15	C714 <i>Ventura</i>
 C715	C715 TOOTHED BELT HTD 225-3M (75)	C715 <i>Ventura</i>


	C731 KEY DIN 6885 A 3x3x16	C731 <i>Ventura</i>
	C943 CABLE LOOM SENSITIVE EDGES	C943 <i>Ventura</i> POLISH SCANIA OMNICITY DD
	D102 CAM ROLLER BRACKET	D102 <i>Ventura</i>
	D105 GUIDE ROLLER Ø12 ROLLER BEARING OD=30x8	D105 <i>Ventura</i>
	D107 Ø12 BEARING BUSH ID=12x7. OD=14 F=19.75x1.0	D107 <i>Ventura</i>
	D135 TENSION BRACKET (PS)	D135 <i>Ventura</i>
	D172 CABLE 1314mm	D172 <i>Ventura</i> WRIGHTBUS STREETCAR

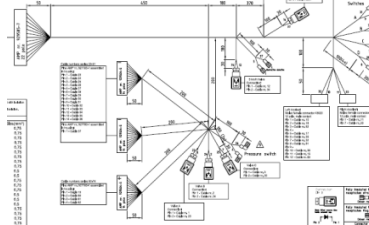
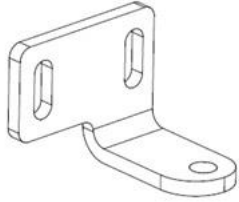
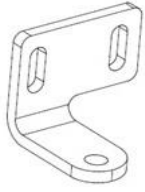
	D325 CUSHIONING RUBBER RING 6MM	D325 <i>Ventura</i>
	D326 SPACER RING D=21 POM	D326 <i>Ventura</i> WRIGHTBUS PS2
	D333 DISABLED BLUE ILLUMINATED BUTTON (SINGLE GLAZE)	D333 <i>Ventura</i> EAST LANCS SD + OLYMPUS DD
	D340 POTENTIOMETER 180 DEG.	D340 <i>Ventura</i> POLISH SCANIA OMNICITY DD
	D527 DOOR HEIGHT ADJ BRACKET RH D528 (SHOWN) DOOR HEIGHT ADJ BRACKET LH	D527 <i>Ventura</i> D528 <i>Ventura</i>
	D535 CABLE 1214mm	D535 <i>Ventura</i> ADL E200 SD + E400 DD, PLAXTON PRESIDENT DD, EAST LANCS SD + OLYMPUS DD, MCV SD EVOLUTION, POLISH SCANIA OMNICITY DD
	D548 ENDPLATE LH	D548 <i>Ventura</i>

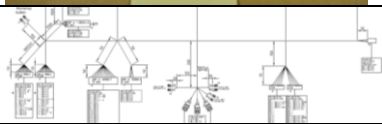
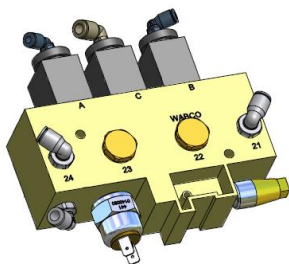
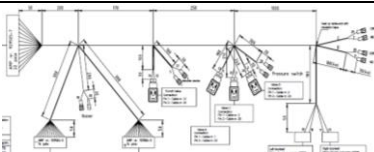
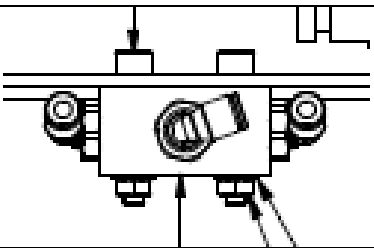
	D549 ENDPLATE RH	D549 <i>Ventura</i>
	D622 RODLESS CYLINDER (PS) 1170 ASSY	D622 <i>Ventura</i> PLAXTON PRESIDENT DD
	ELE096A SOLENOID COIL 24V DC WABCO BASE BLOCK	ELE096A <i>Ventura</i> ALL PLUG SLIDERS
	E114 OR VALVE G1/8/6 ASSY	E114 <i>Ventura</i> EAST LANCS SD
	E234 LUBRICATOR NIPPLE M6-180	E234 <i>Ventura</i> WRIGHTBUS PS2
	E286 PS1 SPIRAL CABLE ASSY	E286 <i>Ventura</i> WRIGHTBUS GEMINI DD, ADL E200 SD + E400 DD, PLAXTON PRESIDENT DD, EAST LANCS OLYMPUS DD, MCV SD EVOLUTION, POLISH SCANIA OMNICITY DD
	E321 CYLINDER ISO-VDMA 32x100	E321 <i>Ventura</i> ADL E200 EV PSE2


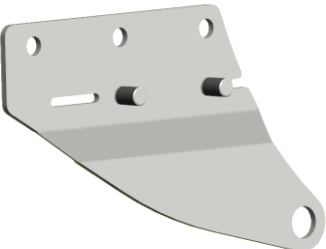
	E322 Locking Collar	E322 <i>Ventura</i>
	E324 SPRING - EMERGENCY CYLINDER	E324 <i>Ventura</i>
	E328 Ø32x895 BASE RODLESS CYLINDER (E820/VA3604)	E328 <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS + GEMINI DD PS (LATER) + STREETLITE SD PS + STREETCAR PS, NBFL RS OPTARE TEMPO SD PS
	E369 5/2 DUMP VALVE FOR WABCO (REPLACED BY U174)	E369 <i>Ventura</i> WRIGHTBUS STREETCAR
	E398 24V DOOR BUZZER (85dB @ 30cm)	E398 <i>Ventura</i>
	E420 PS SPACER ARM	E420 <i>Ventura</i>
	E469 5/2 VALVE 24VDC G1/8 (REPLACED BY P985-KIT)	E469 <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS + GEMINI DD PS + STREETCAR PS, ADL E300 SD IG3 + E400 DD IG3/PS, EAST LANCS SD IG3/PS, MCV SD EVOLUTION PS

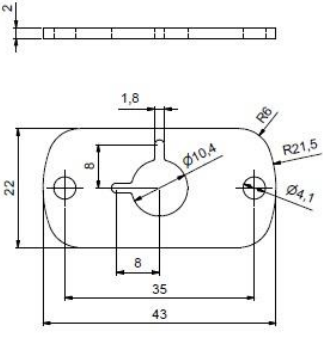
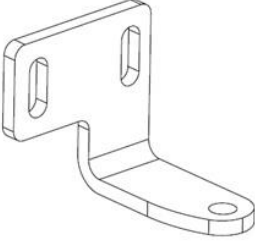
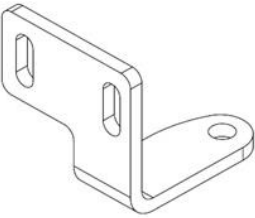
	E470 5/2 INTERLOCK VALVE (REPLACED BY Q003-KIT)	E470 <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS + GEMINI DD PS + STREETLITE SD PS, ADL E200 SD PS + E300 SD IG3 + E400 DD IG3/PS, PLAXTON PRESIDENT DD PS, EAST LANCS SD IG3/PS + OLYMPUS DD IG3/PS, OPTARE SD VERSA PS + TEMPO PS, MCV SD EVOLUTION PS
	E508 END PLATE LEFT WELD ASSY	E508 <i>Ventura</i>
	E515 CONNECTING ROD M8x50 ASSY	E515 <i>Ventura</i> WRIGHTBUS ECLIPSE SD + STREETCAR, ADL E200 SD, PLAXTON PRESIDENT DD, OPTARE SD TEMPO, POLISH SCANIA OMNICITY DD
	E529 Ø10 GUIDE ROLLER LR 200 2RSR PS OD=30x9	E529 <i>Ventura</i> WRIGHTBUS NBFL DD PS
	E820 Ø32x895 ASSY RODLESS CYLINDER (PS) TDS REFURB SERVICE = E820-RK # BASE CYLINDER = E328 # SEAL REPAIR KIT = K586	E820 <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS + GEMINI DD PS (LATER) + STREETLITE SD PS + STREETCAR PS, OPTARE TEMPO SD PS
	E875 CABLE LOOM DD WRIGHT	E875 <i>Ventura</i> WRIGHTBUS GEMINI DD
	E971 TUBE RESTRICTOR 6>4 (1.5mm)	E971 <i>Ventura</i> ADL E400 DD, PLAXTON PRESIDENT DD, POLISH SCANIA OMNICITY DD

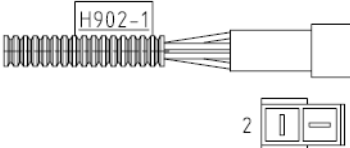
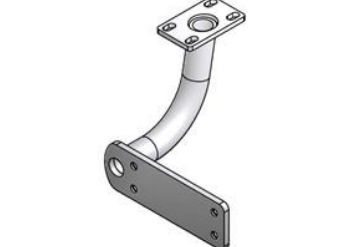
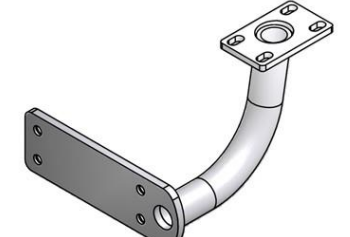
	F017 CABLE CHT46 (FOR CAPTRON BUTTONS) SUPPLIED WITH Q149-KIT	F017 <i>Ventura</i>
	F070 WABCO PNEUMATIC CONTROL ASSY MTS	F070 <i>Ventura</i> WRIGHTBUS ECLIPSE SD + GEMINI DD + STREETCAR, OPTARE SD VERSA + TEMPO
	F168 RODLESS CYLINDER (PS) 32x730 ASSY TDS REFURB SERVICE = F168-RK # SEAL REPAIR KIT = K587	F168 <i>Ventura</i> WRIGHTBUS GEMINI DD
	F169 CONNECTING ROD M8x75 ASSY	F169 <i>Ventura</i> WRIGHTBUS GEMINI DD
	F170 CONNECTING ROD M8x120 ASSY	F170 <i>Ventura</i> WRIGHTBUS GEMINI DD
	F230 CONNECTING ROD M8x90 ASSY	F230 <i>Ventura</i> WRIGHTBUS GEMINI DD
	F184 EMERGENCY VALVE ASSY 6mm Push in Con's	F184 <i>Ventura</i> WRIGHTBUS ECLIPSE SD + GEMINI DD, ADL E400 DD, PLAXTON PRESIDENT DD, EAST LANCS SD + OLYMPUS DD, MCV SD EVOLUTION, POLISH SCANIA OMNICITY DD
	F316 TUBE RESTRICTOR 8>6 (1.3mm)	F316 <i>Ventura</i> WRIGHTBUS GEMINI DD
	F406 6PIN CONNECTOR MALE	F406 <i>Ventura</i>

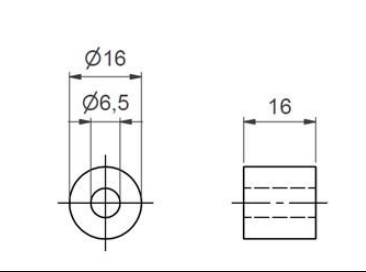
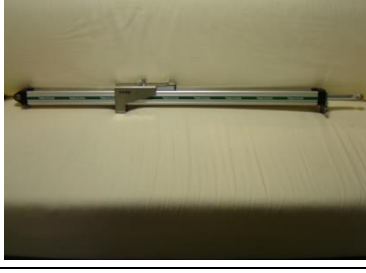
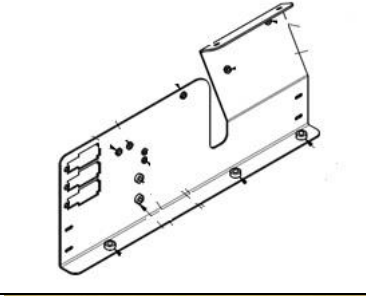
 F407	F407 6PIN CONNECTOR FEMALE	F407 <i>Ventura</i>
	F424 CABLE LOOM PS WABCO	F424 <i>Ventura</i> WRIGHTBUS ECLIPSE SD + STREETCAR + NBFL DD, OPTARE SD VERSA + TEMPO
 F586	F586 TUBE RESTRICTOR 6>4 (1.3mm)	F586 <i>Ventura</i> WRIGHTBUS ECLIPSE SD + NBFL DD, ADL E200 SD + E400 DD, EAST LANCS OLYMPUS DD, OPTARE SD VERSA, MCV SD EVOLUTION, NFBL PS
 F689	F689 WABCO PNEUMATIC CONTROL ASSY MTS ASSY	F689 <i>Ventura</i> POLISH SCANIA OMNICITY DD
	F913 DOORSHAFT ADJ BRKT LH	F913 <i>Ventura</i>
	F914 DOORSHAFT ADJ BRKT RH	F914 <i>Ventura</i>
	F922 RODLESS CYLINDER (PS) 32x795 ASSY TDS REFURB SERVICE = F922-RK # SEAL REPAIR KIT = K585	F922 <i>Ventura</i> POLISH SCANIA OMNICITY DD

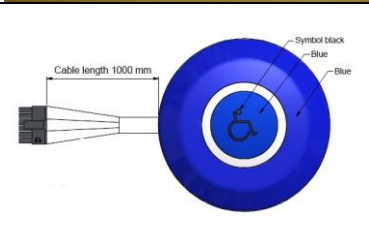
	F975 DISABLED BLUE ILLUMINATED BUTTON (DOUBLE GLAZE)	F975 <i>Ventura</i> WRIGHTBUS STREETCAR
	F995 MICROSWITCH N31075	F995 <i>Ventura</i> WRIGHTBUS STREETCAR
	G020 OPEN GREEN ILLUMINATED BUTTON (SINGLE GLAZE)	G020 <i>Ventura</i> WRIGHTBUS STREETCAR
	G208 CABLE LOOM PS WABCO MTS	G208 <i>Ventura</i> POLISH SCANIA OMNICITY DD
	G525 WABCO VALVE ASSY	G525 <i>Ventura</i> PLAXTON PRESIDENT DD
	G528 CABLE LOOM PS WABCO DD	G528 <i>Ventura</i> EAST LANCS OLYMPUS DD
	G714 Y CONNECTOR 6mm	G714 <i>Ventura</i> WRIGHTBUS PS2
	G811 OR-VALVE	G811 <i>Ventura</i> WRIGHTBUS STREETLITE SD, BLUEBIRD SD RS

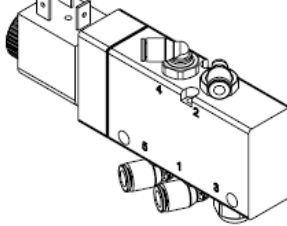
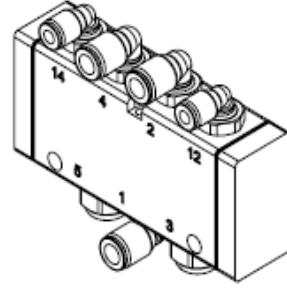
	G907 EMERGENCY OPEN RAISED BUTTON PNEUMATIC	G907 <i>Ventura</i> OPTARE SD VERSA + TEMPO
	G914 OR VALVE G1/8/4 ASSY	G914 <i>Ventura</i> ADL E400 DD, OPTARE SD VERSA + TEMPO
	G920 RODLESS CYLINDER ASSY	G920 <i>Ventura</i>
	G926 (F060) WABCO PNEUMATIC CONTROL ASSY MTS ASSY STEEL FITTINGS	G926 (F060) <i>Ventura</i> WRIGHTBUS GEMINI DD PS, POLISH SCANIA OMNICITY DD IG3
	H036 DRIVE BRACKET ASSY # BEARING BUSH = D107	H036 <i>Ventura</i>
	H080 CONNECTING ROD END M8	H080 <i>Ventura</i> WRIGHTBUS PS2
	H110 PIN	H110 <i>Ventura</i>

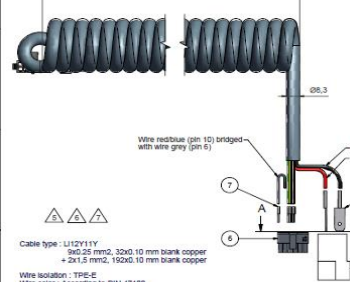
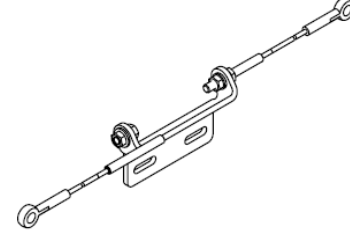
	H132 POTENTIOMETER PLATE	H132 <i>Ventura</i>
	H227 DOORSHAFT ADJ BRACKET RH	H227 <i>Ventura</i>
	H228 DOORSHAFT ADJ BRACKET LH	H228 <i>Ventura</i>
	H549 DOOR ARM LEFT PS	H549 <i>Ventura</i> EASTLANCS SD
	H618 WIRING LOOM IG3 WRIGHT	H618 <i>Ventura</i> POLISH SCANIA OMNICITY DD, NBFL IG4
	H694 DRIVERS DOUBLE FLUSH BUTTON PNEUMATIC	H694 <i>Ventura</i> WRIGHTBUS NBFL DD, OPTARE SD VERSA, NBFL DD IG4, NBFL IG4 PLAT, NBFL IG4 PS

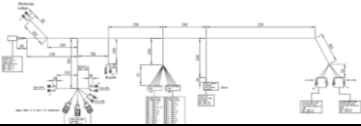
	H877 5/2 BI-STABLE VALVE JMFH-5-1/8-B ASSY	H877 <i>Ventura</i> WRIGHTBUS DD KMB
	H895 MINI CYLINDER ESN-25-25-P	H895 <i>Ventura</i>
	H902 CABLE LOOM SHELF PLATE SPOTLIGHT	H902 <i>Ventura</i> WRIGHTBUS NBFL DD
	I026 TUBE RESTRICTOR 6>4 (1.7mm)	I026 <i>Ventura</i> BLUEBIRD SD RS
	I226 ELECTRIC PUSHBUTTON NO	I226 <i>Ventura</i> WRIGHTBUS STREETLITE IGE ADL E200 EV
	I366 DOOR ARM LEFT PS	I366 <i>Ventura</i> ADL E400
	I367 DOOR ARM RIGHT PS	I367 <i>Ventura</i> ADL E400

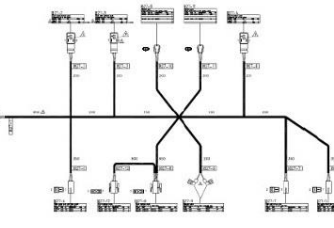
	I371 OVERCENTRE SOFT STOPPER ASSEMBLY	I371 <i>Ventura</i>
	I369 SOFT STOP BUSH PU Ø16Ø6,5 L=16	I369 <i>Ventura</i>
	I470 EMERGENCY OPEN RAISED BUTTON PNEU (N/O) # VALVE = L169 < EARLIER VERSION	I470 <i>Ventura</i> POLISH SCANIA OMNICITY DD IG3/PS
	I486 RODLESS CYLINDER (PS) 32x795 ASSY TDS REFURB SERVICE = I486-RK # SEAL REPAIR KIT = K585	I486 <i>Ventura</i> ADL E200 SD + E400 DD, EAST LANCS SD, OPTARE VERSA SD, MCV EVOLUTION SD
	I500 CONTROL PLATE (REV 8)	I500 <i>Ventura</i>
	I523 CABLE LOOM PS ADL E200	I523 <i>Ventura</i> ADL E200 SD, E400 DD
	I662 MINI CYLINDER R1012-0025 RB	I662 <i>Ventura</i> POLISH SCANIA OMNICITY DD

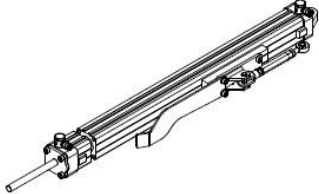
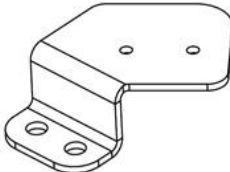
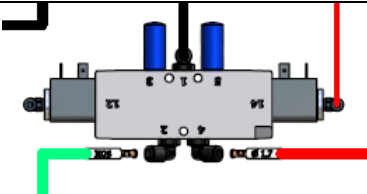
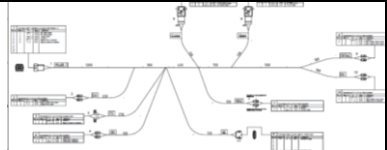
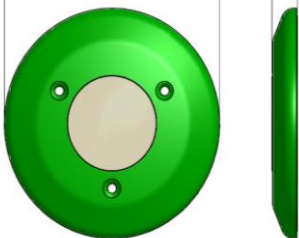
	I741 ADAPTER BRACKET ASSY LH	I741 <i>Ventura</i>
	I801 ADAPTER BRACKET ASSY RH	I801 <i>Ventura</i>
	I823 EMERGENCY OPEN FLUSH BUTTON ELECTRIC & PNEUMATIC	I823 <i>Ventura</i> ADL E400 DD
	I824 DOUBLE BUTTON – ELECTRIC & PNEUMATIC OPEN/CLOSE	I824 <i>Ventura</i> ADL E400 DD, OPTARE SD VERSA + TEMPO
	I826 FILTER REGULATOR ASSY 8mm Push in Con's	I826 <i>Ventura</i> <i>Replaced by Q066</i> ADL E400 DD, OPTARE SD TEMPO
	I830 PS CONNECTOR ROD	I830 <i>Ventura</i> ADL E200 SD + E400 DD, OPTARE SD VERSA, POLISH SCANIA OMNICITY DD
	I835 BUTTON CAPTRON BLUE DISABLED (WALL MOUNT)	I835 <i>Ventura</i>

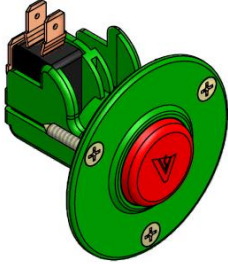
	I883 WABCO PNEUMATIC ASSY - MTS	I883 <i>Ventura</i> WRIGHTBUS NBFL DD, ADL E200 SD + E400 DD, MCV SD EVOLUTION
	I898 INTERNAL EMERGENCY BUTTON PNEUMATIC	I898 <i>Ventura</i>
	I994 BUTTON EAO 1 SIDE GREY WC # OCT14 - REPLACED BY Q149-KIT	I994 <i>Ventura</i> MCV SD EVOLUTION PS
	Q149-KIT BUTTON CAPTRON 1 SIDE GREY WC # REPLACES I994	Q149+F017 <i>Ventura</i> MCV SD EVOLUTION PS
	J087 CABLE LOOM	J087 <i>Ventura</i> MCV SD EVOLUTION
	J089 5/2 VALVE 24VDC G1/8 SUB	J089 <i>Ventura</i> POLISH SCANIA OMINCITY DD
	J090 5/2 VALVE BI-STABLE PNEU. ASSY	J090 <i>Ventura</i> POLISH SCANIA OMINCITY DD

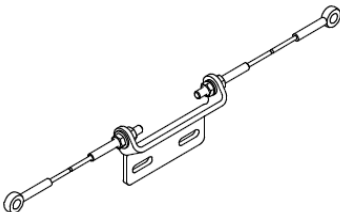
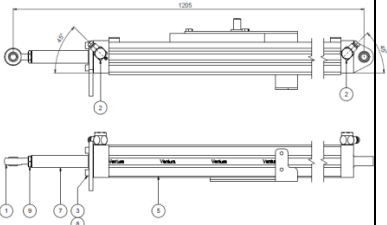
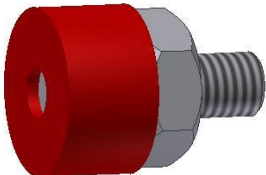
	J097 12V SOLENOID COIL MSFG-12-OD	J097 Ventura
	J278 SPIRAL CABLE ASSY	J278 Ventura BLUEBIRD SD RS
	J400 CABLE 1314mm ASSY	J400 Ventura WRIGHTBUS ECLIPSE SD + STREETCAR, OPTARE SD TEMPO
	J407 CABLE 1214mm ASSY	J407 Ventura OPTARE SD VERSA
	J463 SLOW-START VALVE (8mm con) to 2x6mm Fittings	J463 Ventura BLUEBIRD SD RS
	J618 DOUBLE FLUSH BUTTON PNEUMATIC	J618 Ventura WRIGHTBUS NBFL DD
	J684 SUPERSEAL TOP BRUSH (F416-1500)	J684 Ventura ADL E400 PS

	J796 PS CABLE ROLLER ASSY (A841+B471)	J796 Ventura
	J995 CABLE LOOM PS SCANIA	J995 Ventura POLISH SCANIA OMNICITY DD
	K437 ROLLER ASSY RODLESS CYL (D134+D136)	K437 Ventura
	K581 CONNECTING ROD END M8	K581 Ventura WRIGHTBUS PS2
	K585, K586, K587 REPAIR KIT – VS PKR RODLESS CYLINDERS 32x795, 32x895, 32x730 I486/F922, E820, F168	K585, K586, K587 Ventura
	K651 LINEAR BEARING 30mm KS30-B-PP	K651 Ventura WRIGHTBUS PS2
	K962-001 DOOR SEAL MIDDLE L=2200mm	K962-001 Ventura WRIGHTBUS PS2
	K962-002 DOOR SEAL LEFT L=2200mm	K962-002 Ventura WRIGHTBUS PS2

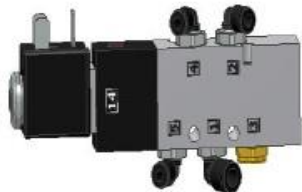
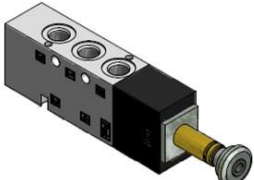
	K962-003 DOOR SEAL RIGHT L=2200mm	K962-003 <i>Ventura</i> WRIGHTBUS PS2
	K992 Ø30 PS ROLLER ASSY OD=30x15. ID=10 (A841+B442)	K992 <i>Ventura</i>
	L062 EMERGENCY BUTTON EXTERIOR COVER	L062 <i>Ventura</i> BLUEBIRD SD RS, NBFL RS
	L063 EMERGENCY BUTTON INTERIOR COVER	L063 <i>Ventura</i> BLUEBIRD SD RS
	L312 PS2/RS MICROSWITCH # FIXING SCREW = I513 # TAPPING PLATE = J597	L312 <i>Ventura</i> BLUEBIRD/MELLOR RS & WRIGHTBUS NBFL PLAT, NBFL PS, NBFL RS
	L317 CABLE LOOM ADAPTER 2-12 POLE	L317 <i>Ventura</i> WRIGHTBUS PS2, NBFL RS
	L538 PLATE PLAIN BEARING	L538 <i>Ventura</i>

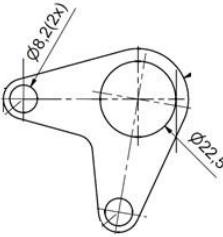
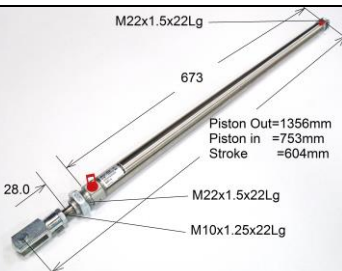
	L876 EMERGENCY BUTTON	L876 <i>Ventura</i> BLUEBIRD SD RS
	M001	M001 <i>Ventura</i>
	M049 MICROSWITCH BRACKET	M049 <i>Ventura</i>
	M466 5/2 BI-STABLE 12VDC	M466 <i>Ventura</i> BLUEBIRD SD RS
	M468 CABLE LOOM	M468 <i>Ventura</i> BLUEBIRD SD RS
	M491 PUSHBUTTON + RUBBER SEAL	M491 <i>Ventura</i> BLUEBIRD SD RS
	M492 COVER OUTSIDE BUTTON (GREEN)	M492 <i>Ventura</i> BLUEBIRD SD RS

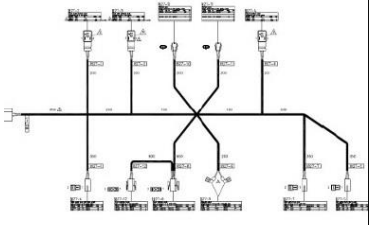
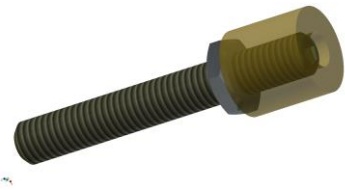
	M494 PUSHBUTTON GREEN ELECTRIC	M494 <i>Ventura</i> BLUEBIRD SD RS
	M756 CONNECTOR BRACKET 22 POLE	M756 <i>Ventura</i> WRIGHTBUS PS2
	M691 ELBOW CONNECTOR 6-1/4 (LATER RODLESS CYLINDERS) * UPGRADE TO PART G915	M691 <i>Ventura</i>
	M971 (M979) EMERGENCY OPEN BUTTON N/C PNEUMATIC/ELECTRIC	M971 <i>Ventura</i> WRIGHTBUS NBFL DD, NBFL IG4, NBFL IG4 PLAT, NBFL PS
	M979 BUTTON EMERGENCY YELLOW PNEU NC + ELEC	M979 <i>Ventura</i> WRIGHTBUS NBFL DD, NBFL IG4, NBFL IG4 PLAT, NBFL PS
	N427 PIVOT POINT	N427 <i>Ventura</i> WRIGHTBUS PS2

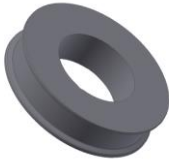
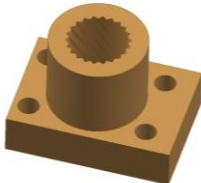

	N670 SPIRAL CABLE D-40 14 COILS IG4 ASSY	N670 <i>Ventura</i> WRIGHTBUS GEMINI DD PS2.1, NBFL DD IG4 PLAT, STREETLITE, NBFL PS
	O101 BEARING BUSH POTENTIOMETER	O101 <i>Ventura</i>
	O102 POTENTIOMETER BUSH IG4	O102 <i>Ventura</i>
	O500 SPIRAL CABLE ASSY	O500 <i>Ventura</i> WRIGHTBUS + ADL PS2 (Later Models)
	O574 CABLE 1234mm ASSY	O574 <i>Ventura</i> WRIGHTBUS NBFL DD, NBFL PS
	O578 CYLINDER 32 x 815 RODLESS SUB	O578 <i>Ventura</i> WRIGHTBUS NBFL DD, NBFL PS
	O697 SOFT STOP ASSY	O697 <i>Ventura</i>

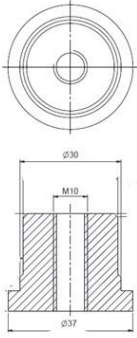
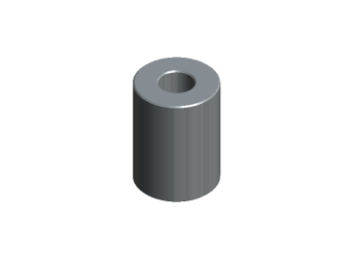
 O699	O699 SOFT STOPPER ASSY	O699 <i>Ventura</i>
	P532 ELBOW CONNECTOR DIA 6 G1-8	P532 <i>Ventura</i> WRIGHTBUS PS2
	P535 SOLENOID 24VDC DIN B U77	P535 <i>Ventura</i> WRIGHTBUS PS2
	P563 (K005/K006) FILTER REGULATOR ASSY 6mm CONNECTIONS	P563 <i>Ventura</i> PNE303UG-07 <i>TDS</i> WRIGHTBUS NBFL DD, OPTARE SD VERSA, BLUEBIRD SD RS
 P985-1	P985 5/2 VALVE MONO-STABLE (>2013) REPLACES E469 NEEDS CONV KIT S061	P985 <i>Ventura</i> WRIGHTBUS ECLIPSE SD PS + GEMINI DD PS + STREETCAR PS, ADL E300 SD IG3 + E400 DD IG3/PS, EAST LANCS SD IG3/PS, MCV SD EVOLUTION PS
 Q003	Q003 5/2 VALVE MONO-STABLE KM/H INTERLOCK (>2013) REPLACING E470 NEEDS CONV KIT S061	Q003 <i>Ventura</i> WRIGHTBUS NBFL DD IG4 PLAT, NBFL PS, NBFL RS
	Q066 FILTER REGULATOR ASSY 8mm CONNECTIONS	Q066 <i>Ventura</i> PNE303UG-08 <i>TDS</i> ADL & OPTARE PS

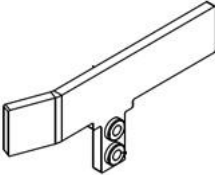
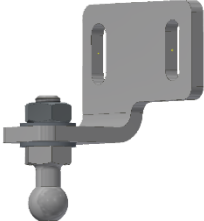
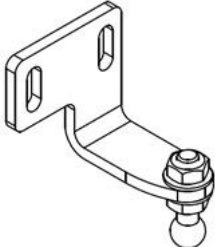
	Q160 FILTER REGULATOR ASSY (NO FITTINGS) # PART OF Q066	Q160 <i>Ventura</i> PNE303U-01 <i>TDS</i> ADL & OPTARE PS
	Q149-KIT (P661) BUTTON CAPTRON 1 SIDE GREY WC # REPLACES I994	P661 <i>Ventura</i> MCV SD EVOLUTION PS
	Q330 5/2 VALVE 24V DC ASSY (2x4mm & 2x 6mm elbow)	Q330 <i>Ventura</i> CAETANO IG4 ADL E200 EV
	Q632 Elec Actuator 32x1065	Q632 <i>Ventura</i>
	R010 5/2 VALVE 24 VDC, EXT PILOT	R010 <i>Ventura</i>
	R643 CYLINDER 32-RS1100 LH	R643 <i>Ventura</i> BLUEBIRD SD RS
	S061 RETRO FIXING KIT FOR ADDING VALVE Q003 (P985) TO OR REPLACING E470 (E469)	S061 <i>Ventura</i>

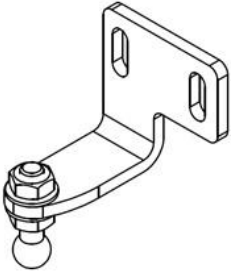
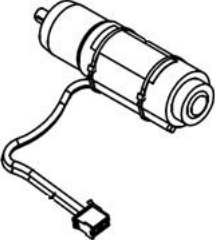
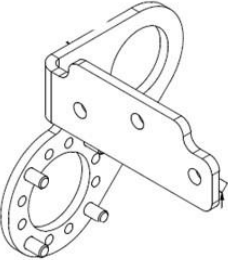
	S878 CONNECTING ROD M8	S878 <i>Ventura</i> WRIGHTBUS PS2
	S882 CYLINDER 27M2A032A0105	S882 <i>Ventura</i> WRIGHTBUS PS2
	S930 CYLINDER BRACKET	S930 <i>Ventura</i>
	S933 SIDE PLATE L	S933 <i>Ventura</i> WRIGHTBUS PS2
	S950 Cable Bracket	S950 <i>Ventura</i>
	S957 Ø25x604 STROKE PS2 CYLINDER	S957 <i>Ventura</i>
	T129 DOOR CONTROLLER	T129 <i>Ventura</i>

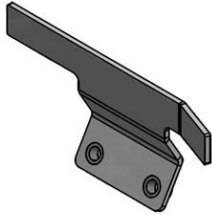
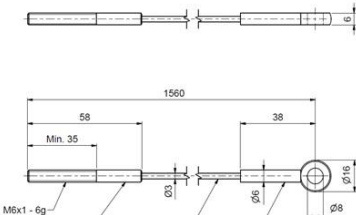
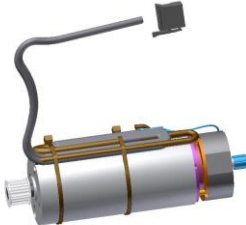
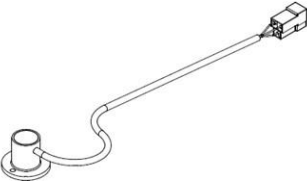
	T500 CONNECTION ROD M8	T500 <i>Ventura</i> WRIGHTBUS PS2
	T778 GUIDE SHAFT END STOP	T778 <i>Ventura</i>
	T896 CONNECTING ROD M8x50 ASSY	T896 <i>Ventura</i> WRIGHTBUS NBFL DD
	U839 CABLE LOOM ADAPTER PS	U839 <i>Ventura</i> WRIGHTBUS PS2
	VA0134 OVERCENTRE SOFT STOPPER	VA0134 <i>Ventura</i>
	VA0203 LH END PIECE	VA0203 <i>Ventura</i>
	VA0204 RH END PIECE	VA0204 <i>Ventura</i>

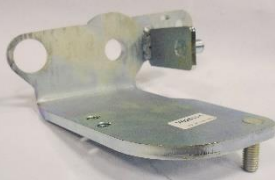
	VA0633 Roller Guiding Shaft	VA0633 <i>Ventura</i>
	VA0634 Bearing Bush GSM	VA0634 <i>Ventura</i>
	VA0739 PS2 SPIRAL CABLE ASSY	VA0571 <i>Ventura</i> WRIGHTBUS & ADL PS2
	VA0772 Guide Ring Spiral Cable	VA0772 <i>Ventura</i>
	VA0912 PS ROLLER BRACKET # USED WITH ROLLER E529 # ROLLER BOLT = VA0557	VA0912 <i>Ventura</i>
	VA0946 SHAFT COUPLER 10-12 (PSE)	VA0946 <i>Ventura</i> ADL E200 EV
	VA0948 SPINDLE NUT	VA0948 <i>Ventura</i>
	VA1035 PS2 CABLE 1425	VA1035 <i>Ventura</i>

	VA1108 SPRING BUSH	VA1108 <i>Ventura</i>
	VA1109 MOUNTING PLATE SPINDLE NUT	VA1109 <i>Ventura</i>
	VA1111 Ø10 SPRING PIN	VA1111 <i>Ventura</i>
	VA1280 Ø25x625 STROKE PS2 CYLINDER ASSY 1200	VA1280 <i>Ventura</i> ADL E200 EV & MMC
	VA1283 Ø25x700 STROKE PS2 CYLINDER ASSY 1350	VA1283 <i>Ventura</i> MCV EVOSETI
	VA1588 SWITCH CAM SHAFT 12mm # SECURING SCREW = A210	VA1588 <i>Ventura</i> WB GEMINI DD PS2
	VA1617 Bush 12-05 L=16	VA1617 <i>Ventura</i>

	VA2123 DOORSHAFT VRAKCET LH ASSY	VA2123 <i>Ventura</i>
	VA2124 DOORSHAFT VRAKCET RH ASSY	VA2124 <i>Ventura</i>
	VA2778 Bearing Bush GFM	VA2778 <i>Ventura</i>
	VA3038 SWITCH PLATE ASSY	VA3038 <i>Ventura</i>
	VA3191 DOORSHAFT BRKT LH ASSY 28MM	VA3191 <i>Ventura</i>
	VA3192 DOORSHAFT BRKT RH ASSY 28MM	VA3192 <i>Ventura</i>
	VA3289 DOORSHAFT ADJ BRKT LH ASSY	VA3289 <i>Ventura</i>

	VA3290 DOORSHAFT ADJ BRKT RH ASSY	VA3290 <i>Ventura</i>
	VA3594 PSE DRIVE UNIT PERFORMAX 52.1 24V	VA3594 <i>Ventura</i> ADL E200 EV
	VA3874 PSE Motor Bracket	VA3874 <i>Ventura</i>
	VA6346 12V LATCHING RELAY	VA6346 <i>Ventura</i> MELLOR ORION RS
	VA7226 DOOR CONTROLLER – ADL IGE VA7228 DOOR CONTROLLER – ADL PSE	VA7226 <i>Ventura</i> VA7228 <i>Ventura</i> ADL E200 EV
	VA7260 PS CYLINDER ASSY 1500	VA260 <i>Ventura</i>
	VA7269 ELBOW CONNECTOR 6-1/4 (LATEST RODLESS CYLINDERS) * SEP16 >REPLACEMENT FOR M691/G915	VA7269 <i>Ventura</i>

	VA8529 PLATE SPINDLE NUT	VA8529 <i>Ventura</i>
	VA8532 PS2 SWITCH CAM BRACKET	VA8532 <i>Ventura</i>
	VA8634 PS2 CABLE 1560	VA8634 <i>Ventura</i> WB DD PS2, ADL E200EV
	VA8946 Ø25x660 PS2 CYLINDER ASSY 1270	VA8946 <i>Ventura</i>
	VB2107 ELECTROMOTOR 24VDC # REPLACES S996	VB2107 <i>Ventura</i> ADL E200 EV PSE
	VB2226 BUTTON COVER GREY INTERNAL	VB2226 <i>Ventura</i>
	VB2339 POTENTIOMETER 125 DEG	VB2671 <i>Ventura</i>

	VB2533 LH END PIECE	VB2533 <i>Ventura</i>
	VB2568 RH END PIECE	VB2568 <i>Ventura</i>
	VC0950 OBSTRUCT TEST TOOL	VC0950 <i>Ventura</i>
	VC1128 POTENTIOMETER	VC1128 <i>Ventura</i>