Last Updated: 05/03/19

TDS PRODUCT IMAGE SHEET >

VENTURA – INWARD GLIDER – DOOR LEAVES & SHAFTS

Image	TDS Part Number & Description	OE Part Numbers (WHERE FITTED)
	A249 M8 DIN125A WASHER ZP	**A249** *Ventura*
	B253 Ø16 NYLON BEARING BUSH ID=16x22. OD=22 F= Ø30x2.5	**B253** *Ventura* NBFL IG4
	B585 PIVOT BOLT M6	**B585** *Ventura* WRIGHTBUS STREETLITE IGE
	B768 END RUBBER PROFILE IG	**B768** *Ventura*
	C130 TAPPING STRIP 2xM8	**C130** *Ventura*

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

Last Updated: 05/03/19

	C449-100 **EDGE PROTECTION RUBBER**	**C449-100** *Ventura* **WRIGHTBUS IG4**
	C260 **POTENTIOMETER**	**C260** *Ventura* **POLISH SCANIA OMNICITY DD IG3 < 2007**
	C272 **HANDRAIL NYLON CAP**	**C272** *Ventura*
	C456 **Screw Din 916 M8x10 ZP**	**C456** *Ventura*
	C670 **GLASS SEALING TAPE 3x9 BLACK**	**C670** *Ventura*
	D112 **BEARING BLOCK FLCTEY 25 (IG3 DOORSHAFTS)**	**D112** *Ventura*
	D331-### **SENSITIVE EDGE STRIPS** **# SEE CATEGORY ELECTRICAL SHEET FOR VEHICLE SPECIFIC SIZES & P/Ns**	**D331-###** *Ventura*

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

	D538 **THREAD BLOCK 2xM12**	**D538** *Ventura*
	E096 **CATCH PIN RIGHT (PS)**	**E096** *Ventura* **EAST LANCS OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3**
	E097 **CATCH PIN LEFT (PS)**	**E097** *Ventura* **EAST LANCS OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3**
	E818 **BOTTOM SUPPORT ASSY LEFT (PS)**	**E818** *Ventura* **WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3, POLISH SCANIA OMNICITY DD IG3**
	F010 **SPACER 19-15 L=5**	**F010** *Ventura* **WRIGHTBUS IG4**
	F302 **BOTTOM SUPPORT ASSY RIGHT (PS)**	**F302** *Ventura* **WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3, POLISH SCANIA OMNICITY DD IG3**
	F534 **BOLT M8x18 ZP**	**F534** *Ventura*

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk

Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

	F597 **DOORSEAL MIDDLE (IG)** **2200mm**	**F597** *Ventura*
	F629 **FLAP BOTTOM RUBBER (IG)**	**F629** *Ventura*
	F629-002 **FLAP RUBBER L=600**	**F629-002** *Ventura* **WRIGHTBUS STREETLITE IGE**
	F640 **FLANGED BEARING BUSH** **Ø8x10 OD=10**	**F640** *Ventura*
	F681 **Ø14 PLAIN SPH BEARING** **DIN648 GE14** **ID=14. OD=28x13.35**	**F681** *Ventura* **DOORSHAFT TOP ARM BEARING** **NBFL IG4**
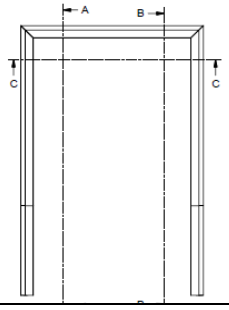	**F858** **PORTAL RUBBER U-FRAME F617** **OMNI**	**F858** *Ventura* **POLISH SCANIA OMNICITY DD IG3**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk

Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

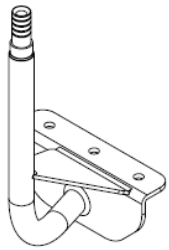	**F864** **GUIDING BRACKET IG3 LH OMNI**	**F864** *Ventura* **POLISH SCANIA OMNICITY DD IG3**
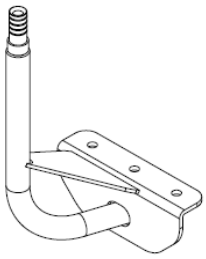	**F865** **GUIDING BRACKET IG3 RH OMNI**	**F865** *Ventura* **POLISH SCANIA OMNICITY DD IG3**
	G202 **RUBBER ENDSTOP**	**G202** *Ventura* **NBFL RS**
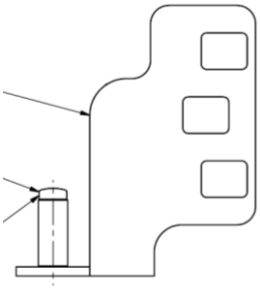	**G257** **DOOR SHAFT SUPPORT ASSY LH IG3**	**G257** *Ventura* **POLISH SCANIA OMNICITY DD IG3**
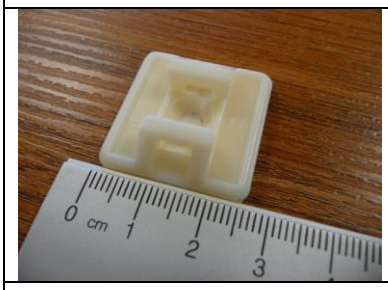	**G260** **CABLE CLAMP**	**G260** *Ventura*
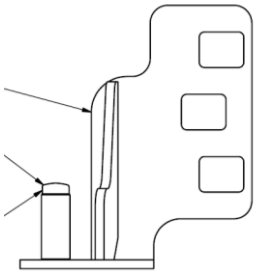	**G298** **DOOR SHAFT SUPPORT ASSY RH IG3**	**G298** *Ventura* **POLISH SCANIA OMNICITY DD IG3**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk

Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

	G379 **LOWER IG.3 SHAFT BRKT ASSY LH** **(Bush if required=H074)**	**G379** *Ventura*
	G446 **FLAP TOP RUBBER (IG)**	**G446** *Ventura*
	G613 **BLIND RIVET NUT**	**G613** *Ventura*
	G756 **RETAINING CLIP**	**G756** *Ventura*
	G932 **HANDRAIL BOLT**	**G932** *Ventura*
	G951 **PIVOT BOLT M10**	**G951** *Ventura*
	G955 **PIVOT PLATE**	**G955** *Ventura*

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

	G967 **SUPPORT PLATE**	**G967** *Ventura*
	G968 **BUSH DIA 16-10 L=14**	**G968** *Ventura* **WRIGHTBUS IG4**
	G989 **PIVOT PIN**	**G989** *Ventura*
	H047 **SHAFT FOR IGP HEIGHT ADJUST**	**H047** *Ventura*
	H072 **IG3 SHAFT BEARING BUSH** **IB=21. OD=29.25-30** **LG=30. F= Ø 38x5**	**H072** *Ventura* **WRIGHTBUS IG3 DOORSHAFTS, NBFL IG4 PLAT**
	H074 **Ø12.4 NYLON BEARING BUSH** **ID=12.4 OD=16.25** **LG=10, F= Ø22x2.0**	**H074** *Ventura* **(DOORSHAFT BEARING BUSH IG3 LOWER BRACKET)**
	H404 **FLAP FRAME HIGH WELD ASSY** **1290 LEFT**	**H404** *Ventura*

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk

Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

	H437 **DOORSHAFT SUPPORT ASSY LH WRIGHT IG3**	**H437** *Ventura* **WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3**
	H446-001 **PORTAL SEAL TOP – 1600L (I032, J165 PORTAL ASSY)**	**H446-001** *Ventura* **(ADL E400 DD IG3, POLISH SCANIA OMNICITY IG3 JAN08>)**
	H452-001 **PORTAL SEAL SIDE – 2200L (I032,J165,K092,K093,K526 PORTAL ASSYS)**	**H452-001** *Ventura* **(ADL E400 DD IG3, WRIGHTBUS GEMINI DD IG4, EAST LANCS SD IG3 + OLYMPUS DD IG3, WRIGHTBUS NBFL DD IG4, POLISH SCANIA OMNICITY IG3 JAN08>) NFBL IG4**
	H460 **FLAP FRAME HIGH WELD ASSY 1290 RIGHT**	**H460** *Ventura*
	H465 **DOORSHAFT SUPPORT ASSY RH WRIGHT IG3**	**H465** *Ventura* **WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3**
	H469 **SHAFT IG3 CYLINDER Ø12**	**H469** *Ventura*

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

	H470 **PRECISION BOLT LOW**	**H470** *Ventura*
	H502 **GUIDE BRACKET LEFT IG**	**H502** *Ventura* **WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E300 SD IG3, EAST LANCS SD IG3**
	H506 **PORTAL RUBBER U PROFILE 1290**	**H506** *Ventura* **WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, EAST LANCS SD IG3**
	H508 **GUIDE BRACKET RIGHT IG**	**H508** *Ventura* **WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E300 SD IG3, EAST LANCS SD IG3**
	H671 **SCREW M8x25 TORX ZP**	**H671** *Ventura*
	H699 **SCREW M8x16 TORX ZP**	**H699** *Ventura*

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

	H706 **BUSH 10-6,5 L=12**	**H706** *Ventura*
	H714 **SLIDE PLATE POM LEFT**	**H714** *Ventura* **WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E300 SD IG3, EAST LANCS SD IG3 + OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3 , TEMSA SD IG4**
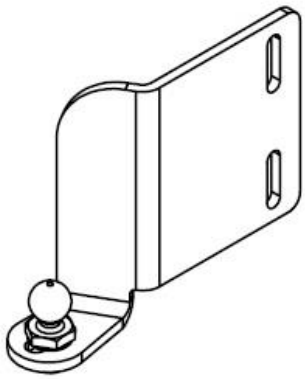	**H776** **BOTTOM SUPPORT LH 135**	**H776** *Ventura*
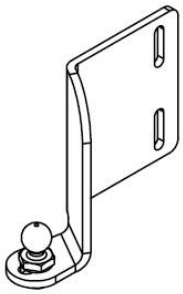	**H777** **BOTTOM SUPPORT RH 135**	**H777** *Ventura*
	H793 **SLIDE PLATE POM RIGHT**	**H793** *Ventura* **WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E300 SD IG3, EAST LANCS SD IG3 + OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3 , TEMSA SD IG4**
	H901 **HANDRAIL PLASTIC SPACER**	**H901** *Ventura* **NBFL IG4, NBFL IG4 PLAT**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk

Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

Last Updated: 05/03/19

	H987 **DOORSHAFT SUPPORT ASY LH IG3**	**H987** *Ventura* **WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3 + OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3**
	H988 **DOORSHAFT SUPPORT ASSY RH IG3**	**H988** *Ventura* **WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG3, ADL E400 DD IG3, EAST LANCS SD IG3 + OLYMPUS DD IG3, POLISH SCANIA OMNICITY DD IG3**
	I032 **PORTAL RUBBER U PROFILE 1350**	**I032** *Ventura* **ADL E400 DD IG3**
	I162 **IG4 SHAFT BEARING BUSH** **IB=21. OD=32-33** **LG=30. F=Ø38x5**	**I162** *Ventura* **ADL IG3 DOORSHAFTS** **ALL IG4 DOORSHAFTS (2010>)**
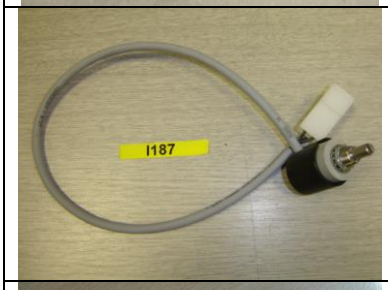	**I187** **POTENTIOMETER 125 DEG WITH CABLE ASSY**	**I187** *Ventura* **POLISH SCANIA OMNICITY IG3 2008 >**
	I220 **PIVOT POINT BOLT SHORT IG3**	**I220** *Ventura*

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

	I221 **RING**	**I221** *Ventura*
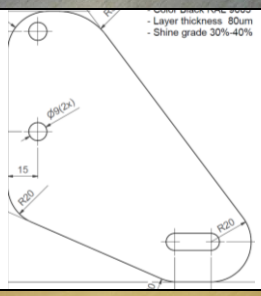	**I291** **DOOR GUIDING BRACKET**	**I291** *Ventura* **EAST LANCS OLYMPUS DD IG3**
	I357 **DOORSHAFT SUPPORT ASSY LH IG3 100**	**I357** *Ventura* **ADL E200 SD IG4 + E300 SD IG3/IG4 + E400 DD IG3/IG4, TEMSA SD IG4**
	I358 **DOORSHAFT SUPPORT ASSY RH IG3 100**	**I358** *Ventura* **ADL E200 SD IG4 + E300 SD IG3/IG4 + E400 DD IG3/IG4, TEMSA SD IG4**
	I461 **GUIDING BRACKET**	**I461** *Ventura* **ADL E400 DD IG3**
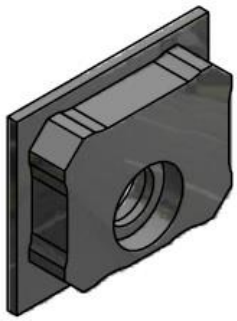	**I571** **PLUG**	**I571** *Ventura*

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

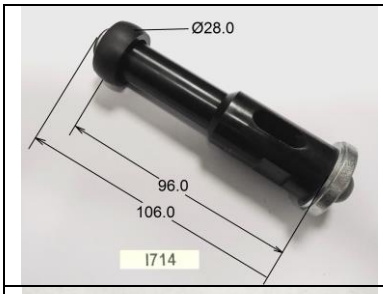	**I714** **GUIDING SHAFT ASSY** **106 x Ø28 with *CABLE ENTRY*** **# ROLLER ASSY = J301**	**I714** *Ventura* **EAST LANCS SD/DD IG3 , MCV SD IG4, ADL E200 SD IG4 + E400 DD IG4 (SENS EDGE CABLE ENTRY ONLY)**
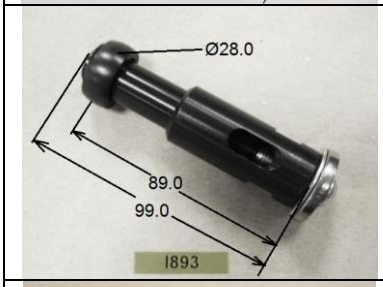	**I893** **GUIDING SHAFT ASSY** **99 x Ø28 with *CABLE ENTRY*** **# ROLLER ASSY = J301**	**I893** *Ventura* **ADL E400 DD IG3, POLISH SCANIA OMNICITY DD IG3**
	I944 **GUIDING BRACKET IG**	**I944** *Ventura* **TEMSA SD IG4**
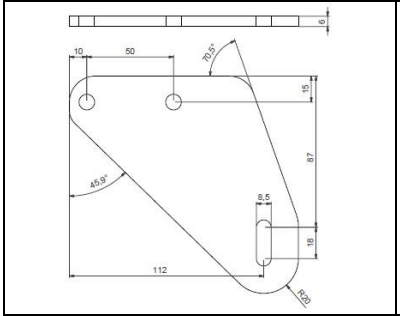	**J964** **GUIDING BRACKET FLAT**	**J964** *Ventura* **ADL E200 IG3**
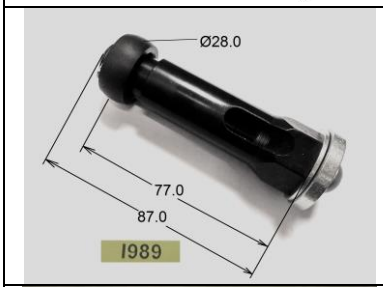	**I989** **GUIDING SHAFT ASSY** **78 x Ø28 with *CABLE ENTRY*** **# ROLLER ASSY = J301**	**I989** *Ventura* **WRIGHTBUS DD DUBLIN + GEMINI DD IG4 + NBFL DD IG4/IG4 PLAT, ADL E300 SD IG3 + DD E400+500 IG3 DUBLIN, TEMSA SD IG4 (SENS EDGE CABLE ENTRY)**
	I995 **SLIDE PLATE LEFT EXTENDED**	**I995** *Ventura* **WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + STREETLITE SD IG4 + NBFL IG4/IG4 PLAT, ADL E300 SD IG4 + E400 DD IG4, MCV SD 112/124RLE IG4**
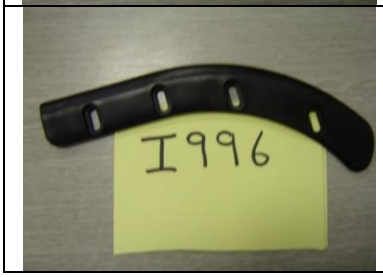	**I996** **SLIDE PLATE RIGHT EXTENDED**	**I996** *Ventura* **WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + STREETLITE SD IG4 + NBFL IG4/IG4 PLAT, ADL E300 SD IG4 + E400 DD IG4, MCV SD 112/124RLE IG4**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk

Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

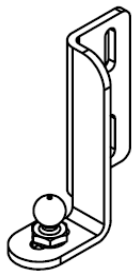	**J122** **DOOR SHAFT SUPPORT LEFT**	**J122** *Ventura* **MCV SD 112/124RLE IG4**
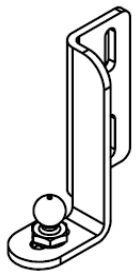	**J123** **DOOR SHAFT SUPPORT RIGHT**	**J123** *Ventura* **MCV SD 112/124RLE IG4**
	J163-001 **PORTAL SEAL SIDE – 2350L** **(I694,J205,J462,J469 PORTAL ASSYS)**	**J163-001** *Ventura* **(ADL E400 DD IG3, ADL E300 SD IG4 + E400 DD IG4, ADL E200 SD IG4)**
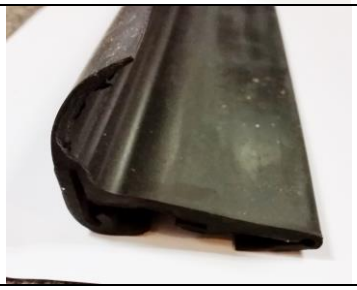	**J164-001** **PORTAL SEAL TOP – 1600L** **(I694,J205,J462,J469 PORTAL ASSYS)**	**J164-001** *Ventura* **(ADL E400 DD IG3, ADL E300 SD IG4 + E400 DD IG4, ADL E200 SD IG4)**
	J199 **COVER CAP**	**J199** *Ventura*
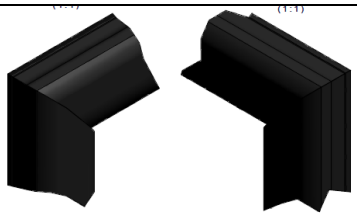	**J205** **PORTAL RUBBER U PROFILE 1350**	**J205** *Ventura* **ADL E300 SD IG4 + E400 DD IG4**
	J301 **28mm IG GUIDE ROLLER ASSY (E503+504)**	**J301** *Ventura* **(ALL VS GUIDING SHAFT ASSYS)**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk

Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

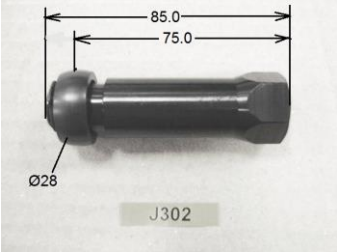	**J302** **GUIDE SHAFT/ROLLER** **85 x Ø28** (SEE ASSY L067) **# ROLLER ASSY = J301**	**J302** *Ventura* **WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG4, ADL E400 DD IG3, EAST LANCS OLYMPUS DD IG3, MCV SD 112/124RLE IG4** **(NO CABLE ENTRANCE)**
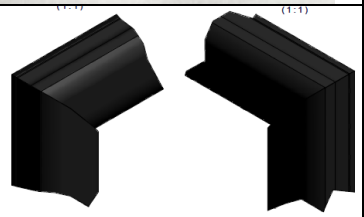	**J462** **PORTAL RUBBER U FRAME**	**J462** *Ventura* **ADL E200 SD IG4**
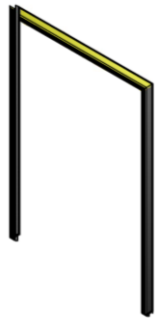	**J469** **PORTAL RUBBER U FRAME ADL**	**J469** *Ventura* **ADL E300 SD IG3/IG4 + E400 DD IG4**
	K097-001 **PORTAL SEAL TOP – 1600L** **(K092,K093,K526 PORTAL ASSYS)**	**J163-001** *Ventura* **WRIGHTBUS GEMINI DD IG4, EAST LANCS SD IG3 + OLYMPUS DD IG3**
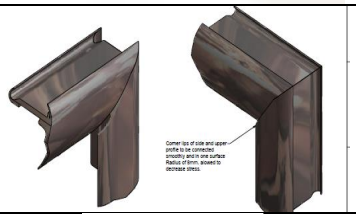	**K092** **PORTAL RUBBER U PROFILE 1290**	**K092** *Ventura* **WRIGHTBUS GEMINI DD IG4, EAST LANCS SD IG3 + OLYMPUS DD IG3, WRIGHTBUS NBFL DD IG4**
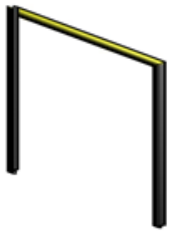	**K093** (J165) **PORTAL RUBBER U PROFILE 1200**	**K093** *Ventura* **POLISH SCANIA OMNICITY (JAN08 >)**
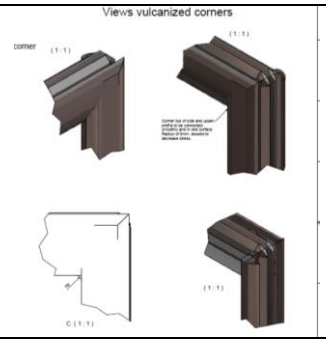	**K095** **PORTAL RUBBER U PROFILE 1250** **(HESS)**	**K095** *Ventura* **WRIGHTBUS NBFL DD IG4**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk

Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

Last Updated: 05/03/19

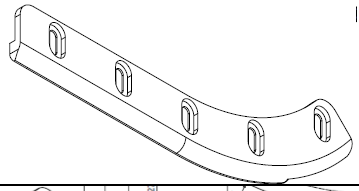	**K522** **SLIDE PLATE LEFT**	**K522** *Ventura* **MCV SD 112/124RLE IG4**
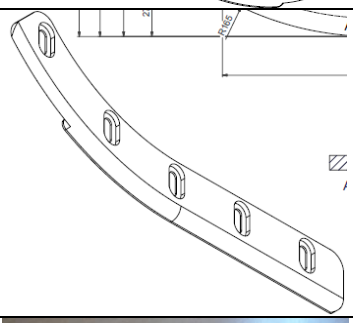	**K523** **SLIDE PLATE RIGHT**	**K523** *Ventura* **MCV SD 112/124RLE IG4**
	K745 **FLAP TORSION SPRING**	**K745** *Ventura* **IG3 ACTIVE FLAPS**
	L067 **GUIDE ROLLER ASSY** 85 x Ø28 **# ROLLER ASSY = J301**	**L067** *Ventura* **WRIGHTBUS ECLIPSE SD IG3 + GEMINI DD IG4, ADL E400 DD IG3, EAST LANCS OLYMPUS DD IG3, MCV SD 112/124RLE IG4** **(NO CABLE ENTRANCE)**
	L190 **CONNECTOR 2-POLE RECEPTACLE**	**L190** *Ventura* **WRIGHTBUS STREETLITE IGE, NBFL IG4, NBFL RS**
	L285 **CONNECTOR 2-POLE MALE**	**L285** *Ventura* **WRIGHTBUS IG4**
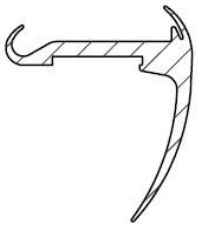	**L336-001** **PORTAL SEAL TOP – 1600L** **(L781 PORTAL SEAL ASSY)**	**L336-001** *Ventura* **MCV SD 112/124RLE/DD EVOSETI IG4, TEMSA SD IG4**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

Last Updated: 05/03/19

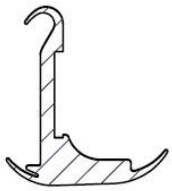	**L337-001** **PORTAL SEAL SIDE – 2500L** **(L781 PORTAL SEAL ASSY)**	**L337-001** *Ventura* **MCV SD 112/124RLE/DD EVOSETI IG4, TEMSA SD IG4**
	L737 **IG4 FLAP FRAME SIDE PLATE**	**L737** *Ventura*
	L744 **BEARING POINT** **(IG4 ACTIVE FLAPS)**	**L744** *Ventura* **NBFL IG4**
	L745 **Ø8 BEARING BUSH** **ID=8.25x12. OD=9.12** **F=13x0.42**	**L745** *Ventura* **(ALL IG4 DOOR FLAPS)**
	L778 **LOWER IG.4 SHAFT (FLAP) BRKT** **(Bush if required=L782)**	**L778** *Ventura*
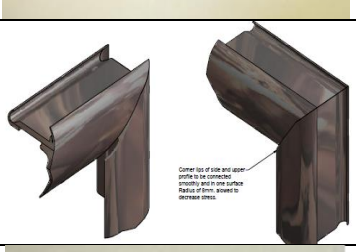	**L781** **PORTAL RUBBER U-FRAME 1350** **# PROFILES SIDE = L337-001,** **TOP = L336-001)**	**L781** *Ventura* **MCV SD 112/124RLE/DD EVOSETI IG4, TEMSA SD IG4**
	L782 **Ø12.35 NYLON BEARING BUSH** **MFM** **ID=12.35x8 OD=18.0** **F= Ø23.75x2.9**	**L782** *Ventura*

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

Last Updated: 05/03/19

	L846-0## LH FLAP ASSY IG4 **L865-0##** RH FLAP ASSY IG4	**L846-0##** *Ventura* **L865-0##** *Ventura* # = LENGTH CODE, SPECIFIC TO EACH VEHICLE – ADL,MCV,WRIGHTBUS
	L886 PIVOT POINT BOLT	**L886** *Ventura*
	L794 FLAP TORSION SPRING (IG4 ACTIVE FLAPS) UPGRADED > SEE S555	**L794** *Ventura* EARLIER IG4 ACTIVE FLAPS 2010-13
	L805 BEARING LOCK FLCTEY (IG4 DOORSHAFTS)	**L805** *Ventura*
	L846-001 (530mm) **L846-002** (560mm) **L846-004** (484mm) IG4 FLAP ASSEMBLY LH # = LENGTH CODE, SPECIFIC TO EACH VEHICLE > ADL,MCV,WRIGHTBUS	**L846-001** *Ventura* **L846-002** *Ventura* **L846-004** *Ventura* ALL IG4 DOORS
	L865-001 (530mm) **L865-002** (560mm) **L865-004** (484mm) IG4 FLAP ASSEMBLY RH # = LENGTH CODE, SPECIFIC TO EACH VEHICLE > ADL,MCV,WRIGHTBUS	**L846-001** *Ventura* **L846-002** *Ventura* **L846-004** *Ventura* ALL IG4 DOORS

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

	M195 **BUSH DIA20-16 L=25 POM**	**M195** *Ventura* **WRIGHTBUS IG4**
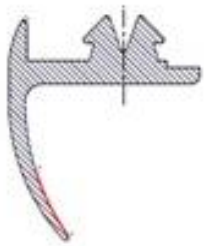	**M298** **PORTAL SEAL IG SIDE R=2200**	**M298** *Ventura*
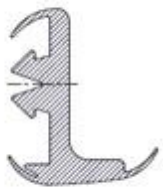	**M299** **PORTAL SEAL IG SIDE L=2200**	**M299** *Ventura*
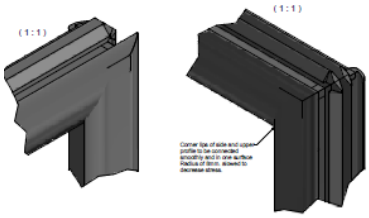	**M300** **PORTAL RUBBER U PROFILE 1290 (HESS) MIDI**	**M300** *Ventura* **WRIGHTBUS STREETLIE SD IG4**
	M414 **DOOR PROFILE L463 - PLUG FOR SENS EDGE WIRE ENTRY**	**M414** *Ventura* **WRIGHTBUS IG4**
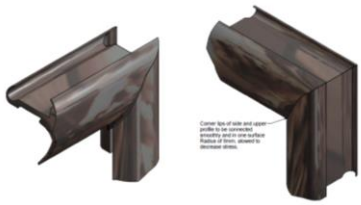	**M442** **PORTAL U-FRAME (L366/7) IG 1290**	**M442** *Ventura* **MCV SD 112/124RLE IG4**
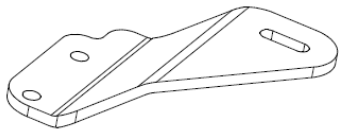	**M592** **GUIDING BRACKET LEFT**	**M592** *Ventura* **ADL E200 SD IG4 + E300 SD IG4 + E400 DD IG4**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk

Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

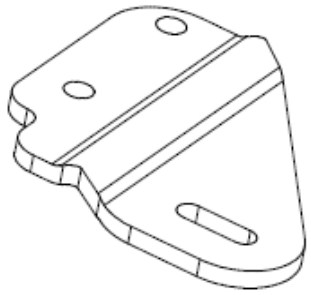	**M593** **GUIDING BRACKET RIGHT**	**M593** *Ventura* **ADL E200 SD IG4 + E300 SD IG4 + E400 DD IG4**
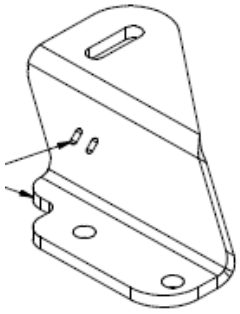	**M670** **GUIDING BRACKET LEFT**	**M670** *Ventura* **MCV SD 112/124RLE IG4**
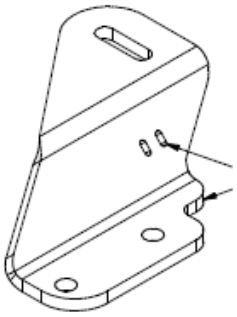	**M671** **GUIDING BRACKET RIGHT**	**M671** *Ventura* **MCV SD 112/124RLE IG4**
	M717 **GUIDING BRACKET**	**M717** *Ventura* **WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + NBFL DD IG4/IG4 PLAT**
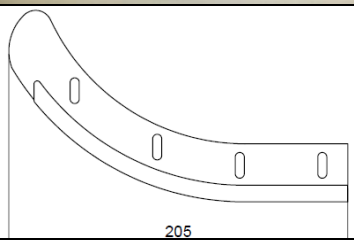	**M918** **SLIDE PLATE POM LEFT SMALL**	**M918** *Ventura* **ADL E200 SD IG4**
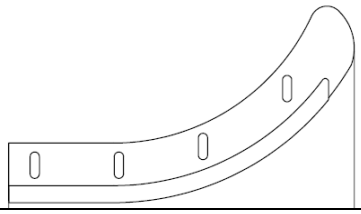	**M919** **SLIDE PLATE POM RIGHT SMALL**	**M919** *Ventura* **ADL E200 SD IG4**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

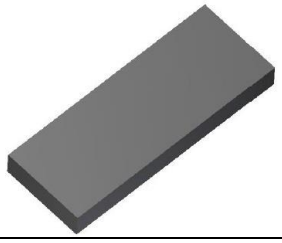	**N010** **RUBBER COVERPLATE**	**N010** *Ventura* **WRIGHTBUS STREETLITE IGE**
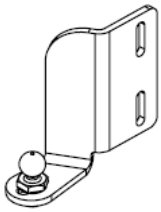	**N035** **DOOR SHAFT SUPPORT LEFT**	**N035** *Ventura* **MCV SD 112/124RLE IG4**
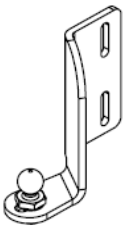	**N036** **DOOR SHAFT SUPPORT RIGHT**	**N036** *Ventura* **MCV SD 112/124RLE IG4**
	N058 **DOOR SHAFT SUPPORT ASSY**	**N058** *Ventura* **WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + STREETLITE SD IG4 + NBFL DD IG4**
	N059 **BOTTOM SUPPORT R 90 (TOGGLE NUT)**	**N059** *Ventura* **WRIGHTBUS ECLIPSE SD IG4 + GEMINI DD IG4 + STREETLITE SD IG4 + NBFL DD IG4**
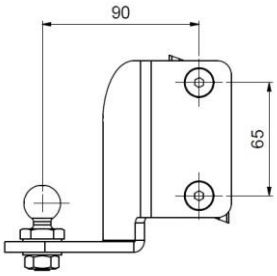	**N881** **BOTTOM SUPPORT LH ASSY 90**	**N881** *Ventura* **ADL E200/E400 IG4**
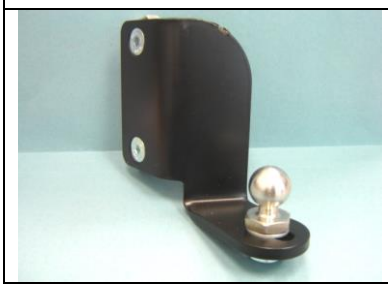	**N882** **BOTTOM SUPPORT RH ASSY 90**	**N882** *Ventura* **ADL E200/E400 IG4**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

Last Updated: 05/03/19

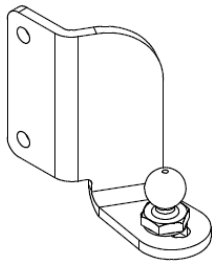	**O400** **BOTTOM SUPPORT R 77 (TOGGLE NUT)**	**O400** *Ventura* **WRIGHTBUS NBFL DD IG4/IG4 PLAT**
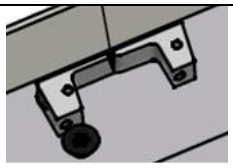	**O411** **TAPPING PLATE WEDGE**	**O411** *Ventura*
	O412 **PIVOT POINT BOTTOM NBFL**	**O412** *Ventura* **WRIGHTBUS NBFL IG4, NBFL IG4 PLAT**
	O413 **PIVOT POINT TOP WRIGHT NBFL**	**O413** *Ventura* **WRIGHTBUS NBFL IG4, NBFL IG4 PLAT**
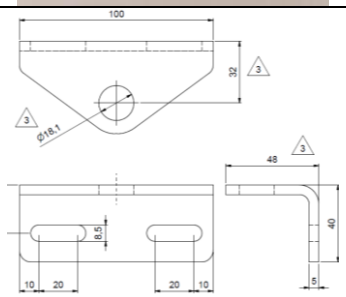	**O415** **BENDED DOOR SUPPORT TOP**	**O415** *Ventura* **WRIGHTBUS NBFL DD IG4 PLAT**
	O658 **CATCH PIN BENDED DOOR**	**O658** *Ventura*
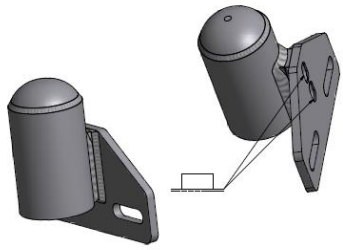	**O670** **BENDED DOOR SUPPORT BOTTOM**	**O670** *Ventura* **WRIGHTBUS NBFL DD IG4 PLAT**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

	O689 **M16x60(1.5) SOC HD SCREW (DOORSHAFT)**	**O689** *Ventura* **WRIGHTBUS NBFL IG4 PLAT**
	O708 **PORTAL SEAL IG4 WB NBFL DR5**	**O708** *Ventura*
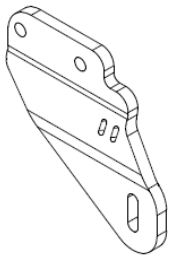	**P725** **GUIDING BRACKET L 72.5mm**	**P725** *Ventura* **WRIGHTBUS ECLIPSE SD IG4**
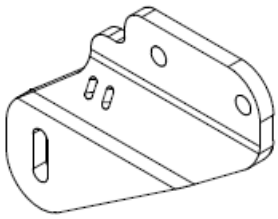	**P726** **GUIDING BRACKET R 72.5mm**	**P726** *Ventura* **WRIGHTBUS ECLIPSE SD IG4**
	P840 **TAPPING STRIP 2Xm5**	**P840** *Ventura* **WRIGHTBUS IG4**
	Q913 **POM BLOCK BENDED DOOR**	**G419** *Ventura* **WRIGHTBUS IG4**
	R042 **SEAL VA0155-L 1880** **R043** **SEAL VA0155-R 1880**	**R042** *Ventura* **WRIGHTBUS IG4** **R043** *Ventura* **WRIGHTBUS IG4**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk

Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

Last Updated: 05/03/19

	S555 **EXTENSION SPRING TR1310** < PREVIOUS VERSION **# REPLACES L794**	**S555** *Ventura* **IG4 ACTIVE FLAPS (2013 >)**
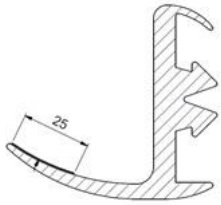	**U446-001** **PORTAL SEAL TOP L=1600**	**U446-001** *Ventura* **ADL E200 EV**
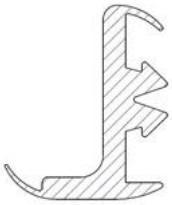	**U447-001** **PORTAL SEAL SIDE L=2200**	**U447-001** *Ventura* **ADL E200 EV**
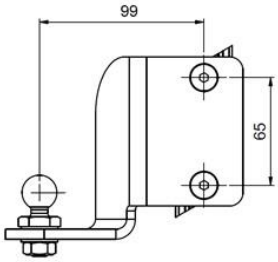	**U537** **IG BOTTOM SUPPORT L100** **TOGGLE NUTS**	**U537** *Ventura* **ADL E400 MMC**
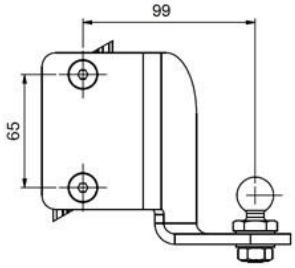	**U538** **IG BOTTOM SUPPORT R100** **TOGGLE NUTS**	**U538** *Ventura* **ADL E400 MMC**
 	VA0184 / VA0186 **SEAL VA0115-L 2200 / 2000** **VA0185 / VA0187** **SEAL VA0115-R 2200 / 2000**	**VA0184/VA0186** **VA0185/VA0187** *Ventura* **ADL E200, WRIGHTBUS STREETLITE** **IG4 LATER**
	VA0317 **GUIDING SHAFT ASS. 98 M10** **# ROLLER ASSY = J301**	**VA0317** *Ventura* **ADL E200 EV**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

Last Updated: 05/03/19

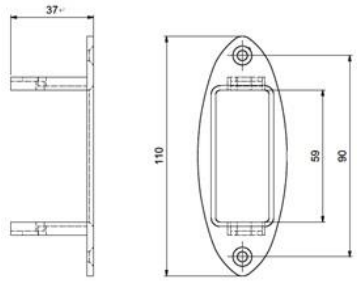	**VA0541** **SENSOR BRACKET**	**VA0541** *Ventura*
 	VA2287 **SEAL VA0115-L 1870_8K2** **VA2288** **SEAL VA0115-R 1870_8K2** **# ASSY INCL SENS EDGE**	**VA2287** *Ventura* **WRIGHTBUS STREETLITE IGE**
	VA3302 **FOOT SIDE SENS EDGE – IG4**	**VA3302** *Ventura* **WRIGHTBUS NBFL PLATFORM (NBFL IG4 PLAT)**
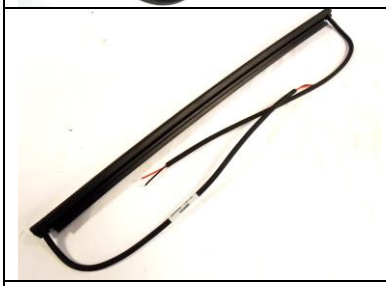	**VA3699** **FOOT SENS EDGE - IG4**	**VA3699** *Ventura* **WRIGHTBUS NBFL PLATFORM (NBFL IG4 PLAT)**
	VA3702 **COVER CENTRE - NBFL FOOT SENS**	**VA3702** *Ventura* **WRIGHTBUS NBFL**
	VA3703 **COVER LEFT - NBFL FOOT SENS**	**VA3703** *Ventura* **WRIGHTBUS NBFL**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.

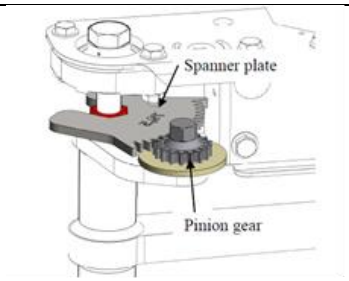	**VA3860** **DOORSHAFT TORQUE TOOL – IG4** **VA4146** **DOORSHAFT TORQUE TOOL – IG3**	**VA3860** *Ventura* **VA4146** *Ventura* **ALL INWARD GLIDERS** **IG4 – 2010 >** **IG3 – 2009 <**

T – 01787 473000, F – 01787 477040
E - sales@transportdoorsolutions.co.uk
Copyright © 2019 Transport Door Solutions Ltd. All Rights Reserved.